INSTRUCTION MANUAL AX90066-1001

TRAILPROVEN OFF-ROAD PERFORMANCE

SCX10[°] II DEADBOLT[°] 1/10th SCALE ELECTRIC 4WD - READY-TO-RUN



25 OKIQL

AXIAL BUMPER TO BUMPER ONE (1) YEAR LIMITED WARRANTY

Axial's warranty center, Hobby Services, guarantees this kit to be free from defects in materials and workmanship for one (1) year from the date of purchase. Axial will repair or replace, at the discretion of Hobby Services, Axial will repair or replace any incorrectly made part. Your receipt or invoice at the time of purchase is your proof of purchase and is required for Axial to honor any warranty. Axial reserves the right to change or modify this warranty without notice. This warranty does not cover damages due to normal wear and tear, users' failure to perform routine maintenance, user error of assembly or installation, modifications, misuse, crash damage or the addition of aftermarket parts or optional parts.

Repair or replacement of the product by Hobby Services is the sole and exclusive remedy for any loss or damages.

Neither Axial nor Hobby Services are liable under this limited warranty for any incidental, consequential, indirect or special damages, including without limitation, loss of profits or other economic damages.

Note: Purchasing products from unauthorized retailers may void the warranty and prevent support and service.

INTERNATIONAL CUSTOMER WARRANTY

Please contact the dealer where the purchase was made. If your Axial product purchase was made through an on-line retailer, any warranty issues must be taken care of by that retailer. Axial assumes no responsibility for Axial products sold internationally by on-line retailers outside of your home country/region.

SPECIFICATIONS & DESCRIPTION CHANGES

All information found in this manual is subject to change without notice. Visit Axialracing.com for the latest updates and information regarding your model. Axial maintains no responsibility for inadvertent errors in this manual or on the box art.

WARRANTY REPAIRS CONTACT

Hobby Services 3002 N. Apollo Drive Suite 1 Champaign, IL 61822 ATTN: Service Department Phone: 877-64-AXIAL (877-642-9425) 8:00 am – 5:00 pm Central Time M-F E-mail: service@axialracing.com

CAUTIONS

 \sum To prevent serious personal injury and/or property damage, operate all remotely controlled models in a responsible manner as outlined herein.

CHOOSE THE RIGHT PLACE TO OPERATE YOUR R/C MODEL.

- Do not run on public streets or highways. This could cause serious accidents, personal injuries, and/or property damage.
- Never run R/C models near people or animals.
- To avoid injury, do not run in confined spaces.
- Do not run where loud noises can disturb others, such as hospitals and residential areas.
 Never run indoors. There is a high risk of fire and/or damage.

INSPECT YOUR MODEL BEFORE OPERATION.

- Make sure that all screws and nuts are properly tightened. It is also a good idea to use removable thread lock wherever metal screws go into metal, especially for engine mounts and the engine pilot shaft.
- Always use fresh batteries for your transmitter and for your receiver to avoid losing control
 of the model.
- Always test the brakes and throttle before starting your engine to avoid losing control of the model.

AFTER OPERATION OF YOUR R/C MODEL

- Disconnect battery in vehicle first, then turn off transmitter, this will prevent runaways.
 - Be careful when handling batteries, they will be hot after running.
 - Replace any batteries that have been dented or have frayed wires, short circuits can cause fire.
 - Be sure to keep your R/C model clean and free of excess dirt and grease, this will increase the life.

VORSICHT!

Um Verletzungen an Personen und/oder Sachschäden zu vermeiden, sollten alle ferngesteuerten Modelle sorgfältig und verantwortungsbewusst bedient werden,wie nachfolgend beschrieben.

Wählen Sie den richtigen Platz zum Fahren

- Fahren Sie niemals auf öffentlichen Straßen. Dies könnte Verkehrsunfälle, Personen schäden oder Sachschäden verursachen.
- Fahren Sie niemals in der Nähe von anderen Personen oder Tieren.
- Fahren Sie niemals auf belebten Straßen.
- Fahren Sie nie in der N\u00e4he von Wohnh\u00e4usern oder Krankenh\u00e4usern. Der L\u00e4rm k\u00f6nnte andere Personen st\u00f6ren.
- Fahren Sie niemals in Innenräumen. Dort könnte etwas beschädigt werden.

Überprüfen Sie Ihr Modell, bevor Sie es in Betrieb nehmen.

- Gehen Sie sicher, dass alle Schrauben und Muttern festgezogen sind. Verwenden Sie überall dort Schrauben-Sicherungslack, wo Metallschrauben in ein Metallgewinde greifen, besonders bei den Motorhaltern.
- Um Störungen zu vermeiden, benutzen Sie immer voll geladene Akkus in Ihrem Sender und Empfänger.
- Bevor Sie den Motor starten, sollten Sie immer die Funktion der Bremse und des Gashebels testen.

Nach Betrieb des RC Modells:

- Zuerst den Empfänger abdrehen, dann den Sender abdrehen um unkontrolliertes Durchgehen zu vermeiden.
- Seien Sie vorsichtig mit gebrauchten Akkus, sie können nach dem Gebrauch heiß sein.
- Ersetzten Sie Akkus/Batterien die beschädigt sind oder schadhafte Kabel aufweisen, sie können Kurzschlüsse oder Feuer verursachen.
- Halten Sie Ihr Fahrzeug sauber und entfernen Sie Schmutz und Schmierfett, damit erhöhen Sie die Lebensdauer Ihres Modells.

PRECAUTIONS

Afin d'éviter toutes blessures corporelles et/ou dommages environnants, veuillez procéder en toute responsabilité comme indiqué ci-dessous

Choisir le lieu adéquat pour faire rouler votre modèle.

- Ne jamais rouler dans les rues ou sur les routes ouvertes au publique. Ceci peut provoquer de graves accidents.
- Ne jamais rouler près de personnes ou d'animaux.
- Pour éviter les blessures, ne pas rouler dans des espaces confinés.
- Ne jamais rouler où le bruit peut déranger, comme aux abords des hôpitaux ou des quartiersrésidentiels.
- Ne jamais rouler à l'intérieur: les gaz d'échappement sont nocifs.

Controler votre modèle avant chaque utilisation.

- Vérifier que les vis et les écrour sont bien serrés. Il est trés fortement conseillé d'utiliser du frein filet pour bloquer les vis qui sont en contact avec du métal et tout particulierer ment les vis du moteur.
- Toujours utiliser des batteries bien chargées pour l'émission et la réception.
- Toujours vérifier les freins et la commande des gaz avant de démarrer.

Après l'Opération De Votre Modèle de R/C

- Le virage du récepteur premier, alors virage de l'émetteur, ceci empêchera des fugitifs.
- Faire attention en contrôlant des piles, ils auront chaud après avoir couru.
- Remplacer n'importe quelles piles qui ont été cabossées ou a éraillé des fils, les court-circuits peuvent causer le feu.
- Etre sûr de garder votre modèle de R/C nettoie et libère de terre et la graisse supplémen taires, ceci augmentera la vie.

Trouble Shooting / Fehlerbehebung / Dépannage

Problem Problem Problème

Cause Grund Cause

Does not move Das Auto fährt nicht Le véhicule ne boughe pas Batteries are not installed properly in the transmitter. Die Batterien sitzen nicht korrekt im Sender. Les piles ne sont pas placées correctement dans l'émetteur. Weak or no battery in model.

Leerer oder kein Akku im Auto. Batterie faible ou non installée

Damaged motor. Kaputter Motor. Moteur endommagé

Frayed or broken wiring. Beschädigte Verkabelung. Câble dénudé ou coupe

ESC is shut down by heat protection circuit. Notabschaltung des Reglers wegen Überhitzung. Le système ESC est fermé par le circuit de protection thermique.

Remedy Lösung

Remède

Make sure batteries are properly installed. Legen Sie die Batterien korrekt ein. Positionnez correctement les piles dans l'émetteur.

Install charged battery. Einbauen eines geladenen Akkus. Mettez en place une batterie chargée

Replace with new motor. Austausch durch einen neuen Motor. Remplacez par un nouveau moteur

Splice and insulate wiring completely. Erneuern und isolieren Sie die kaputte Stelle. Faites une épissure et isolez complètement le câble.

Stop driving immediately, do not drive the car until the Speed Controller cools down. Fahren Sie nicht weiter. Warten Sie bis der Fahrten regler abgekühlt ist. Arrêtez immédiatement de conduire, ne pilotez pas la voiture tant que le contrôleur de vitesse n'a pas refroidi.

No Control. Keine Kontrolle über das Auto Pas de contrôle Improper antenna on transmitter or model. Zu kurze Antenne am Sender oder Auto. Antenne inadéquate sur l'émetteur ou le véhicule

Weak or no batteries in transmitter or model. Leere oder keine Batterien im Sender oder Auto. Batterie faible ou absente dans l'émetteur ou le véhicule.

Neutral position or trim is incorrect. Neutralposistion oder Trimmung sind verstellt. La position neutre est incorrecte ou le trim n'est pas réglé.

Are the receiver and battery connections properly connected? Sind der Empfänger und die Batterieverbindungen ordentlich verbunden? Son conectadas apropiadamente las conexiones del receptor y la batería? Install charged or fresh batteries. Einbauen voller Batterien. Mettez des batteries rechargées ou neuves.

Fully extend antenna. Ziehen Sie die Antenne vollständig aus. Dépliez complètement l'antenne.

Adjust the steering trim. Stellen Sie die Lenkungstrimmung neu ein. Réglez le trim de direction.

Check receiver and battery connections. Prüfen Sie Empfänger und Batterieverbindungen. Compruebe conexiones de bateria y receptor.


Steering and Throttle Function Reversed. Lenkung und Gas funktionieren genau verkehrt herum. Direction et accélération inverses. Servo reverse switch is in wrong position. Servorichtungs-Schalter ist in der falschen Position. L'interrupteur de marche arrière du servo est dans la mauvaise position

Please check that the wires from ESC to motor are connected properly. Bitte überprüfen Sie, ob die Kabel vom Regler zum Motor richtig sitzen.

Veuillez vérifier que les fils allant de l'ESC au moteur sont correctement raccordés. Set to correct position. Satz, Position zu korrigieren Vérifiez la position correcte


Check to make sure motor and ESC are properly connected. Kontrolle sich zu vergewissern, dass Motor und ESC ordentlich verbunden sind. Le contrôle pour assurer que le moteur et ESC est convenablement connecté.

Included items / Im Baukasten enthalten / Outils inclus dans le kit

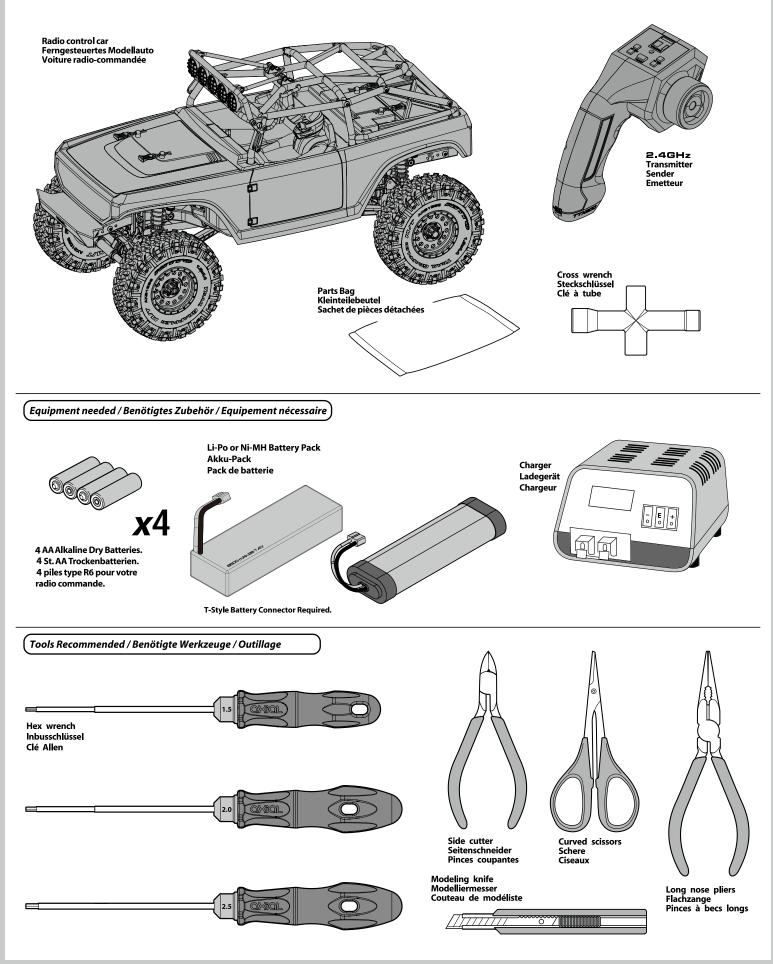

Getting Started / Angefangen Zu Werden / Commencer


Charge your battery / Laden des Fahrakkus / Chargement de la batterrie

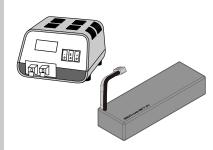

Follow the manufacturer's directions for the charger you purchased to properly charge your batteries.


Folgen Sie den Herstellernrichtungen für den Auflader Ihres gekauft ordentlich, Ihre Batterien zu laden.

 
Suivre les directions de fabricants pour le chargeur votre a acheté convenablement pour charger vos piles.



Stellen Sie sicher, Ladegerät ist korrekt für Batterietyp zur Verwendung ausgewählt. Beispiele: Laden Sie keine Lipo-Akkus mit Nickel-Metall-Hydrid-Ladegerät. Laden Sie keine Nickel-Cadmium-Akkus Lipo Ladegerät.


Assurez-vous que le chargeur est correcte pour le type de batterie sélectionné à l'emploi. Exemples: Ne pas charger les batteries Lipo avec chargeur hydrure métallique de nickel. Ne chargez pas les batteries au nickel-cadmium Lipo chargeur.

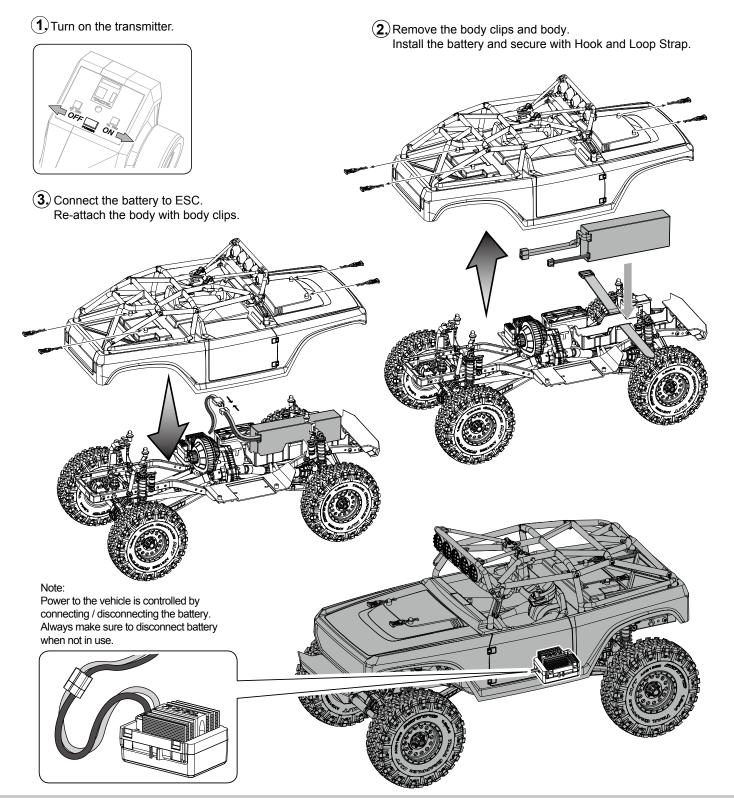

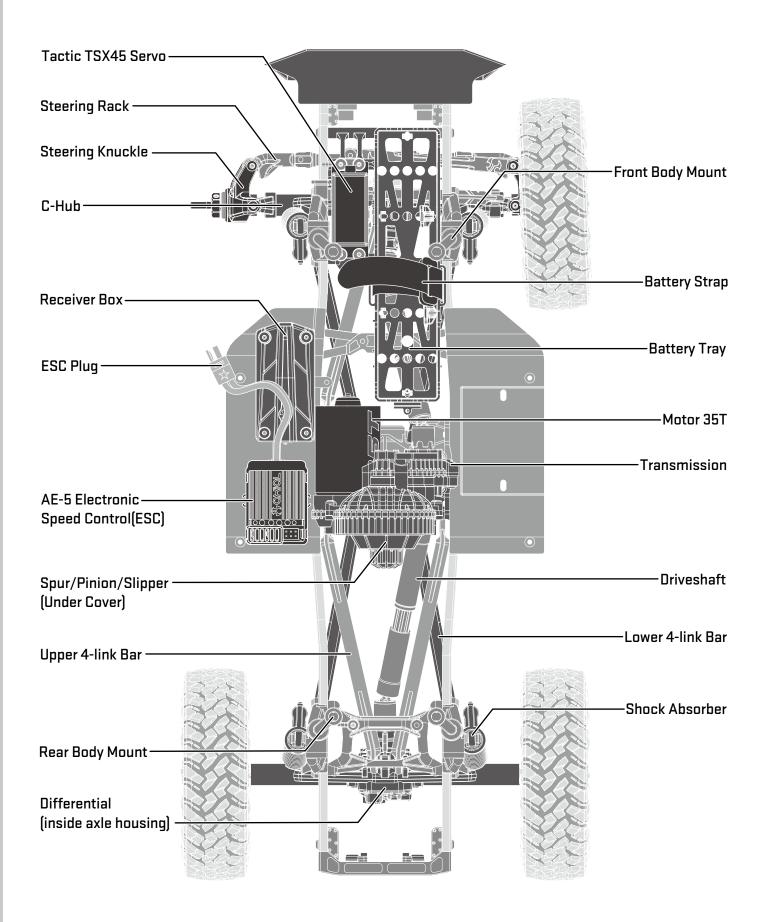

Getting-Started Checklist

The following checklist is a guide for getting you vehicle running for the first time.

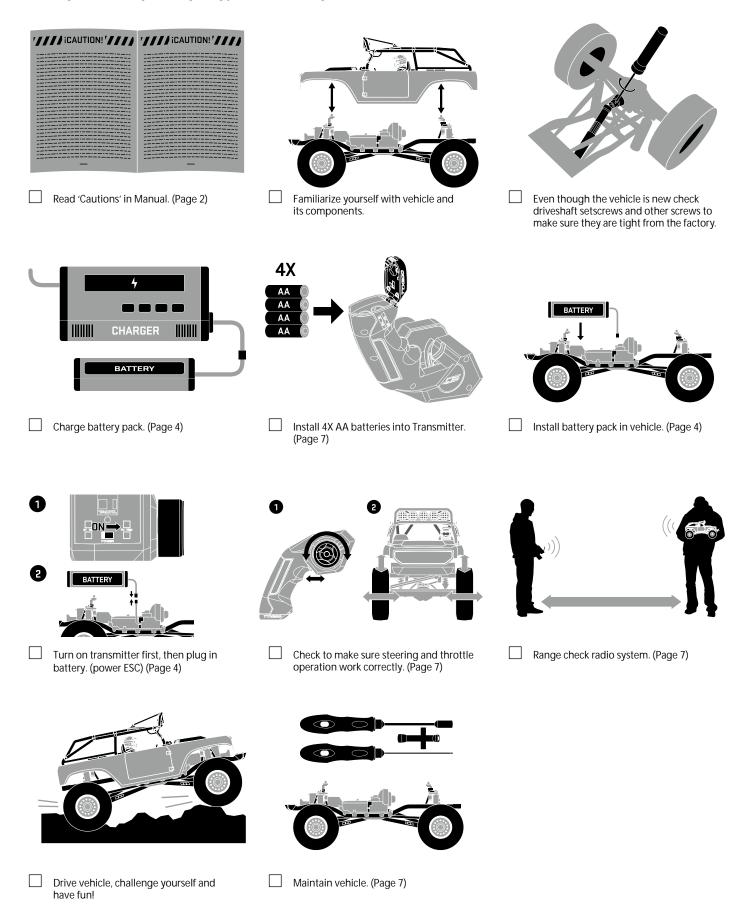

Range-Checking Your Radio System

The radio system should be checked before operating the vehicle to ensure it's operating properly and has adequate range.




- 1. Turn on the transmitter and then connect the battery in the vehicle.
- 2. Have a friend hold the vehicle while keeping hands and loose clothing away from moving parts.
- 3. Walk away until you are at the farthest distance you plan to operate the vehicle.
- 4. Steer the vehicle back and forth and throttle both forward and reverse making sure there is no erratic behavior.
- 5. If any erratic behavior is exhibited do not operate the vehicle, call customer service for further assistance.

RANGE-CHECKING FOR DISTANCE




Maintaining Your Vehicle


Just like a full size car or truck your RC vehicle must undergo periodic maintenance in order to ensure peak running performance. Preventative maintenance will also help avoid needless breakages which could result in costly repairs. Below are some suggestions to properly maintain your vehicle.

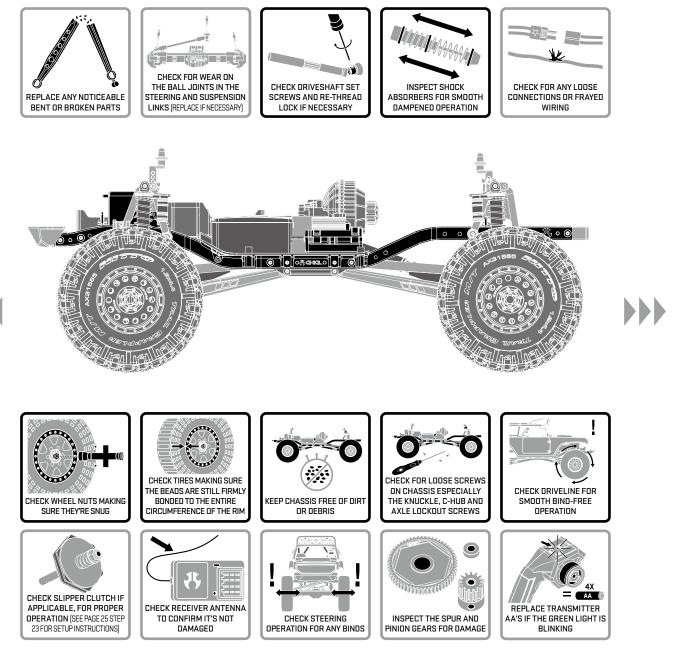

Battery Tray

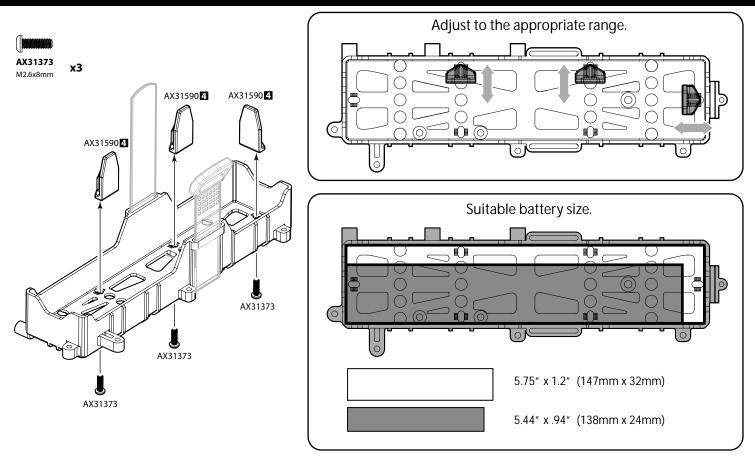

AE-5 Forward/Reverse ESC w/ Drag Brake

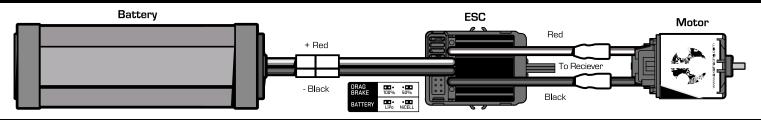

Setup:

Throttle calibration should not be needed out-of-the-box. However in order to make the throttle range of different transmitters, the calibration of the ESC is necessary:

- Mount the ESC in an area that is well ventilated and isolated from vibration and shock.
- Connect the ESC motor wires to the motor red-red & black-black. • Plug the receiver with into the throttle channel on the receiver. The black negative wire should be towards the outside of the receiver.
- Before plugging the battery into the ESC, make sure your transmitter is on and the throttle trim is set at zero.
- Connect the battery to the ESC, this will turn on the ESC.
- Test forward and reverse control using the transmitter.
- To calibrate the ESC, make sure the transmitter is on and the throttle control is at neutral.
- Connect the battery to the ESC and wait 3 seconds to let the ESC initiate a self-test and automatic throttle calibration.

When the ESC is ready to run a long beep sound will be emitted from the motor. Always disconnect the battery when the vehicle is not in use.

Notes:

- Drag Brake set to 100% from the factory.
- LiPo Cut-Off is set to "ON" from the factory.



CONNECT THE BATTERY PACK JUST BEFORE DRIVING AND DISCONNECT IT IMMEDIATELY AFTER. ALWAYS MAKE SURE YOU ARE CONNECTING THE ESC TO A PROPER POWER SOURCE THAT HAS THE CORRECT VOLTAGE & POLARITY. INCORRECT VOLTAGES OR REVERSED POLARITY WILL DAMAGE THE ESC. ONCE THE BATTERY PACK IS CONNECTED, HANDLE THE MODEL WITH EXTREME CARE, MAKE SURE YOU ARE CLEAR OF ALL ROTATING PARTS.

Specifications:


Input Voltage:	2-3S LiPo, 5-9 Cells NiMH/ NiCd
Size:	46.5mm x 34mm x 28.5mm
Weight:	70g
Motor Limit:	12T 2S / 18T 3S
On-Resistance FET:	.002
Rated/Peak Current:	180A
Braking Current:	90A
BEC Voltage/A:	6.0V 3.0A Peak
PWM Frequency:	1KHz

Beep Sound and LED Status:	
1 Short Beep:	Battery is NiMH/NiCd
2 Short Beeps:	Battery is 2S Lipo
3 Short Beeps:	Battery is 3S Lipo
1 Long Beep:	Self-test and throttle calibration is OK and ESC is ready to run


	SC	X10 II Spur	/Pinion Ge	ar Ratio Cl	nart - LCX 1	ransmissi	on
Spur	12	13	14	15	16	17	18
56	45.50	42.00	39.00	36.40	34.13	32.12	30.33
60	48.75	45.00	41.79	39.00	36.56		

NOTES


Parts Reference / Übersicht aller Teile / Référence des pièces

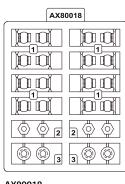


AX80018 x2 Hardware Parts Tree

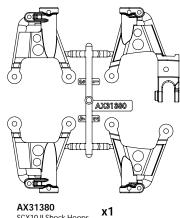


SCX10 II Shock Hoops

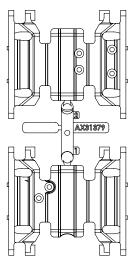

AX31379 х1 SCX10 II Skid Plates

 

 
AX31589 AR44 Differential Covers (Red) X1




AR44 Steering Knuckles х1




 61-90mm x2 Shock Body





Shock Cap Parts Tree x2

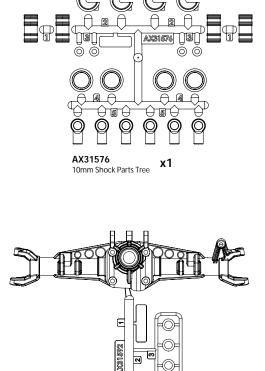

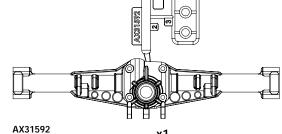



AR44 Solid Axle Housing (Front and Rear) X1

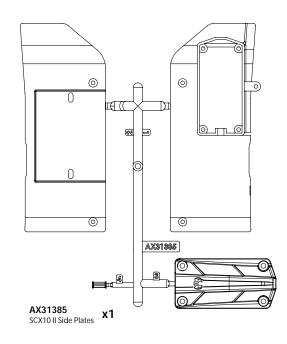

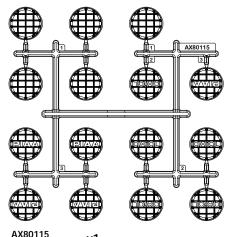


AX80115 Light Bar Lense Grills X1

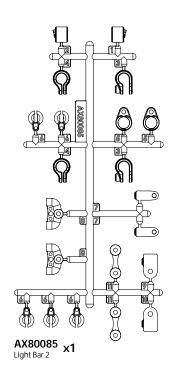


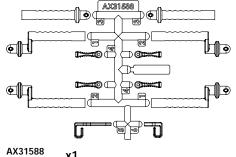

Body Mount Set X1

 




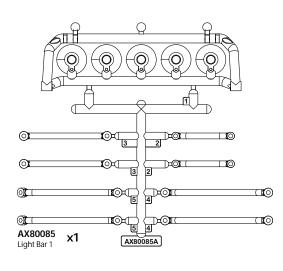





AX31541 1.9 Method MR307 Hole Wheels - Black X4

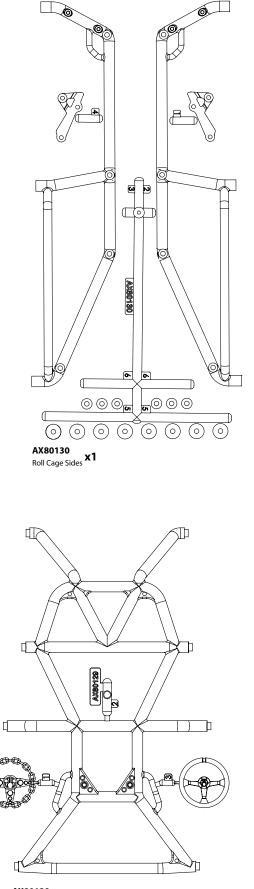


AX80129 Roll Cage Top X1

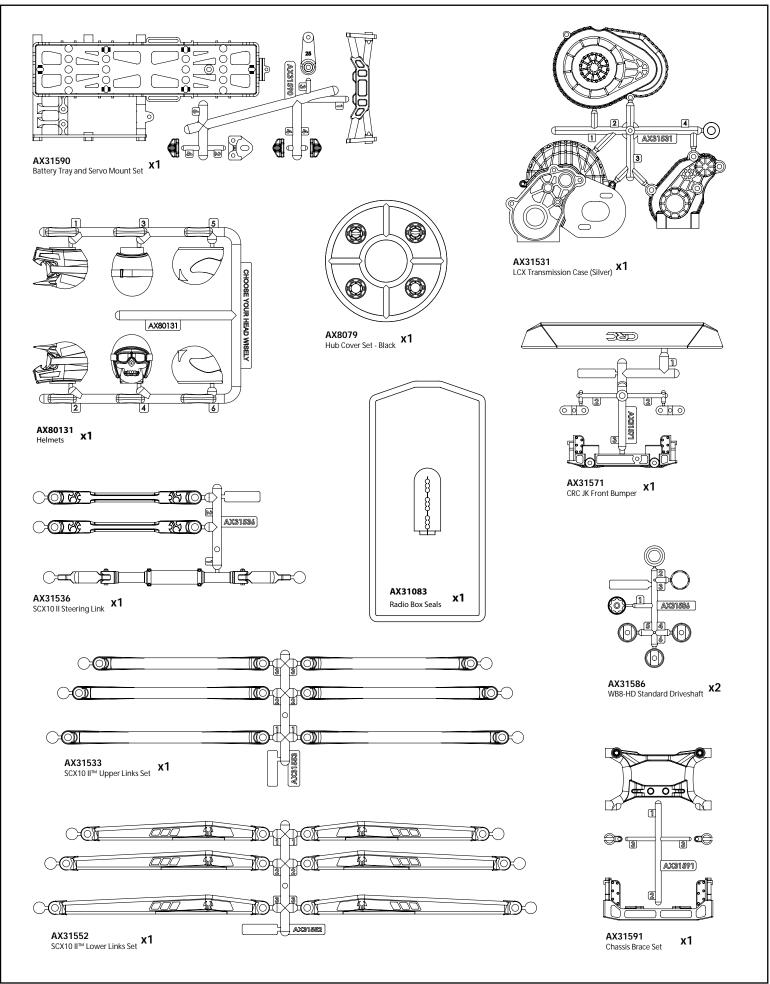

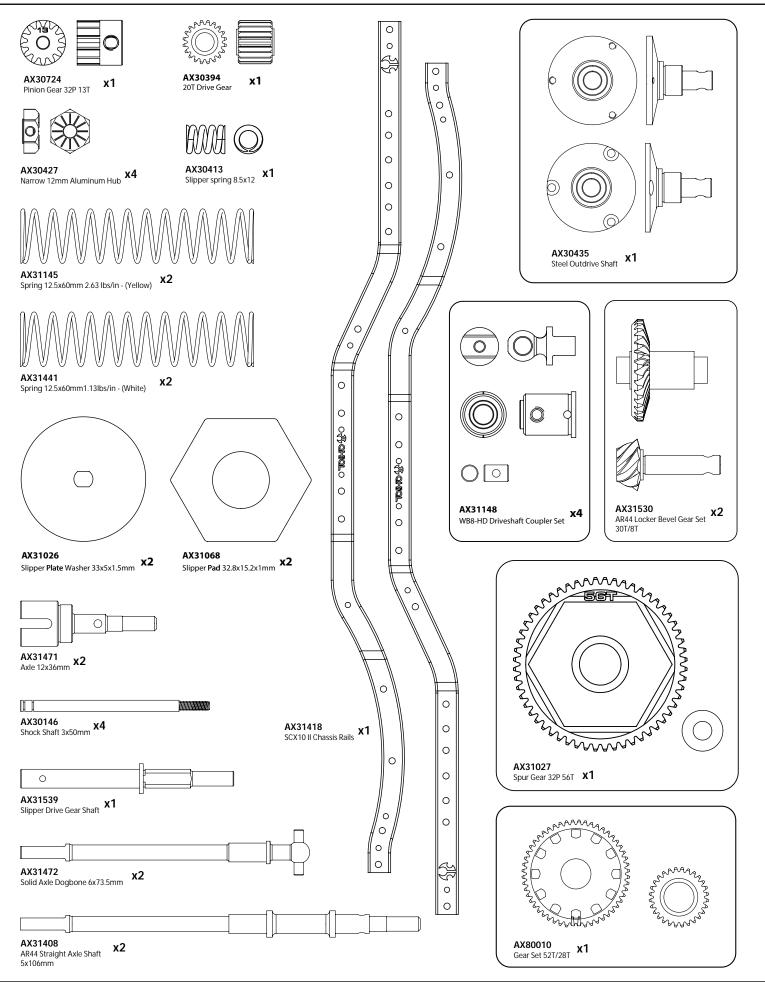

the axial

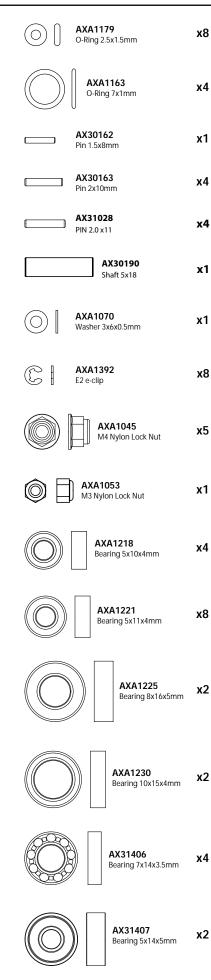

AXA1059 х4 6mm Body Clip AXA0286 x10 Screw Shaft M4x12mm AXA180 x4 M3x3mm Set Screw M AXA291 M4x4mm Set Screw х1 AXA0109 хб M3x10mm Oversized Flat Hex Socket AX31403 x4 M3x4x10mm Hex Socket Button Head Shoulder Screw AX31373 х5 M2.6x8mm Hex Socket Button Head AXA0113 х5 M3x6mm Hex Socket Button Head AXA114 х2 M3x8mm Hex Socket Button Head AXA115 x10 M3x10mm Hex Socket Button Head AXA116 х1 M3x12mm Hex Socket Button Head AXA117 x19 M3x15mm Hex Socket Button Head AXA118 х3 M3x18mm Hex Socket Button Head AXA119 x1 M3x20mm Hex Socket Button Head AXA120 x2 M3x25mm Hex Socket Button Head


AXA013 M2x6mm Hex Socket Cap Head	x14
AXA0023 M2.6x8mm Cap Head	x2
AX31399 M2.6x18mm Hex Socket Cap Head	x8
V AXA144 M3x8mm Hex Socket Flat Head	х5
ν AX31120 M3x10mm Hex Socket Flat Head	х4
✓ AXA146 M3x12mm Hex Socket Flat Head	x12
Jananananananan	
AXA148 M3x18mm Hex Socket Flat Head	х4
(]1111111111	
AXA424 M2.6x10mm Hex Socket Tapping Button Head	x10
■ AXA434 M3x8mm Hex Socket Tapping Button Head	х3
AXA436 M3x12mm Hex Socket TappingButton Head	x14







₹5 axial


Rear Axle

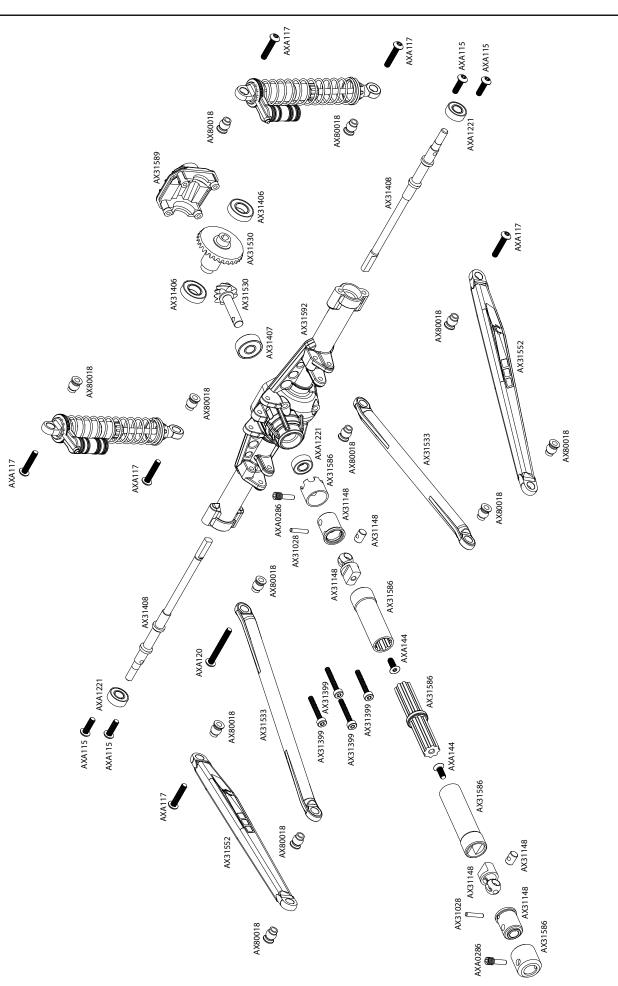


Transmission

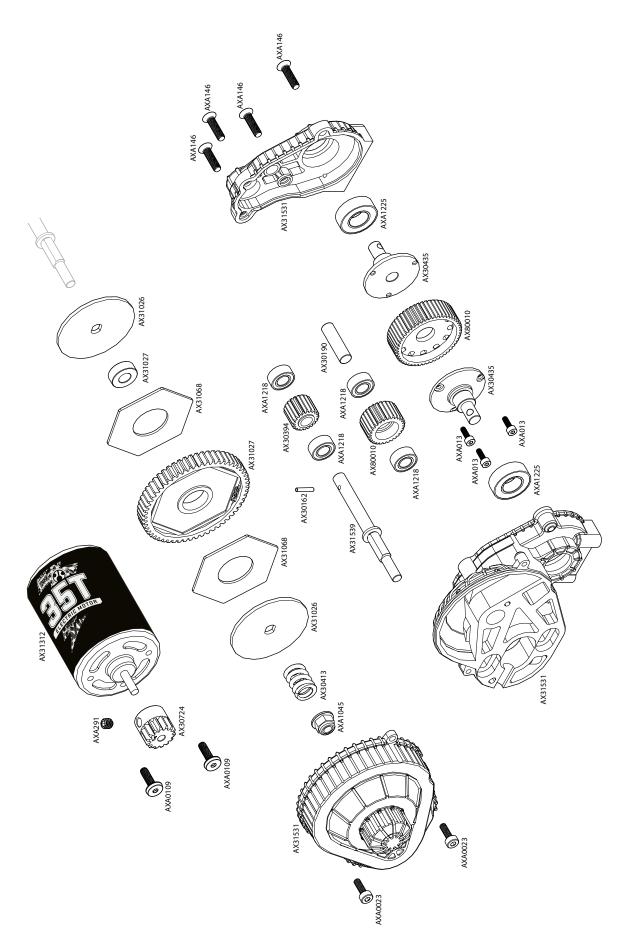


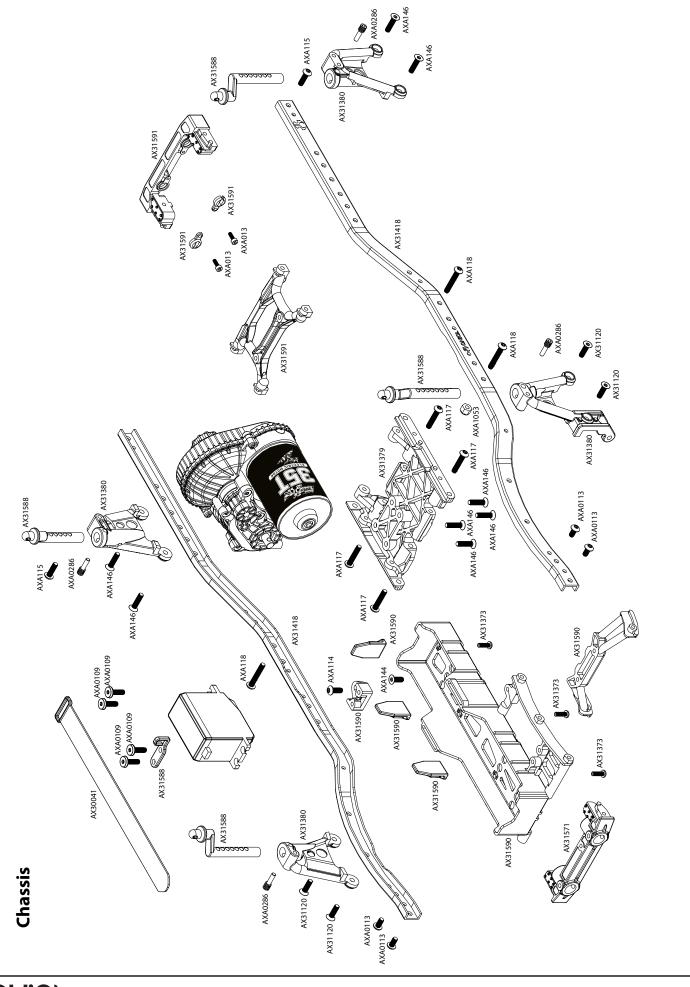

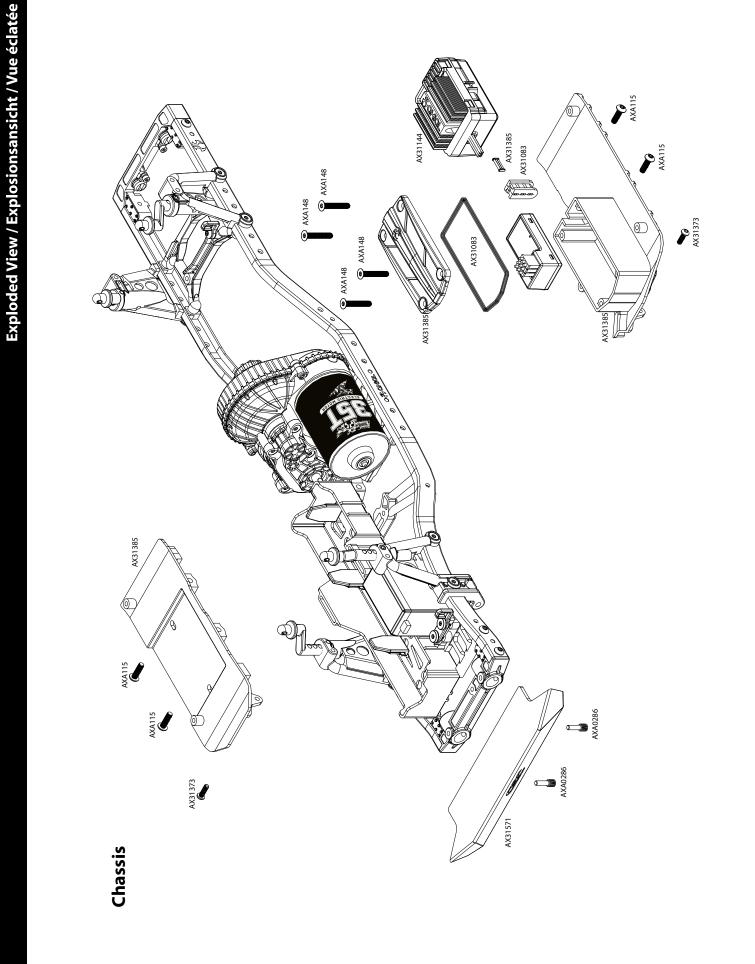

<mark>₹</mark>\$ axial

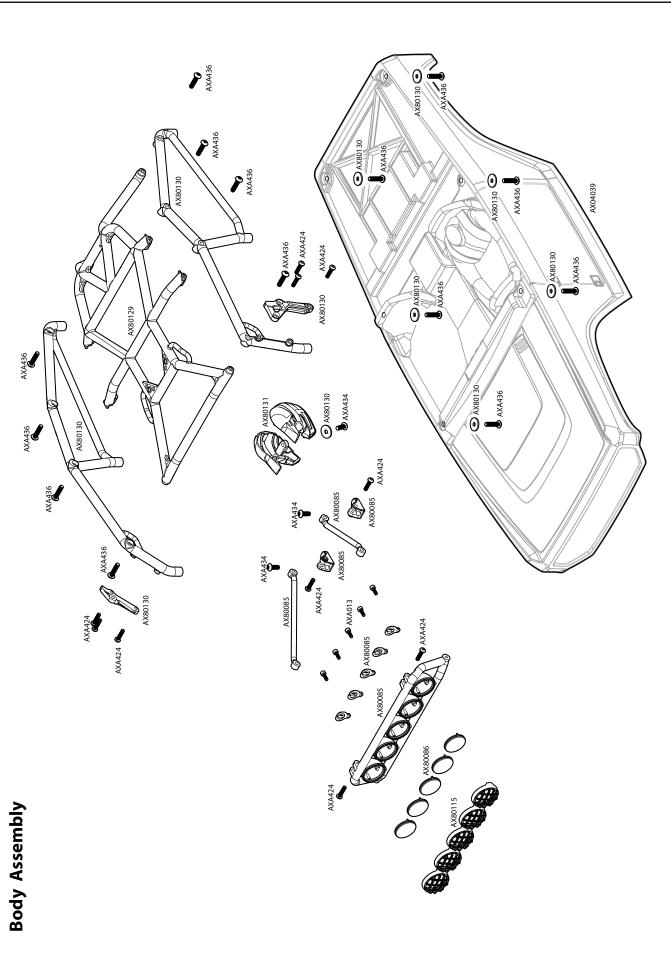

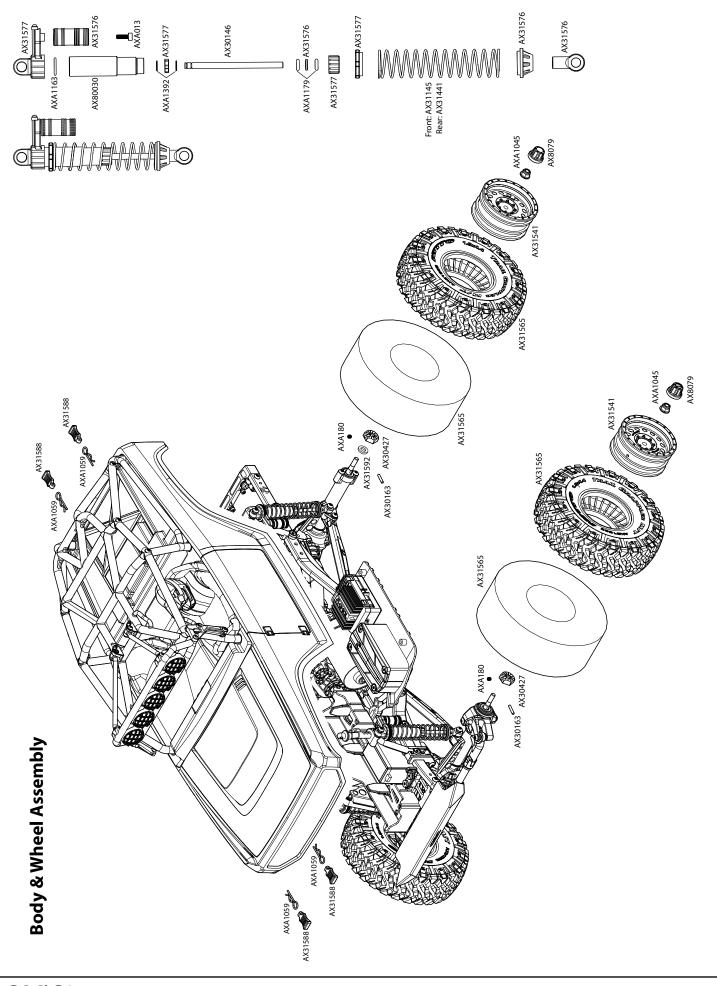

Parts List

Part #DescriptionAXA0424M2.6x10mm Hex Socket Tapping Button Head (Black) (10pcs)AXA1045M4 Nylon Lock Nut (Black) (10pcs)AXA1052M3 Thin Nylon Locking Hex Nut (Black)AXA10596mm Body clip (Black) (10pcs)AXA114M3x8mm Hex Socket Button Head (Black) (10pcs)AXA115M3x10mm Hex Socket Button Head (Black) (10pcs)AXA1163O-Ring 7x1mm (10pcs)AXA117M3x15mm Hex Socket Button Head (Black) (10pcs)AXA117M3x15mm Hex Socket Button Head (Black) (10pcs)AXA118M3x18mm Hex Socket Button Head (Black) (10pcs)AXA119O-Ring 2.5x1.5mm (10pcs)AXA118M3x20mm Hex Socket Button Head (Black) (10pcs)AXA120M3x25mm Hex Socket Button Head (Black) (10pcs)AXA120M3x25mm Hex Socket Button Head (Black) (10pcs)AXA1218Bearing 5x10x4mm (2pcs)AXA1221Bearing 5x11x4mm (2pcs)AXA1230Bearing 10x15x4mmAXA1392E2 e-clip (10pcs)AXA144M3x8mm Hex Socket Flat Head (Black) (10pcs)AXA146M3x12mm Hex Socket Flat Head (Black) (10pcs)AXA148M3x18mm Hex Socket Flat Head (Black) (10pcs)AXA144M3x8mm Set Screw (Black) (10pcs)AXA145M3x3mm Set Screw (Black) (10pcs)AXA140M3x3mm Set Screw (Black) (6pcs.)
AXA1045M4 Nylon Lock Nut (Black) (10pcs)AXA1052M3 Thin Nylon Locking Hex Nut (Black)AXA10596mm Body clip (Black) (10pcs)AXA114M3x8mm Hex Socket Button Head (Black) (10pcs)AXA115M3x10mm Hex Socket Button Head (Black) (10pcs)AXA1163O-Ring 7x1mm (10pcs)AXA117M3x15mm Hex Socket Button Head (Black) (10pcs)AXA117M3x15mm Hex Socket Button Head (Black) (10pcs)AXA117M3x15mm Hex Socket Button Head - Black (10pcs)AXA118M3x18mm Hex Socket Button Head - Black (10pcs)AXA119O-Ring 2.5x1.5mm (10pcs)AXA119M3x20mm Hex Socket Button Head (Black) (10pcs)AXA120M3x25mm Hex Socket Button Head (Black) (10pcs)AXA121Bearing 5x10x4mm (2pcs)AXA1225Bearing 5x11x4mm (2pcs)AXA1230Bearing 10x15x4mmAXA1392E2 e-clip (10pcs)AXA144M3x8mm Hex Socket Flat Head (Black) (10pcs)AXA146M3x12mm Hex Socket Flat Head (Black) (10pcs)AXA146M3x18mm Hex Socket Flat Head (Black) (10pcs)AXA146M3x18mm Hex Socket Flat Head (Black) (10pcs)AXA148M3x18mm Hex Socket Flat Head (Black) (10pcs)AXA140M3x3mm Set Screw (Black) (10pcs)AXA140M3x3mm Set Screw (Black
AXA1045M4 Nylon Lock Nut (Black) (10pcs)AXA1052M3 Thin Nylon Locking Hex Nut (Black)AXA10596mm Body clip (Black) (10pcs)AXA114M3x8mm Hex Socket Button Head (Black) (10pcs)AXA115M3x10mm Hex Socket Button Head (Black) (10pcs)AXA1163O-Ring 7x1mm (10pcs)AXA117M3x15mm Hex Socket Button Head (Black) (10pcs)AXA117M3x15mm Hex Socket Button Head (Black) (10pcs)AXA117M3x15mm Hex Socket Button Head - Black (10pcs)AXA118M3x18mm Hex Socket Button Head - Black (10pcs)AXA119O-Ring 2.5x1.5mm (10pcs)AXA119M3x20mm Hex Socket Button Head (Black) (10pcs)AXA120M3x25mm Hex Socket Button Head (Black) (10pcs)AXA121Bearing 5x10x4mm (2pcs)AXA1225Bearing 5x11x4mm (2pcs)AXA1230Bearing 10x15x4mmAXA1392E2 e-clip (10pcs)AXA144M3x8mm Hex Socket Flat Head (Black) (10pcs)AXA146M3x12mm Hex Socket Flat Head (Black) (10pcs)AXA146M3x18mm Hex Socket Flat Head (Black) (10pcs)AXA146M3x18mm Hex Socket Flat Head (Black) (10pcs)AXA148M3x18mm Hex Socket Flat Head (Black) (10pcs)AXA140M3x3mm Set Screw (Black) (10pcs)AXA140M3x3mm Set Screw (Black
AXA1052M3 Thin Nylon Locking Hex Nut (Black)AXA10596mm Body clip (Black) (10pcs)AXA114M3x8mm Hex Socket Button Head (Black) (10pcs)AXA115M3x10mm Hex Socket Button Head (Black) (10pcs)AXA1163O-Ring 7x1mm (10pcs)AXA117M3x15mm Hex Socket Button Head (Black) (10pcs)AXA117M3x15mm Hex Socket Button Head (Black) (10pcs)AXA117M3x15mm Hex Socket Button Head (Black) (10pcs)AXA117M3x18mm Hex Socket Button Head - Black (10pcs)AXA118M3x20mm Hex Socket Button Head (Black) (10pcs)AXA120M3x25mm Hex Socket Button Head (Black) (10pcs)AXA120M3x25mm Hex Socket Button Head (Black) (10pcs)AXA1218Bearing 5x10x4mm (2pcs)AXA1221Bearing 5x11x4mm (2pcs)AXA1230Bearing 10x15x4mmAXA1230Bearing 10x15x4mmAXA144M3x8mm Hex Socket Flat Head (Black) (10pcs)AXA146M3x12mm Hex Socket Flat Head (Black) (10pcs)AXA146M3x12mm Hex Socket Flat Head (Black) (10pcs)AXA146M3x18mm Hex Socket Flat Head (Black) (10pcs)AXA148M3x18mm Hex Socket Flat Head (Black) (10pcs)AXA140M3x3mm Set Screw (Black) (10pcs)AXA291M4x4mm Set Screw (Black) (6pcs.)
AXA10596mm Body clip (Black) (10pcs)AXA114M3x8mm Hex Socket Button Head (Black) (10pcs)AXA115M3x10mm Hex Socket Button Head (Black) (10pcs)AXA1163O-Ring 7x1mm (10pcs)AXA117M3x15mm Hex Socket Button Head (Black) (10pcs)AXA117M3x15mm Hex Socket Button Head (Black) (10pcs)AXA117M3x15mm Hex Socket Button Head - Black (10pcs)AXA118M3x18mm Hex Socket Button Head - Black (10pcs)AXA119M3x20mm Hex Socket Button Head (Black) (10pcs)AXA120M3x25mm Hex Socket Button Head (Black) (10pcs)AXA1218Bearing 5x10x4mm (2pcs)AXA1221Bearing 5x11x4mm (2pcs)AXA1230Bearing 10x15x4mmAXA1240M3x8mm Hex Socket Flat Head (Black) (10pcs)AXA125Bearing 10x15x4mmAXA126M3x12mm Hex Socket Flat Head (Black) (10pcs)AXA146M3x12mm Hex Socket Flat Head (Black) (10pcs)AXA146M3x18mm Hex Socket Flat Head (Black) (10pcs)AXA146M3x18mm Hex Socket Flat Head (Black) (10pcs)AXA146M3x18mm Hex Socket Flat Head (Black) (10pcs)AXA148M3x18mm Hex Socket Flat Head (Black) (10pcs)AXA148M3x18mm Hex Socket Flat Head (Black) (10pcs)AXA148M3x38mm Set Screw (Black) (10pcs)AXA191M4x4mm Set Screw (Black) (6pcs.)
AXA114M3x8mm Hex Socket Button Head (Black) (10pcs)AXA115M3x10mm Hex Socket Button Head (Black) (10pcs)AXA1163O-Ring 7x1mm (10pcs)AXA117M3x15mm Hex Socket Button Head (Black) (10pcs)AXA117M3x15mm Hex Socket Button Head (Black) (10pcs)AXA117O-Ring 2.5x1.5mm (10pcs)AXA118M3x18mm Hex Socket Button Head - Black (10pcs)AXA119O-Ring 2.5x1.5mm (10pcs)AXA119M3x20mm Hex Socket Button Head (Black) (10pcs)AXA120M3x25mm Hex Socket Button Head (Black) (10pcs)AXA120M3x25mm Hex Socket Button Head (Black) (10pcs)AXA1218Bearing 5x10x4mm (2pcs)AXA1225Bearing 8x16x5mm (2pcs)AXA1230Bearing 10x15x4mmAXA1230Bearing 10x15x4mmAXA1392E2 e-clip (10pcs)AXA146M3x12mm Hex Socket Flat Head (Black) (10pcs)AXA146M3x12mm Hex Socket Flat Head (Black) (10pcs)AXA146M3x18mm Hex Socket Flat Head (Black) (10pcs)AXA148M3x18mm Hex Socket Flat Head (Black) (10pcs)AXA120M3x3mm Set Screw (Black) (0pcs)AXA120M4x4mm Set Screw (Black) (6pcs.)
AXA115M3x10mm Hex Socket Button Head (Black) (10pcs)AXA1163O-Ring 7x1mm (10pcs)AXA117M3x15mm Hex Socket Button Head (Black) (10pcs)AXA117O-Ring 2.5x1.5mm (10pcs)AXA118M3x18mm Hex Socket Button Head - Black (10pcs)AXA119O-Ring 2.5x1.5mm (10pcs)AXA119M3x20mm Hex Socket Button Head - Black (10pcs)AXA120M3x25mm Hex Socket Button Head (Black) (10pcs)AXA120M3x25mm Hex Socket Button Head (Black) (10pcs)AXA1218Bearing 5x10x4mm (2pcs)AXA1225Bearing 5x11x4mm (2pcs)AXA1230Bearing 10x15x4mmAXA1392E2 e-clip (10pcs)AXA144M3x8mm Hex Socket Flat Head (Black) (10pcs)AXA146M3x12mm Hex Socket Flat Head (Black) (10pcs)AXA146M3x18mm Hex Socket Flat Head (Black) (10pcs)AXA146M3x18mm Hex Socket Flat Head (Black) (10pcs)AXA146M3x18mm Hex Socket Flat Head (Black) (10pcs)AXA148M3x18mm Hex Socket Flat Head (Black) (10pcs)AXA140M3x3mm Set Screw (Black) (10pcs)AXA120M4x4mm Set Screw (Black) (6pcs.)
AXA1163O-Ring 7x1mm (10pcs)AXA117M3x15mm Hex Socket Button Head (Black) (10pcs)AXA117O-Ring 2.5x1.5mm (10pcs)AXA118M3x18mm Hex Socket Button Head - Black (10pcs)AXA119M3x20mm Hex Socket Button Head (Black) (10pcs)AXA120M3x25mm Hex Socket Button Head (Black) (10pcs)AXA120M3x25mm Hex Socket Button Head (Black) (10pcs)AXA1218Bearing 5x10x4mm (2pcs)AXA1221Bearing 5x11x4mm (2pcs)AXA1225Bearing 8x16x5mm (2pcs)AXA126Bearing 10x15x4mmAXA1392E2 e-clip (10pcs)AXA144M3x8mm Hex Socket Flat Head (Black) (10pcs)AXA146M3x12mm Hex Socket Flat Head (Black) (10pcs)AXA148M3x18mm Hex Socket Flat Head (Black) (10pcs)AXA149M3x18mm Hex Socket Flat Head (Black) (10pcs)AXA148M3x18mm Hex Socket Flat Head (Black) (10pcs)AXA148M3x18mm Hex Socket Flat Head (Black) (10pcs)AXA148M3x18mm Hex Socket Flat Head (Black) (10pcs)AXA149M3x28mm Set Screw (Black) (10pcs)AXA180M3x3mm Set Screw (Black) (10pcs)AXA291M4x4mm Set Screw (Black) (6pcs.)
AXA117M3x15mm Hex Socket Button Head (Black) (10pcs)AXA1179O-Ring 2.5x1.5mm (10pcs)AXA118M3x18mm Hex Socket Button Head - Black (10pcs)AXA119M3x20mm Hex Socket Button Head (Black) (10pcs)AXA120M3x25mm Hex Socket Button Head (Black) (10pcs)AXA120M3x25mm Hex Socket Button Head (Black) (10pcs)AXA1218Bearing 5x10x4mm (2pcs)AXA1221Bearing 5x11x4mm (2pcs)AXA1225Bearing 10x15x4mmAXA1230Bearing 10x15x4mmAXA1392E2 e-clip (10pcs)AXA144M3x8mm Hex Socket Flat Head (Black) (10pcs)AXA146M3x12mm Hex Socket Flat Head (Black) (10pcs)AXA148M3x18mm Hex Socket Flat Head (Black) (10pcs)AXA149M3x18mm Hex Socket Flat Head (Black) (10pcs)AXA148M3x18mm Hex Socket Flat Head (Black) (10pcs)AXA149M3x18mm Hex Socket Flat Head (Black) (10pcs)AXA148M3x18mm Hex Socket Flat Head (Black) (10pcs)AXA148M3x18mm Hex Socket Flat Head (Black) (10pcs)AXA149M3x3mm Set Screw (Black) (10pcs)AXA140M3x3mm Set Screw (Black) (10pcs)AXA291M4x4mm Set Screw (Black) (6pcs.)
AXA1179O-Ring 2.5x1.5mm (10pcs)AXA118M3x18mm Hex Socket Button Head - Black (10pcs)AXA119M3x20mm Hex Socket Button Head (Black) (10pcs)AXA120M3x25mm Hex Socket Button Head (Black) (10pcs)AXA120M3x25mm Hex Socket Button Head (Black) (10pcs)AXA121Bearing 5x10x4mm (2pcs)AXA1221Bearing 5x11x4mm (2pcs)AXA1225Bearing 8x16x5mm (2pcs)AXA1230Bearing 10x15x4mmAXA1392E2 e-clip (10pcs)AXA144M3x8mm Hex Socket Flat Head (Black) (10pcs)AXA146M3x12mm Hex Socket Flat Head - Black (10pcs)BrakeAXA148AXA180M3x3mm Set Screw (Black) (10pcs)AXA291M4x4mm Set Screw (Black) (6pcs.)
AXA118M3x18mm Hex Socket Button Head - Black (10pcs)AXA119M3x20mm Hex Socket Button Head (Black) (10pcs)AXA120M3x25mm Hex Socket Button Head (Black) (10pcs)AXA120M3x25mm Hex Socket Button Head (Black) (10pcs)AXA1218Bearing 5x10x4mm (2pcs)AXA1221Bearing 5x11x4mm (2pcs)AXA1225Bearing 8x16x5mm (2pcs)AXA1230Bearing 10x15x4mmAXA1392E2 e-clip (10pcs)AXA144M3x8mm Hex Socket Flat Head (Black) (10pcs)AXA146M3x12mm Hex Socket Flat Head (Black) (10pcs)BrakeAXA148AXA180M3x3mm Set Screw (Black) (10pcs)AXA291M4x4mm Set Screw (Black) (6pcs.)
AXA119M3x20mm Hex Socket Button Head (Black) (10pcs)AXA120M3x25mm Hex Socket Button Head (Black) (10pcs)AXA121Bearing 5x10x4mm (2pcs)AXA1221Bearing 5x11x4mm (2pcs)AXA1225Bearing 8x16x5mm (2pcs)AXA1230Bearing 10x15x4mmAXA1392E2 e-clip (10pcs)AXA144M3x8mm Hex Socket Flat Head (Black) (10pcs)AXA146M3x12mm Hex Socket Flat Head - Black (10pcs)BrakeAXA148AXA180M3x3mm Set Screw (Black) (10pcs)AXA180M3x3mm Set Screw (Black) (10pcs)
AXA120M3x25mm Hex Socket Button Head (Black) (10pcs)AXA1218Bearing 5x10x4mm (2pcs)AXA1221Bearing 5x11x4mm (2pcs)AXA1225Bearing 8x16x5mm (2pcs)AXA1230Bearing 10x15x4mmAXA1392E2 e-clip (10pcs)AXA144M3x8mm Hex Socket Flat Head (Black) (10pcs)AXA146M3x12mm Hex Socket Flat Head - Black (10pcs)AXA148M3x18mm Hex Socket Flat Head (Black) (10pcs)AxA148M3x18mm Set Screw (Black) (10pcs)AXA291M4x4mm Set Screw (Black) (6pcs.)
AXA1218Bearing 5x10x4mm (2pcs)AXA1221Bearing 5x11x4mm (2pcs)AXA1225Bearing 8x16x5mm (2pcs)AXA1230Bearing 10x15x4mmAXA1392E2 e-clip (10pcs)AXA144M3x8mm Hex Socket Flat Head (Black) (10pcs)AXA146M3x12mm Hex Socket Flat Head - Black (10pcs)AXA148M3x18mm Hex Socket Flat Head (Black) (10pcs)BrakeAXA148AXA180M3x3mm Set Screw (Black) (10pcs)AXA180M3x3mm Set Screw (Black) (10pcs)
AXA1221Bearing 5x11x4mm (2pcs)AXA1225Bearing 8x16x5mm (2pcs)AXA1230Bearing 10x15x4mmAXA1392E2 e-clip (10pcs)AXA144M3x8mm Hex Socket Flat Head (Black) (10pcs)AXA146M3x12mm Hex Socket Flat Head - Black (10pcs)BrakeAXA148AXA180M3x3mm Set Screw (Black) (10pcs)AXA180M3x3mm Set Screw (Black) (10pcs)AXA291M4x4mm Set Screw (Black) (6pcs.)
AXA1225Bearing 8x16x5mm (2pcs)AXA1230Bearing 10x15x4mmAXA1392E2 e-clip (10pcs)AXA144M3x8mm Hex Socket Flat Head (Black) (10pcs)AXA146M3x12mm Hex Socket Flat Head - Black (10pcs)BrakeAXA148AXA180M3x3mm Set Screw (Black) (10pcs)AXA180M3x3mm Set Screw (Black) (10pcs)AXA291M4x4mm Set Screw (Black) (6pcs.)
AXA1230Bearing 10x15x4mmAXA1392E2 e-clip (10pcs)AXA144M3x8mm Hex Socket Flat Head (Black) (10pcs)AXA146M3x12mm Hex Socket Flat Head - Black (10pcs)BrakeAXA148AXA148M3x18mm Hex Socket Flat Head (Black) (10pcs)BrakeAXA148AXA180M3x3mm Set Screw (Black) (10pcs)AXA291M4x4mm Set Screw (Black) (6pcs.)
AXA1392E2 e-clip (10pcs)AXA144M3x8mm Hex Socket Flat Head (Black) (10pcs)AXA146M3x12mm Hex Socket Flat Head - Black (10pcs)BrakeAXA148M3x18mm Hex Socket Flat Head (Black) (10pcs)BrakeAXA148M3x18mm Hex Socket Flat Head (Black) (10pcs)(2pcs)AXA180M3x3mm Set Screw (Black) (10pcs)AXA291M4x4mm Set Screw (Black) (6pcs.)
AXA144M3x8mm Hex Socket Flat Head (Black) (10pcs)AXA146M3x12mm Hex Socket Flat Head - Black (10pcs)BrakeAXA148M3x18mm Hex Socket Flat Head (Black) (10pcs)(2pcs)AXA180M3x3mm Set Screw (Black) (10pcs)AXA291M4x4mm Set Screw (Black) (6pcs.)
AXA146M3x12mm Hex Socket Flat Head - Black (10pcs)BrakeAXA148M3x18mm Hex Socket Flat Head (Black) (10pcs)(2pcs)AXA180M3x3mm Set Screw (Black) (10pcs)AXA291M4x4mm Set Screw (Black) (6pcs.)
BrakeAXA148M3x18mm Hex Socket Flat Head (Black) (10pcs)(2pcs)AXA180M3x3mm Set Screw (Black) (10pcs)AXA291M4x4mm Set Screw (Black) (6pcs.)
(2pcs)AXA180M3x3mm Set Screw (Black) (10pcs)AXA291M4x4mm Set Screw (Black) (6pcs.)
AXA291 M4x4mm Set Screw (Black) (6pcs.)
AXA434 M3x8mm Hex Socket Tapping Button Head (Black) (10pcs)
pcs) AXA436 M3x12mm Hex Socket Tapping Button Head (Black) (10pcs)
Docs)
rew (Black) (6pcs)
pcs)

AX80010

AX80018

AX80030

AX80085

AX80086

AX80115 AX80129

AX80130

AX80131

AX8079

AXA0109

AXA0113

AXA013

AXA0286

Gear Set

Roll Cage Top

Helmet Set

Roll Cage Sides

Hardware Parts Tree

61-90 Schock Body Set

Light Bar Lenses (Clear) (5pcs)

Hub Cover Set - Black (4pcs)

M2x6 mm Cap Head (Black) (10pcs)

Screw Shaft M4x2.5x12mm (6pcs)

Universal Mount 5 Bucket Light Bar (Black)

Light Bar Lens Grills (Axial, PIAA, Un-Marked)

M3x10mm Oversized Flat Hex Socket (Black) (10pcs)

M3x6mm Hex Socket Button Head (Black) (10pcs)

Option Parts

Part #	Description
AX04033	2012 Jeep Wrangler Unlimited Rubicon™ Body040" (Clear) - Body Only
AX04035	2012 Jeep Wrangler Unlimited Rubicon [™] Body040" (Clear) - Complete
AX08138	1.9 Walker Evans Street Wheel - Black (2pcs)
AX08140	1.9 Walker Evans Wheels - Chrome/Black (2pcs)
AX12016	1.9 Ripsaw Tires - R35 Compound (2pcs)
AX12019	1.9 Maxxis Trepador Tires - R35 Compound (2pcs)
AX24003	20T Electric Motor
AX24007	55T Electric Motor
AX24010	Brushless 2900KV Electric Motor
AX24251	NVS - Night Visions System
AX24257	Simple LED Controller w/LED lights (4 White and 2 Red)
AX24260	AE-3 Vanguard ESC
AX30090	61-90mm Aluminum Shock Set - 7mm Piston (2pcs)
AX30103	Icon 61-90mm Aluminum Shock Set - 7mm piston (2pcs)
AX30114	Hard Anodized Aluminum Shock Reservoir (2pcs)
AX30115	Hard Anodized Aluminum Pre-load collar (2pcs)
AX30117	Hard Anodized Aluminum Shock Body 10x38mm (2pcs)
AX30130	Icon Clear Anodized Aluminum Shock Body 10x38mm (2pcs)
AX30131	Icon Clear Anodized Aluminum Shock Reservoir (2pcs)
AX30132	Machined Shock Piston 7mm - 1.5x3 (4pcs)
AX30201	Spring 12.5x20mm 4.32 lbs/in - White (2pcs)
AX30202	Spring 12.5x20mm 5.44 lbs/in - Green (2pcs)
AX30203	Spring 12.5x20mm 6.53 lbs/in - Yellow (2pcs)
AX30204	Spring 12.5x20mm 7.95 lbs/in - Blue (2pcs)
AX30205	Spring 12.5x40mm 2.7 lbs/in - Red (2pcs)
AX30206	Spring 12.5x40mm 3.6 lbs/in - White (2pcs) Spring 12.5x40mm 5.44 lbs/in - Yellow (2pcs)
AX30208 AX30209	Spring 12.5x40mm 5.44 ibs/in - feliow (2pcs) Spring 12.5x40mm 6.81 lbs/in - Blue (2pcs)
AX30209 AX30487	AX10 Locked Transmission Set
AX30487 AX30488	AX10 Locked Axle Set
AX30516	Threaded Aluminum Pipe 6x106mm - Grey (2 pcs.)
AX30510	Threaded Aluminum Pipe 6x33mm - Grey (2 pcs.)
AX30524	Threaded Aluminum Pipe 6x91mm - Grey (2pcs)
AX30547	1.9 Internal Wheel Weight Ring 43g/1.5oz (2pcs)
AX30548	1.9 Internal Wheel Weight Insert 9g/0.33oz (4pcs) (for use with AX30547)
AX30708	AX10 Locked Transmission - Complete Metal Gear Set - Steel (3pcs)
AX30709	Universal 5 Bucket Light Bar Set
AX30794	WB8 Driveshaft Set (2pcs)
AX30834	Aluminum Servo Horn 23T
AX30835	Aluminum Servo Horn 24T
AX30836	Aluminum Servo Horn 25T
AX31047	Brushless 3150KV Electric Motor
AX31093	1.9 BFGoodrich Krawler T/A - R35 Compound (2pcs)
AX31094	1.9 Black Rock CRC Wheels - Black (2pcs)
AX31097	3 Port High Output LED Controller
AX31150	SCX10 Wheel Wells040_ (Clear)
AX31152	Universal Rigid Light Bar Set
AX31176	Spawn Body040" (Clear)
AX31250	M4 Serrated Nylon Lock Nut (Black) (10pcs)
AX31267	Jeep [®] NuKizer 715 Body040" (Clear)
AX31268	Jeep [®] Mighty FC Body040" (Clear)
AX31329	35T Trail Breaker Electric Motor (Rebuildable)
AX31330	55T Trail Breaker Electric Motor (Rebuildable)
AX31337	2000 Jeep [®] Cherokee Body040" (Clear) - Body Only
AX31395	JCROffroad Roof Rack
AX31405	Heavy Duty Bevel Gear Set - 30T/8T
AX31412	1.9 BFGoodrich All-Terrain T/A KO2 - R35 Compound (2pcs)
AX31415	1.9 Method Mesh Wheels - Black (2pcs)
AX31438	AR44 Locked Axle Set (Front or Rear) Complete SCX10 Transmission Set (Complete)
AX31439 AX31442	Spring 12.5x60mm 3.03 lbs/in - Blue (2pcs)
	Spring 12.5x60mm 1.70 lbs/in - Green (2pcs)
AX31443 AX31444	Spring 12.5x60mm 0.70 lbs/in - Green (2pcs) Spring 12.5x60mm 0.70 lbs/in - Red (2pcs)
AX31444 AX31465	SCX10 II Front Links Set (Aluminum)
AX31465 AX31466	SCX 10 II Front Links Set (Aluminum) SCX10 II Rear Links Set (80mm, 94mm, 101.5mm) (Aluminum)
AX31400 AX31480	AE-5L ESC w/LED Ports and Lights (2 White, 4 White, 2 Red)
AX31480 AX31546	Trail Honcho Truck Body040" Uncut (Clear)
AX31540 AX31570	CRC JK Rear Bumper
AX31578	2017 Jeep [®] Wrangler Unlimited Rubicon Hardtop Body050" (Clear)
AX31585	Gear Set (48P 28T, 48P 52T)
AX31587	1.9 KMC XD Machete Crawl Wheels - Black (2pcs)

Part # Description

AX4010	Axial Dingo Truck Body040" uncut (Clear)
AX4010R	Axial Dingo Truck Body040" uncut (Clear) - Body Only
AX4025	Trail Honcho Truck Body040" uncut (Clear) w/Molded Rear Cage
AX80045	Axial Light Bucket Set (Black)
AX80044	SCX10 Tube Bumper Parts Tree
AX80047	Interior Details Parts Tree - Chrome
AX80048	Exterior Detail Parts Tree - Chrome
AX80128	Wheel Hub Adapters (2pcs Narrow, 2pcs Wide)
AX8080	Axial Hub Cover Set - Satin Chrome (4pcs)
AX8087	1.9 8 Hole Beadlocks - Black (2pcs)
AX8088	1.9 8 Hole Beadlocks - Satin Chrome (2pcs)
AXA1046	M4 Serrated Nylon Lock Nut (Blue) (4pcs)
AXA1076	Cap Head Washer M3x10mm (4pcs)
AXA1105	Cone Washer 3x6.9x2mm - Grey (6pcs)
AXA1331	Flanged Ball 3x5.8x7mm (6pcs)





EXPLORE

facebook.com/axialinc | instagram.com/axialracing | twitter.com/axialrc youtube.com/axialvideos | flickr.com/axialrc



Nitto® and Trail Grappler® are registered trademarks of Nitto Tire U.S.A., Inc.

©2018 Axial R/C, Inc. A subsidiary of Hobbico, Inc. All Rights Reserved.