

Parkzone Extra 300

It has come to our attention that the Phillips head nut that holds the wheel and wheel pants on the airplane can vibrate loose. We recommend removing the wheel nuts and applying thread-lock to the nuts and re-secure. Apply the thread-lock to the inside of the wheel nut to prevent thread-lock from binding the wheel.

1. Remove the wheel nut with a Phillips screwdriver.





2. Apply a small amount of thread-lock to the inside of the wheel nut.



3. Install the wheel nut and allow the thread-lock to thoroughly dry.

