

HEIGHT: 80mm TYRE: Ø36mm(width) LENGTH: 208mm WIDTH: 112mm WHEELBASE: 119mm














**TOOLS RECOMMENED** (NOT INCLUDED)

## WHAT'S IN THE BOX

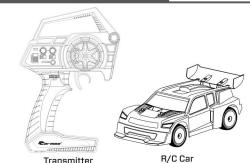





58T

(O)

(O)

Long Nose Pliers



**Nippers** 

Soft Brush



4 x AA Batteries

Wrench



Screwdrive

(Small)

USB Charger



Linkage





Pinion Gear 14T

visit us on www.carisma.com.hk Also avaliable at www.carisma-shop.com

©2015 Carisma. All Rights Reserved. Product specifications are subject to change. Some models shown are prototypes which may vary slightly from what is inside. Printed in China MAN-G00613





## **SAFETY PRECAUTIONS**



## SAFETY PRECAUTIONS

THIS MODEL IS ONLY SUITABLE FOR PEOPLE 14 YEARS OLD AND UP.

#### THIS RADIO CONTROL MODEL IS NOT A TOY.

Beginner should seek advice from experienced person in order to assemble the model or parts correctly and to make best performance.

Assemble this model or parts only in place out of children's reach, and take safe precautions before operating this model. User is fully responsible for the model assembly and safe operations.

#### Introduction

This is a sophisticated hobby product and not a toy. It must be operated with caution and common sense. User also requires some basic mechanical abilities. Fail to operate this product in a safe and responsible manner could result in injury or do damage to the product or other properties. This product is not intended for use by children without direct adult supervision. The product manual contains instructions for safe operation and maintenance. It is essential to read and follow all the instructions and warnings in the manual prior to assembly, setup or use, in order to operate correctly and avoid

#### Safety, Precautions, and Warnings

As the user of this product, you are solely responsible for operating it in a manner that does not endanger yourself and others or result in damage to the product or the property of others.

This model is controlled by a radio signal that is subject to interference from many sources outside your control. This interference can cause momentary loss of control so it is necessary to always keep a safe distance in all directions around your model, as this will help to avoid collisions or injury.

- · Always operate your model in an open area away from cars, traffic, or people.
- Avoid operating your model on the street where injury or damage can occur.
- Never operate the model out into the street or populated areas for any reason. Never operate your model with low transmitter batteries.
- Carefully follow the directions and warnings for this product and any optional support
- equipments (chargers, rechargeable battery packs, etc.) that you use.
- Keep all chemicals, small parts and anything electrical out of the reach of children.
- Moisture causes damage to electronics. Avoid water exposure to all equipments not specifically designed and protected for this purpose.

#### CE Compliance Information For The European Union

The associated regulatory agencies of the following countries recognize the noted certifications for this product as authorized for sale and use.

UK	DE	DK	BG	SE	cz	ES	NL	SK	HU	RO	FR	PT
FI	EE	LV	LT	PL	AT	CY	SI	GR	MT	IT	IE	LU

**Declaration of Conformity** 

Products: Carisma CTX-8000 2.4GHz Transmitter, MRS-24BL Receiver

Equipment Class: 2

The objects of declaration described above are in conformity with the requirements of the specifications listed below.

Item Name: Carisma CTX-8000 2.4GHz Transmitter and MRS-24BL Receiver

EN 301 489-1 V1.9.2 EN 301 489-17 V2.2.1 ETSI EN 300 328 V1.8.1

Directive 1999/5/EC (R&TTE) Article 3.1a Health Article 3.1b EMC

Article 3.2 Radio Spectrum

#### FCC ID YDTCTX-8000

Statement - This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

#### RF Exposure Warning:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. And should be operated with minimum distance of 20 cm between the antenna & your body.

Manufactured By: Mun Ah Plastic Electronic Toys Company.,Ltd

## ABOUT THE RADIO SYSTEM

#### Carisma CTX-8000 2.4GHz FHSS Technology System

The following is an overview of the various functions and adjustments found on CTX-8000 radio system for Carisma models. It is important to read and understand about all of these functions and adjustments before driving

#### **FUNCTIONS**

#### TRANSMITTER CTX-8000

Steering Wheel: Control direction (Left/Right) of the RC model.

Throttle Trigger: Control speed and direction (Forward/Brake/Backward) of the driving model.

ON / OFF Switch: Power ON / OFF the transmitter.

FTN Key: Is used to synchronize the connection between the transmitter and the receiver. It also serves as additional function on different model.

LED Indicator: Green and Red color for indicating battery low, pairing in progress, End-Points setting and normal operation.


ATV: Adjust the maximum steering angle on both sides when model turns Left / Right.

ST. Trim Dial: Adjust the neutral position of steering servo when model wheels are straight ahead.

TH. Trim Dial: To adjust the throttle position

Steering Reverse: Reverse the response direction when operating Steering Wheel. Throttle Reverse: Reverse the response direction when operating Throttle Trigger.

\* In general, user will experience under steer when making a wide turn at high speed or over steer when making sharp turn at high speed (easy to spin out). User should practice the Throttle and steering approach for different cornering at different speed or road surface.

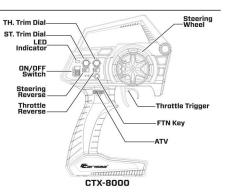

#### **Battery Installation**

1. Supplied with 4 x 1.5V AA Batteries, radio can be operated a few hours. Installation: Remove the battery compartment cover as shown below



2.Install the batteries observing the polarity marked on battery compartment



3.Then reinstall the battery compartment cover as the Picture shown below.

# damages.

#### Warning:

Never disassemble batteries or put the batteries in fire, chemical agents, otherwise they may cause personal injuries or property

#### Battery Disposal:

Observe corresponding regulations about wasted battery treatment regulations.

 
- 1. After running out of power, dispose of wasted batteries in designated areas far away from water supply, household areas and planted areas.
- 2 Submit the wasted batteries to specific recycling stations.

#### **Battery LED Indicator**

The Green LED indicator located on the front left side of the transmitter indicates the power supply of batteries. The green LED will go solid on indicating that the batteries have sufficient power. When batteries voltage drops below 4 volts, LED will turn to Flashing RED, indicating the batteries power is low and should be replaced.




Flashing RED: Time to replace batteries




#### ATV

 ATV enables to adjust the maximum steering angle of servo on both sides (Left and Right) when model makes steering. The ATV affects the sensitivity of servo. Reducing dual rate value can lower the sensitivity of servo and reduce the same maximum steering angle on both sides. Remember to adjust the ATV within the adjustment range



#### Pre-Run Check

 

l. Steering : Adjust the steering trim to keep the front wheels in straight line when steering wheel remains in NEUTRAL position.

2. Throttle: Adjust the throttle trim to ensure the rear wheels stop rotating when throttle trigger remains in NEUTRAL position.

\* Always turn on the transmitter first by sliding the switch on the left side from bottom to top. The small red and green lights above the switch should both light up. If not, you need to check for low or incorrectly installed batteries.

#### Reversing

Reversing is used to change the response direction of steering wheel and throttle trigger. This Transmitter features 2 reversing functions: Steering Reverse and Throttle Reverse

Steering Reverse: Reverse the response direction when operating steering wheel. Turning left steering wheel, the model turns right while turning right the model turns left.

Throttle Reverse: Reverse the response direction when operating throttle trigger. Pushing forward throttle trigger the model moves backward while pulling back, the model moves forward. If necessary you can just use a small screwdriver to adjust the or responding switches.



#### Throttle Limiter

Installed the Throttle limiter can reduced Throttle travel by 30% Ideal for beginner




## RECEIVER CONNECTION AND INSTALLATION

#### Carisma MRS-24BL RX/ESC Unit Synchronization

#### To Sync the Radio to the Car


STEP 1: Locate the SYNC button on the main chassis by removing the body (the Round button)

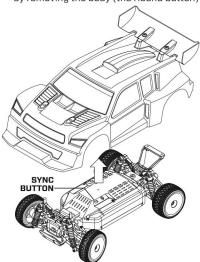


STEP 2: Keep the Radio Power to OFF Position



STEP 3: Press and HOLD the Chassis SYNC Round Button while Power ON

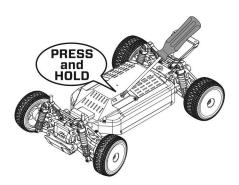


STEP 4: The LED will flash, release the SYNC button

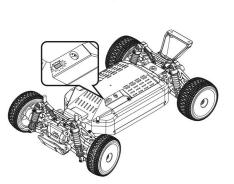


◆ ON OFF

STEP 5: PRESS and HOLD the FTN Key on the transmitter and Power ON

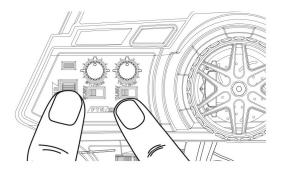

## RECEIVER CONNECTION AND INSTALLATION

STEP 6: The Transmitter will now Connect with the Car. STEP 7: LED ON SOLIDLY and its now READY to play

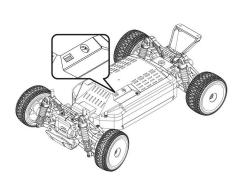




## MRS-24BL RX/ESC UNIT SETUP


#### **ESC SETUP**

Just use the TH. Trim to locate the Neutral Position. Nothing else to set.

 The ESC is a Forward and Brake/Reverse function.



## **Neutral Position**

 

## **WARNING:**

Maximum is 2S LiPo (7.4V) DO NOT EXCEED this voltage, otherwise will damage and void warranty.

## CARISMA MRS-24BL RX/ESC UNIT FEATURES

#### Receiver (RX) Section

2.4GHz Receiver: HOLD the SYNC button while power up to start pairing to Transmitter.

#### ESC Section

**Brushless motor :** Connect Brushless Motor's Micro 3-wire connector to the ESC.

Over Voltage Protection: If battery voltage above 8.8V, ESC will STOP operation.

- Auto cut-off voltage:
- 1S LiPo, cut-off voltage = 3.6V
- 2S LiPo, cut-off voltage = 6.6V

Thermal Protection: Temperate at Thermal sensor approx 80-100°C

Motor Overloading and Stall Detection: Cut-off time is depending on Battery voltage, Motor loading condition, Throttle level, etc.

#### Max Reverse Speed: 50%

Smart Brake: When Throttle move from Forward to Backward, the ESC will apply Brake for certain of time, and then drive motor at Reverse direction. Similarly for Throttle move from Backward to Forward. The time of Braking inserted is depended on what is the current speed of the motor.

RX Power OFF reminder: After Loss of RF signal over 5 sec., will use LED and servo to warn the user to POWER OFF the car

- · LED quickly Flashed 2 times per 2 sec.
- · Servo will be moved once shortly per 10 sec.

LED indicator: Indicator the TX is detected


## FRONT & REAR WHEEL ASSEMBLY

# 2 15639/ 15640 15639/ 15640 15639/

#### GT24R-01


ITEM NO.		DESCRIPTION
1	15639	GT24 MEENI PINS RALLY FRONT TIRES
2	15639	GT24 MEENI PINS RALLY REAR TIRES
3	15652	GT24 BLACK FRONT WHEEL
4	15652	GT24 BLACK REAR WHEEL

## SERVO SAVER ASSEMBLY

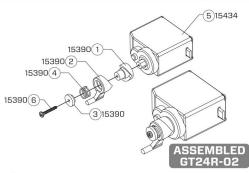


ITE	EM NO.	DESCRIPTION
1	15390	SERVO HORN ADAPTOR
2	15390	SERVO HORN
3	15390	SERVO SPACER
4	15390	SERVO SPRING
5	15434	MS-24B SERVO
6	15390	SCREW 1.2x8PB

## CENTER DRIVE ASSEMBLY

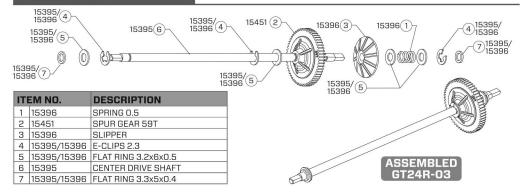


## **GEAR DIFFERENTIAL ASSEMBLY**

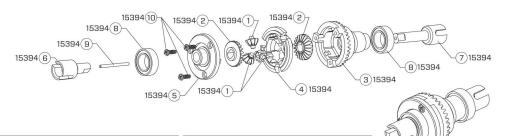


IT	EM NO.	DESCRIPTION	ш	EM NO.	DESCRIPTION
1	15394	9T BEVEL GEAR	6	15394	DIFFERENTIAL OUTDRIVE(SHORT)
2	15394	21T BEVEL GEAR	7	15394	DIFFERENTIAL OUTDRIVE(LONG)
3	15394	DIFFERENTIAL HOUSING A	8	15394	BEARING 6x10x3mm
4	15394	DIFFERENTIAL HOUSING B	9	15394	ADAPTOR PIN
5	15394	DIFFERENTIAL HOUSING C	10	15394	SCREW 1.4x4PB

## ASSEMBLED GT24R-04


## FRICTION DAMPER ASSEMBLY

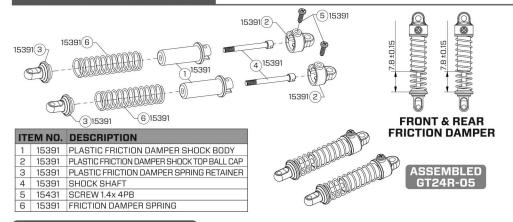

### MOTOR MOUNT ASSEMBLY

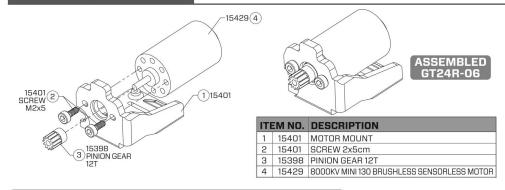


## FRONT GEAR BOX & SUSPENSION ARMS ASSEMBLY

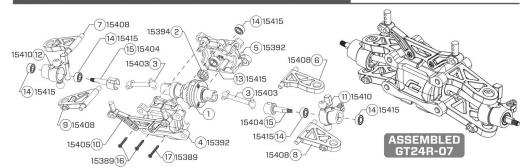


ITI	EM NO.	DESCRIPTION
1	GT24R-04	GEAR DIFFERENTIAL ASSEMBLED
2	15394	14T BEVEL GEAR
3	15403	DOG BONE
4	15392	FRONT GEAR BOX A
5	15392	FRONT GEAR BOX B
6	15408	UPPER SUSPENSION ARM FL
7	15408	UPPER SUSPENSION ARM FR
8	15408	LOWER SUSPENSION ARM FL
9	15408	LOWER SUSPENSION ARM FR

ITI	EM NO.	DESCRIPTION
10	15405	FRONT SHOCK TOWER
11	15410	FRONT HUB L
12	15410	FRONT HUB R
13	15415	BEARING 4x7x2.5
14	15415	BEARING 3x6x2.5
15	15404	OUTDRIVE SHAFT
16	15389	SCREW 1.4x8PB
17	15389	SCREW 1.4x10PB

## FRONT GEAR BOX & FRICTION DAMPER ASSEMBLY

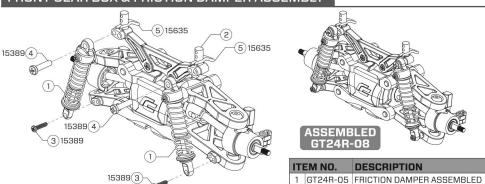

## REAR GEAR BOX & SUSPENSION ARMS ASSEMBLY

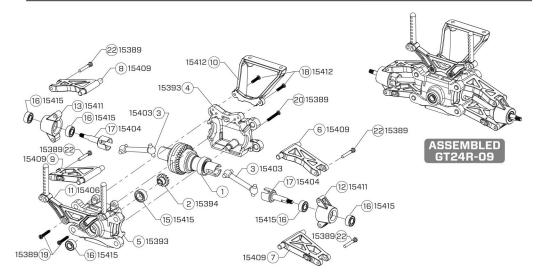

ITI	EM NO.	DESCRIPTION
1	GT24R-04	GEAR DIFFERENTIAL ASSEMBLED
2	15394	14T BEVEL GEAR
3	15403	DOG BONE
4	15393	REAR GEAR BOX A
5	15393	REAR GEAR BOX B
6	15409	UPPER SUSPENSION ARM RL
7	15409	LOWER SUSPENSION ARM RL
8	15409	UPPER SUSPENSION ARM RR
9	15409	LOWER SUSPENSION ARM RR
10	15412	REAR WING MOUNT

ITE	EM NO.	DESCRIPTION
11	15406	REAR SHOCK TOWER
12	15411	REAR HUB L
13	15411	REAR HUB R
14	15415	BEARING 4x7x2.5
15	15415	BEARING 3x6x2.5
16	15404	OUTDRIVE SHAFT
17	15412	SCREW 1.4x6PB
18	15389	SCREW 1.4x8PB
19	15389	SCREW 1.4x10PB
20	15412	SCREW 2x5PWM

2 GT24R-07 F.GEAR BOX & SUSPENSION ARMS ASSEMBLED

SCREW 1.4x6PB

SCREW 2x8PM


MICRO CAR BODY CLIP

3 15389


4 15389


5 15635

## REAR GEAR BOX & FRICTION DAMPER ASSEMBLY

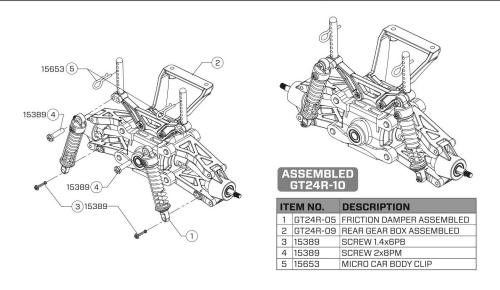




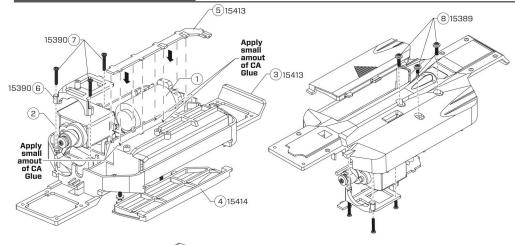


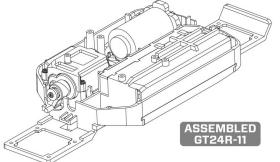


ITI	EM NO.	DESCRIPTION
1	GT24R-06	MOTOR MOUNT ASSEMBLED
2	GT24R-02	SERVO SAVER ASSEMBLED
3	15413	CHASSIS
4	15414	BATTERY COVER
5	15413	CHASSIS INSERT
6	15390	SERVO MOUNT
7	15390	SCREW 1.4x8PB
8	15389	SCREW 1.6x6PWB


## MAIN CHASSIS ASSEMBLY

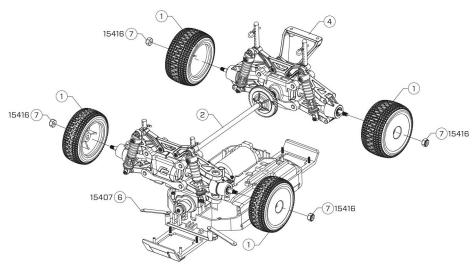

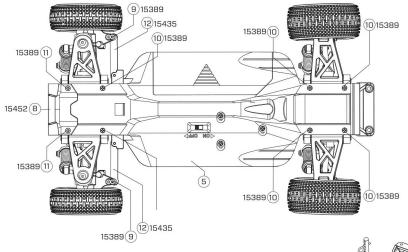

ITI	EM NO.	DESCRIPTION
1	GT24R-01	FRONT & REAR WHEEL ASSEMBLED
2	GT24R-03	CENTER DRIVE ASSEMBLED
3	GT24R-08	FRONT GEAR BOX & FRICTION DAMPER ASSEMBLED
4	GT24R-10	REAR GEAR BOX & FRICTION DAMPER ASSEMBLED
5	GT24R-11	MAIN CHASSIS ASSEMBLED
6	15407	STEERING LINK
7	15416	PLASTIC SCREW NUT
8	15452	FRONT BUMPER
9	15389	SCREW 1.4x5PM
10	15389	SCREW 1.4x6KB
11	15389	SCREW 1.4x8KB
12	15435	STEERING LINKAGE

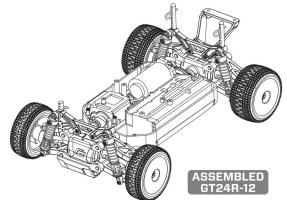


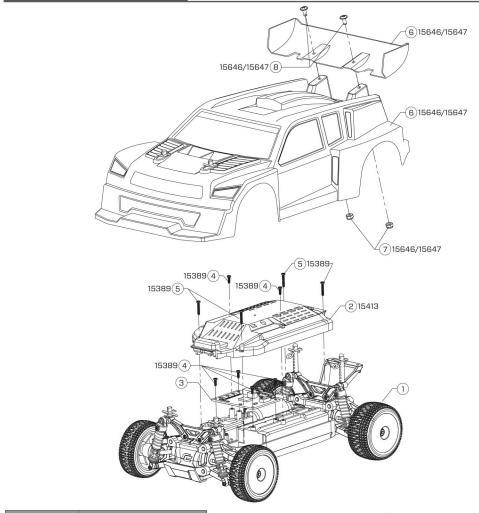

	TEM NO.	DESCRIPTION
1	GT24R-12	MAIN CHASSIS ASSEMBLED
2	15413	COVER
3	MRS-24BL	RECEIVER/ESC UNIT
4	15389	SCREW 1.4x4PB
5	15389	SCREW 1.4x8PB
E	15646/15647	GT24R CAR BODY
7	15646/15647	M2 SET SCREW
8	15646/15647	SCREW 2x5PWM(D=5)



## **BATTERY PACK & CHARGER MANUAL**

 

#### WARNING

To reduce the risk of fire, electric shock or injury, carefully follow these instructions.

This manual contains important safety and operating instructions for your charger. Before using the battery charger, read all the following in this instructions manual on the battery chargers and the rechargeable batteries to be charged, and on the products that use the rechargeable batteries.

THIS BATTERY CHARGER (MBC-2010) HAS BEEN DESIGNED TO SAFELY CHARGE A 1S 3.7V Li-Po BATTERY.

## THIS IS FOR 1S LIPO BATTERY ONLY DO NOT CHARGE 2S LIPO BATTRY

#### Charging

- Please follow these steps to charge your 1S 3.7V Li-Po battery.
- 1. Insert the charger into a USB port. The charger only uses power from the USB port, it will not connect to your computer.
- 2. Connect the battery to the charger. When you make the connection successfully, the ORANGE LED on the charger turns ON, indicating charging has begun. The light goes out when the charge is completed.

- The battery pack cannot be fully charged when it in low temperate environment.
- To charge a very hot after use battery pack can permanently lose its ability to charge.
- · Unplug the charger before attempting any maintenance or cleaning.

#### CAUTION

- . The battery charger is not a toy.
- Never let the charger or battery pack get wet or damp.
- Overcharging can damage the battery pack. Follow the indicated recharging time.
- Check the batteries regularly for leakage.
- · Non-rechargeable batteries are not to be recharged
- Do not disassemble the charger. Take it to a qualified service technician when service or repair is required. Improper reassembly may result in a risk of fire, electric shock, or injury to persons.
- · Do not recharge the battery pack while it is still hot after use. Wait until it has cooled down before recharge.
- Use only the recommended batteries or batteries of equal quality.
- . Do not short circuit all cables should be insulated. If necessary, use vinyl tape for insulation (NOT INCLUDED).
- Do not leave battery pack charger unattended when charging.
- The supply terminals are not to be short-circuited.

- · Packing has to be kept since it contains important information.
- Do not expose the charger to rain or excessive moisture.
- Do not operate the charger if it has received a sharp blow, or been dropped or damaged in any way. Take it to qualified service technician to repair.
- To reduce the risk of damage to the cord, disconnect the charger by pulling plug rather than the cord.
- Do not use an extension cord. It could result in fire or electric shock
- Do not operate the charge if the cord or plug is damaged. Repair the charger. Never alter the provided cord or plug. Never use the charger as a DC power source for any other electrical equipments.
- · Rechargeable battery pack can explode if under incorrectly or non
- Always observe the polarity to correctly connect: Positive (+) to Positive (+) Negative (-) to Negative (-).

## SPARE PARTS LIST

**GT24B CENTER DRIVE SHAFT SET** 

FLAT RING 3.2x6x0.5

CENTER DRIVE SHAFT

GT24R PINION GEAR 12T

FLAT RING 3.3x5x0.4

E-CLIPS 2.3



15396

SLIPPER

SPRING 0.5

E-CLIPS 2.3

**GT24B SLIPPER SET** 

FLAT RING 3.2x6x0.5

FLAT RING 3.3x5x0.4

4892793153959





4892793153966 15397 4892793153973 GT24B SPUR GEAR 58T

SPUR GEAR 58T SLIPPER



4892793153980 **GT24B PINION GEAR 12T** 

15399 **GT24B PINION GEAR 13T** 



 
4892793153997 GT24B PINION GEAR 13T



**GT24B PINION GEAR 14T** 

GT24B PINION GEAR 14T

## **SPARE PARTS LIST**



15389 4892793153898 **GT24B HARDWARE SET** 

SCREW 1.4x4 PB	16
SCREW 1.4x8 PB	11
SCREW 1.4x10 PB	2
SCREW 1.4x6 PB	6
SCREW 2x8 PM	4
SCREW 2x5 PWM	2
SCREW 1.4x10 PB	4

SCREW 1.6x6 PWB SCREW 1.4x6 KM SCREW 1.4x6 KB SCREW 1.4x8 KB(D=2.5) SCREW 2x5 CM SCREW 1.2x8 PB



15390 4892793153904 CT2/P SERVO SAVER AND MOUNT

GIE-16 SERVO SAVER AND MOUNT		
SERVO HORN ADAPTOR	1	SERVO MOUNT
SERVO HORN	1	SCREW 1.4x8 PB
SERVO SPACER	1	SCREW 1.2x8 PB
SERVO SPRING	1	
SERVO SPRING	1	



15391 4892793153911 GT24B SHOCK ASSEMBLED (PR.) GT24B SHOCK ASSEMBLED



**GT24B MOTOR MOUNT SET** MOTOR MOUNT SCREW 2x5 CM SCREW 1.6x6 PWB WASHER 3.5x2x0.5mm



GT24B DIFFERENTIAL OUTDRIVE SET DIFFERENTIAL OUTDRIVE (SHORT) DIFFERENTIAL OUTDRIVE (LONG)



**GT24B DOG BONE PAIR** DOG BONE

4892793154031 2



15404 4892793154048 GT24B OUTDRIVE SET OUTDRIVE SHAFT



15405 4892793154055 GT24R FRONT SHOCK TOWER FRONT SHOCK TOWER



15406 4892793153812 GT24R REAR SHOCK TOWER 1 REAR SHOCK TOWER



15392 4892793153928 **GT24B FRONT GEAR BOX HOUSING** FRONT GEAR BOX A FRONT GEAR BOX B

4892793153935 15394 **GT24B REAR GEAR BOX HOUSING** 


REAR GEAR BOX A REAR GEAR BOX B



9T BEVEL GEAR 3 | DIFFERENTIAL OUTDRIVE 1 21T BEVEL GEAR 2 (LONG) DIFFERENTIAL HOUSING A 1 BEARING 6x10x3 DIFFERENTIAL HOUSING B ADAPTOR PIN DIFFERENTIAL HOUSING C. SCREW 14x4 PR DIFFERENTIAL OUTDRIVE 1 14T REVEL GEAR


12

## SPARE PARTS LIST

 


15407 4892793154079 GT24B STEERING LINKAGE

 STEERING LINKAGE STEERING LINK SCREW 1.4x5 PM



15408 4892793154086 15409 GT24B FRONT SUSPENSION ARM SET

 UPPER SUSPENSION ARM FL UPPER SUSPENSION ARM FR LOWER SUSPENSION ARM FL LOWER SUSPENSION ARM FR



4892793154093

GT24B REAR SUSPENSION ARM SET UPPER SUSPENSION ARM RL UPPER SUSPENSION ARM RR LOWER SUSPENSION ARM RL LOWER SUSPENSION ARM RR



15429 4892793154291 15431 8000KV MINI 130 BRUSHLESS SENSORLESS MOTOR GT24B LIPO BATTERY 3.7V 500mAh

8000KV MINI 130 BRUSHLESS SENSORLESS

SPARE PARTS LIST



4892793154314

1 LIPO BATTERY 3.7V 500mAh



15434 4892793154345 **GT24B REPLACEMENT SERVO** 

1 MS-24B SERVO



15410 **GT24B FRONT HUB SET** 

FRONT HUB L FRONT HUB R



 
REAR HUB R

15411 4892793154116 **GT24B REAR HUB SET** REAR HUB L



15412 GT24B REAR WING MOUNT SET

REAR WING MOUNT 1 SCREW 2x5 PWM SCREW 1.4x6 PB



15435 4892793154352

**GT24B STEERING LINKS SET** STEERING LINKAGE



15451 GT24B SPUR GEAR 59T SPUR GEAR 59T



**GT24B FRONT BUMPER SET** 

FRONT BUMPER

4892793154130 GT24B CHASSIS AND COVER SET


CHASSIS CHASSIS INSERT COVER SCREW 1.4x4 PB

SCREW 1.4x8 PB



4892793154147 15415 GT24B BODY POST AND BATTERY COVER BATTERY COVER

 SCREW 1.4x6 KB **BODY POST** 



GT24B BEARING SET

BEARING 3x6x2.5 BEARING 4x7x2.5 1 BEARING 6x10x3

4892793154154

10



4892793154550 GT24B LIPO 1S BATTERY USB CHARGER

MBC-2010 USB CHARGER



GT24B ESC/RX MODULE MRS24BL RX/ESC/SERVO



4892793156257 15639 4892793156394 **GT24R MEENI PINS RALLY TIRES** GT24R MEENI PINS RALLY TIRES FRONT

GT24R MEENI PINS RALLY TIRES REAR



4892793154161 GT24B PLASTIC SCREW NUT FOR WHEEL PLASTIC SCREW NUT



4892793154208 15426 15420 GT24B SPRING MIDDLE FOR PLASTIC FRICTION GT24B METAL PINION GEAR 12T DAMPER (PAIR)

PLASTIC OIL-SHOCK SPRING MIDDLE



4892793154260 METAL PINION GEAR 12T

15640 4892793156400 GT24R MEENI PINS RALLY TIRES SET MOUNTED FRONT 2 GT24R CAR BODY(BLUE) GT24R MEENI PINS RALLY TIRES SET MOUNTED REAR 2 CARISMA LOGO SHEET



15646 4892793156462 15647 GT24R MEENI PINS RALLY TIRES SET MOUNTED GT24R PAINTED AND DECORATED BODY(BLUE) GT24R PAINTED AND DECORATED BODY(RED)



GT24R CAR BODY(RED) CARISMA LOGO SHEET

## SPARE PARTS LIST



15648 GT24R CLEAR CAR BODY GT24R CLEAR CAR BODY





4892793156493 15652

GT24R CLEAR REAR WING SET GT24R CLEAR REAR WING SCREW 2x5PWM(D=5) M2 SCREW NUT



GT24 BLACK WHEEL FRONT 2 GT24 BLACK WHEEL REAR





4892793156523

15653 4892793156530

MICRO CAR BODY CLIP SNAP PIN

**OPTION PARTS** 

**GT24R CAR BODY DECAL SHEET** 

GT24R CAR BODY DECAL SHEET

## 15654 4892793156547



48927931544178 15418 GT24B METAL DOG BONE PAIR

METAL DOG BONE

4892793154185 GT24B ALUMINUM ADJUSTABLE OIL-SHOCK SET (PAIR)

 
OIL SHOCK SPRING RETAINER 2 O-RING OIL SHOCK BODY ADJUSTABLE RING OIL SHOCK SHAFT

OIL SHOCK TOP BALL CAP 2 | OIL SHOCK SPRING OIL SHOCK CARTRIDGE GEAR 2 OIL SHOCK VALVE



4892793154192 GT24B SPRING SOFT FOR PLASTIC FRICTION DAMPER (PAIR)

PLASTIC OIL-SHOCK SPRING SOFT



4892793154215 15422 15421 GT24B SPRING HARD FOR PLASTIC FRICTION DAMPER (PAIR)

PLASTIC OIL-SHOCK SPRING HARD



4892793154222 GT24B SPRING SOFT FOR METAL OIL-SHOCK (PAIR) METAL OIL-SHOCK SPRING SOFT



15423 4892793154239 GT24B SPRING HARD FOR METAL OIL-SHOCK (PAIR) METAL OIL-SHOCK SPRING HARD

## **OPTION PARTS**



4892793154246 15425 GT24B CF FRONT SHOCK TOWER SET

CF FRONT SHOCK TOWER SCREW 1.4x6 PB SPACER M2 SCREW NUT

SCREW 2x12 PM



GT24B CF REAR SHOCK TOWER SET

CF REAR SHOCK TOWER SCREW 1.4x6 PB

SPACER

M2 SCREW NUT SCREW 2x12 PM



4892793154253

METAL PINION GEAR 13T

15428

**GT24B METAL PINION GEAR 14T** METAL PINION GEAR 14T

**GT24B METAL PINION GEAR 13T** 



4892793154307 15432 12000KV MINI 130 BRUSHLESS SENSORLESS MOTOR GT24B LIPO BATTERY 2S 7.4V 350mAh 12000KV MINI 130 BRUSHLESS

SENSORLESS MOTOR



4892793154321 LIPO BATTERY 2S 7.4V 350mAh



4892793154277

4892793154284

**GT24B WHITE WHEELS** GT24B WHITE WHEELS FRONT GT24B WHITE WHEELS REAR



4892793156363 15637 GT24B WHITE WHEELS/TIRES MOUNTED

4892793156370 GT24B ORANGE WHEELS/TIRES MOUNTED GT24B WHITE WHEELS/TIRES MOUNTED FRONT 2 GT24B ORANGE WHEELS/TIRES MOUNTED FRONT 2 GT24B WHITE WHEELS/TIRES MOUNTED RAR 2 GT24B ORANGE WHEELS/TIRES MOUNTED RAR 2 GT24B GREEN WHEELS/TIRES MOUNTED RAR 2



GT24B GREEN WHEELS/TIRES MOUNTED



4892793156509 15651 GT24B SPRING MEDIUM FOR METAL OIL-SHOCK (PAIR) GT24B ALUM SHOCK SHAFT (PAIR) GT24B SPRING MEDIUM FOR METAL OIL-SHOCK 2 GT24B ALUM SHOCK SHAFT (PAIR)



4892793156516

