





COUNTDOWN AND LAUNCH ESTES® LAUNCH SUPPLIES NEEDED NOTE: (Sold Separately) Key always out until · Launch Pad final countdown! · Launch Controller · Recovery Wadding Starters (with engines) · Plugs (with engines) • Estes® Engines: A8-3, B4-4, B6-4, C6-5, C6-7 4. Fully extend your launch controller wire before launching. 6 MASKING TAPE Insert key, push down hard. Bulb will light. While holding key down FIRMLY, press launch button until LIFTOFF! NOTE: Estimated weight: 1.8 oz. (51 g)

PRECAUTIONS



NAR SAFETY CODE













NO DRY GRASS OR WEEDS

PRE-LAUNCH CHECK: For safety, never launch a damaged rocket. Check the rocket body, nose cone and fins. Also, check the engine mount, recovery system and launch lug(s). Repair

any damage before launching the rocket.

FLYING YOUR ROCKET: Choose a large field (500 ft. [152 m] square) free of dry weeds and brown grass. The larger the launch area, the better your chance of recovering your rocket. Football fields and playgrounds are great. Launch only with little or no wind and good visibility. Always follow the National Association of Rocketry NAR SAFETY CODE (enclosed). MISFIRES: TAKE THE KEY OUT OF THE CONTROLLER. WAIT ONE MINUTE BEFORE GOING NEAR THE ROCKET. Disconnect the micro-clips and remove the engine. Take the plug and starter out of the engine. A burned starter means the starter tip was not touching engine propellent. Install a new starter; be sure the tip is touching propellant inside the engine. Push the plug in place. Repeat steps under Countdown and Launch.