


4. SUPPORT LEGS

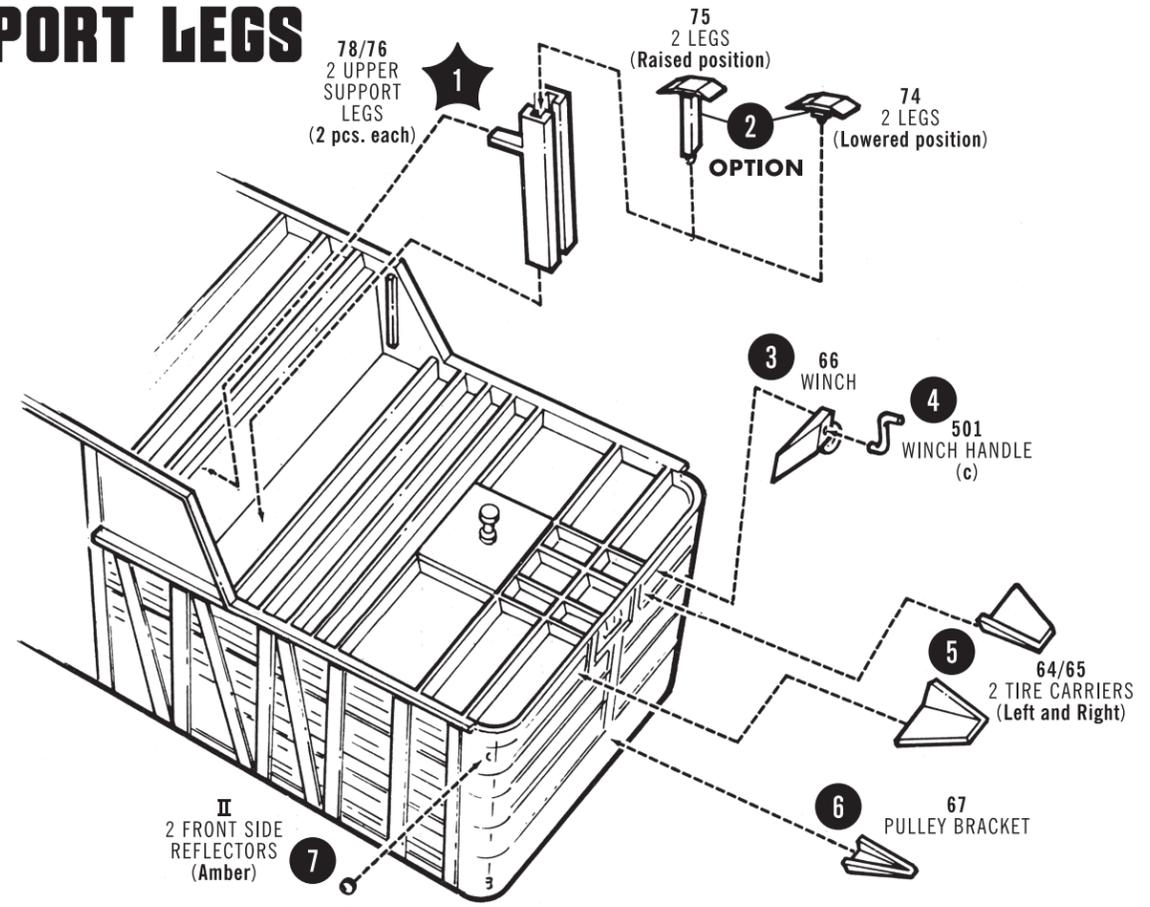

WILSON LIVESTOCK VAN

READ THIS BEFORE YOU BEGIN

Look over this instruction sheet carefully before you begin building. Follow the assembly instructions and "test-fit" the parts without cementing. This will familiarize you with the location of the parts.

For the best results, the various sub-assemblies and components should be painted before any CHROME parts are attached. For example: When attaching non-chrome body accessories, it is best to cement them in place and paint the body as a unit.


AMT kits are molded from the finest high-impact styrene plastic. Use only

paint and cement made for styrene. Trim excess plastic from parts before joining. When attaching CHROME parts, scrape plating away where parts are to be joined. Cement all parts unless otherwise indicated by the instructions. Use just enough cement to join parts, and be careful not to smear cement on exposed surfaces.


Built according to the instructions on this sheet, you should have no trouble assembling your kit. Just FOLLOW THE NUMBERS, as parts are numbered in order of assembly. NOTE: (c) indicates CHROME parts.

5. DECAL PLACEMENT


NOTE: Decals for Tractor included on decal sheet. Place decals #11 or #12 on Tractor doors.

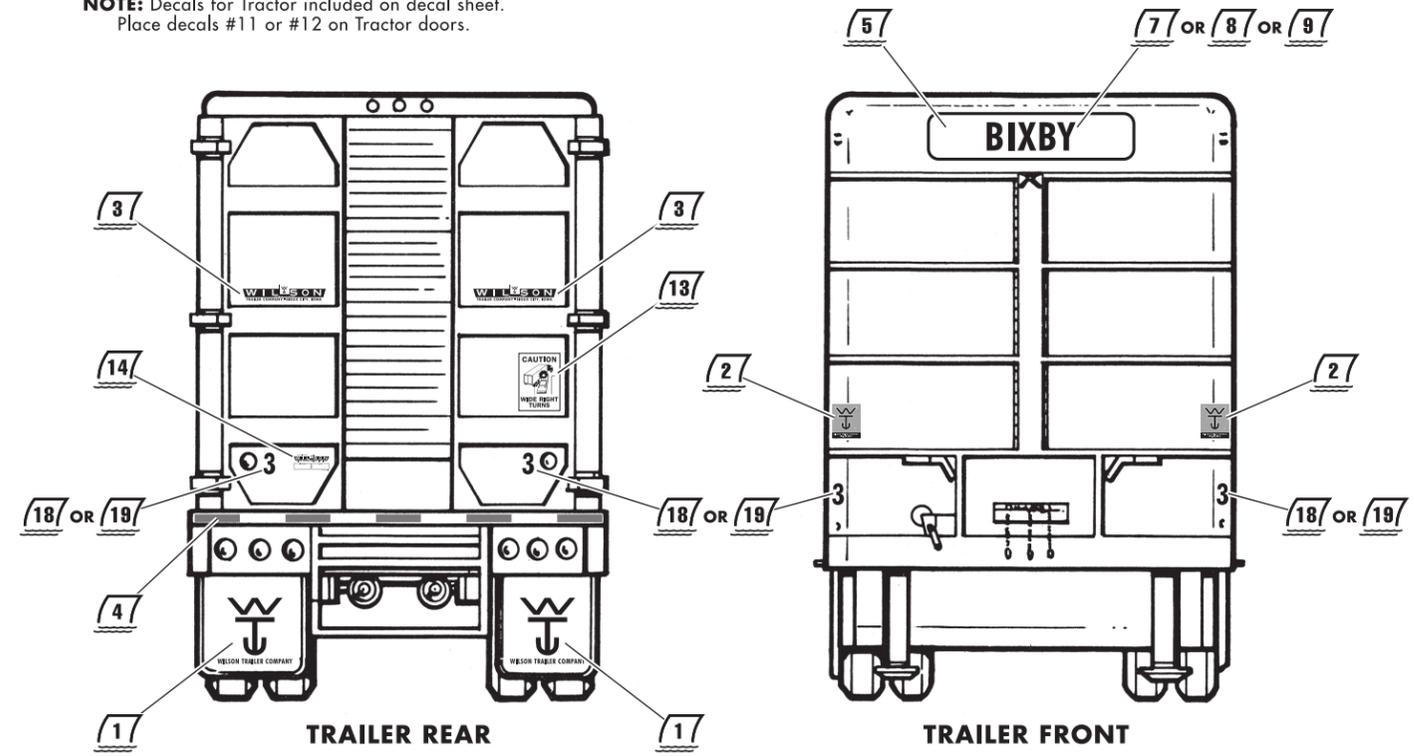

1. SUSPENSION

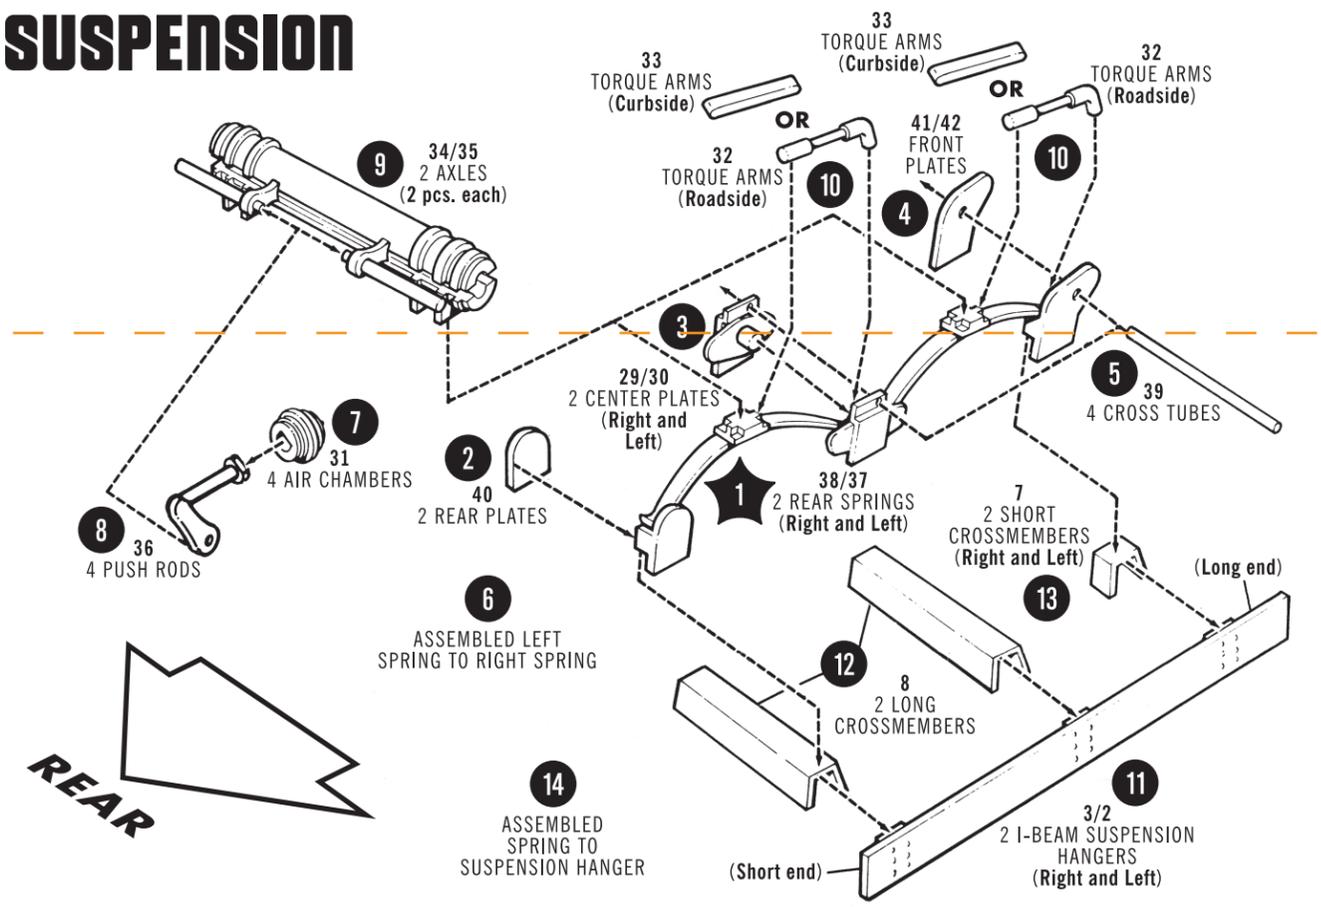

2. WHEELS

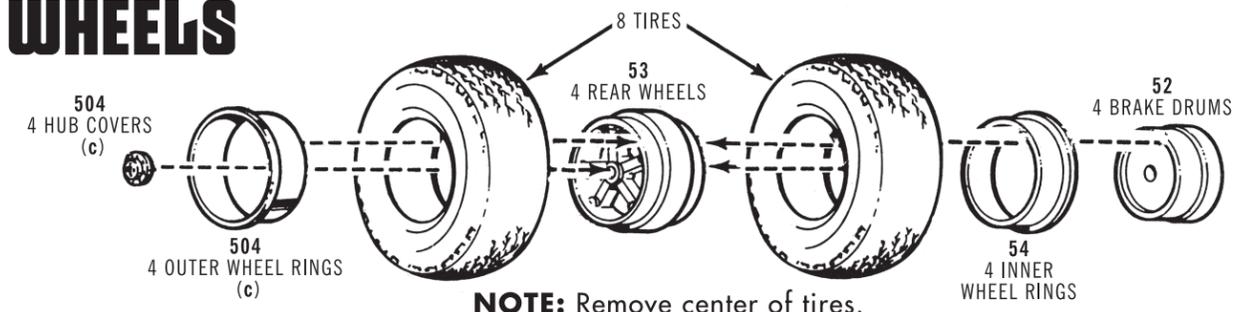

NOTE: Remove center of tires.

3. TRAILER BODY

NOTE: Shown upside down.

