



ASSEMBLY 5.

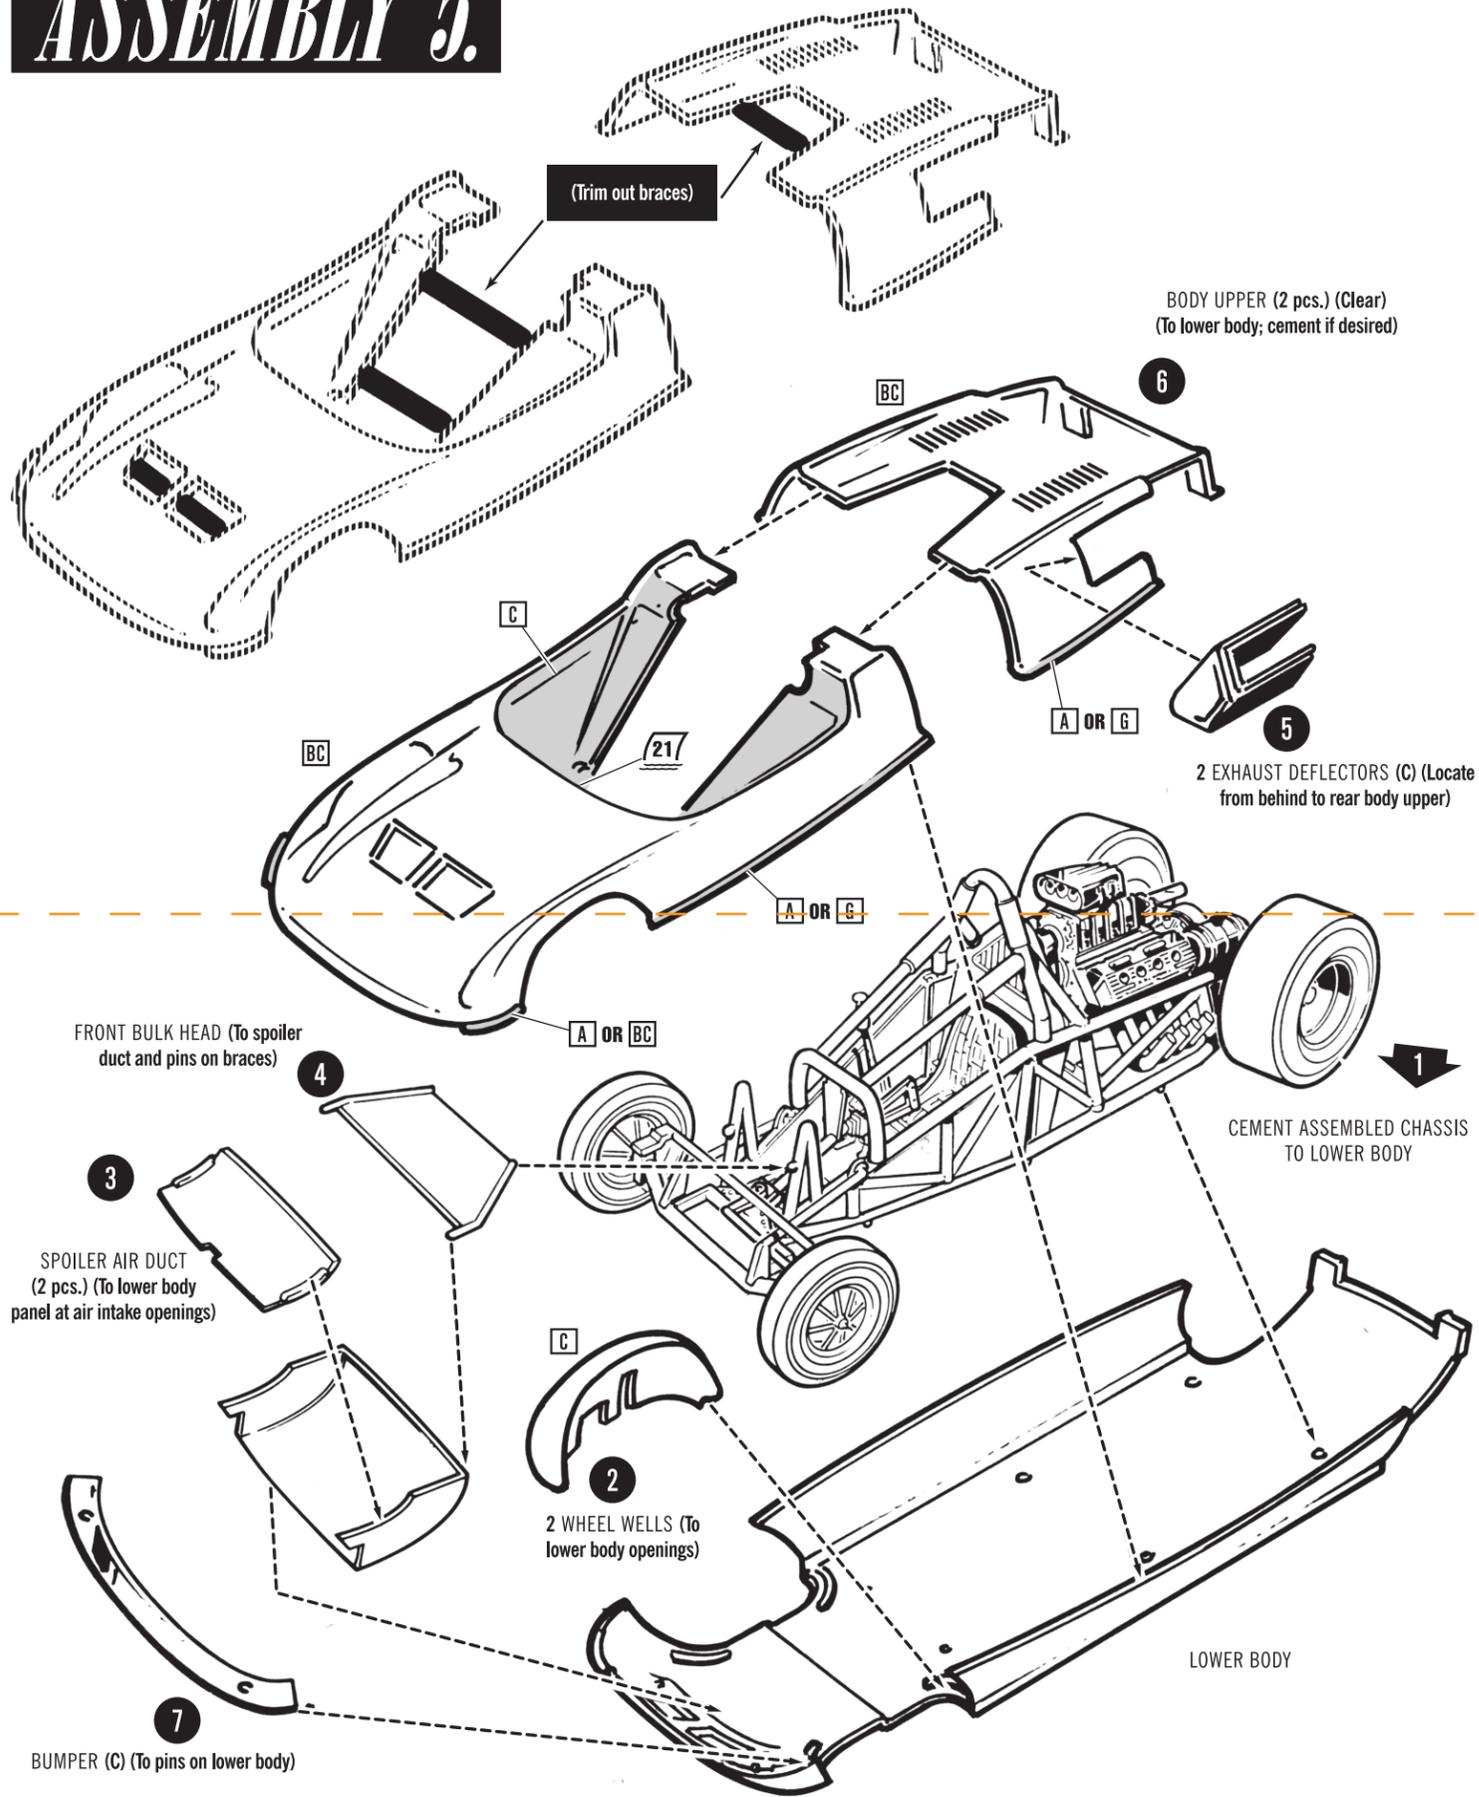

PIRANHA™

A1122-200

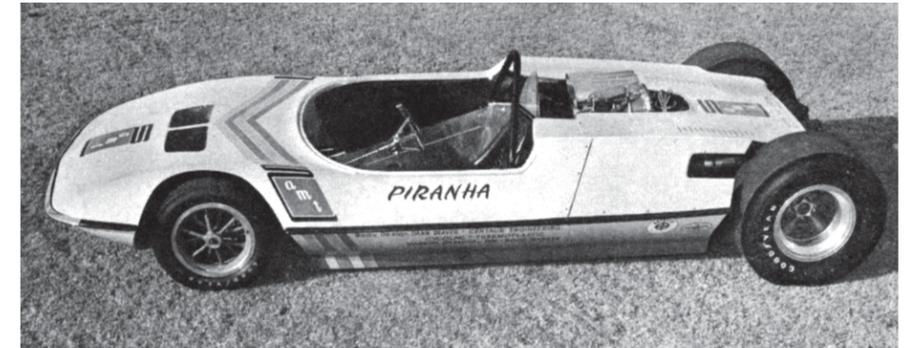

ASSEMBLY 1.


READ THIS BEFORE YOU BEGIN

Look over this instruction sheet carefully before you begin building. Follow the assembly instructions and "test-fit" the part without cementing. This will familiarize you with the location of parts.


For the best results, the various sub-assemblies and components should be painted before any chrome parts are attached. For example: attaching non-chrome body accessories, it is best to cement them in place and paint the body as a unit.

AMT kits are molded from the finest high-impact styrene plastic. Use only paint and cement made for styrene. Trim excess plastic from parts before joining. When attaching CHROME parts, scrape plating away where parts are to be joined. Use just enough cement to join parts, and be careful not to smear cement on exposed surfaces.


Built according to the instructions on this sheet, you should have no trouble assembling your kit. Just FOLLOW THE NUMBERS, as parts are numbered in order of assembly. NOTE: (c) indicates CHROME parts.

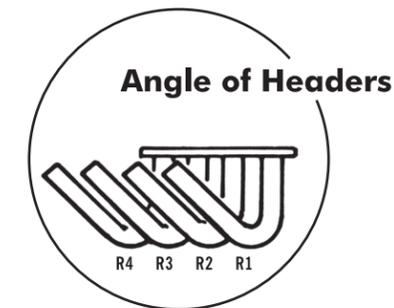


NOTE: Assemble headers as shown but do not locate to engine until final assembly.

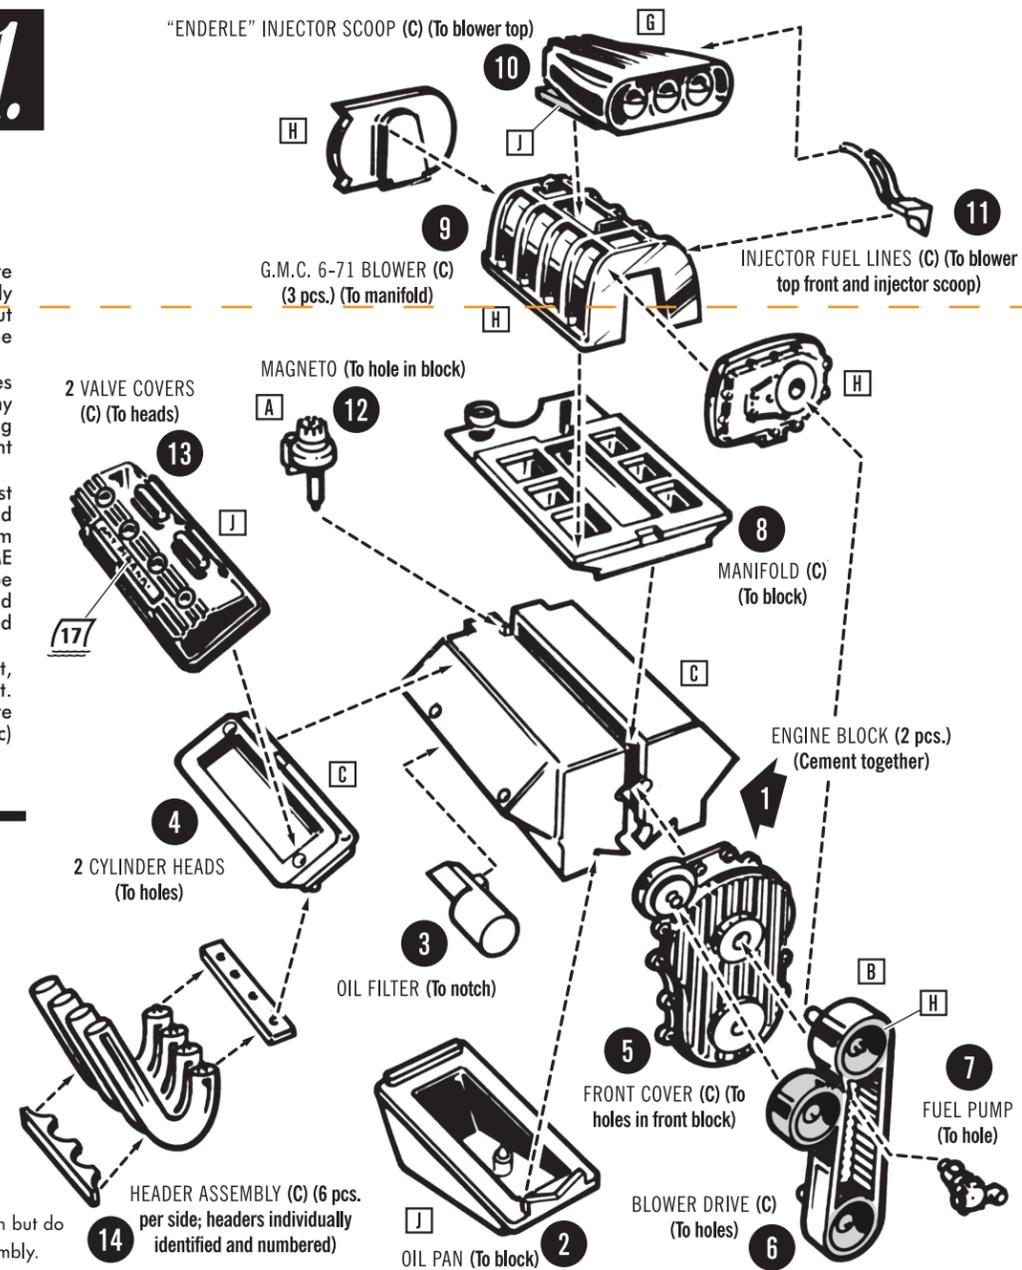


ASSEMBLY 2.

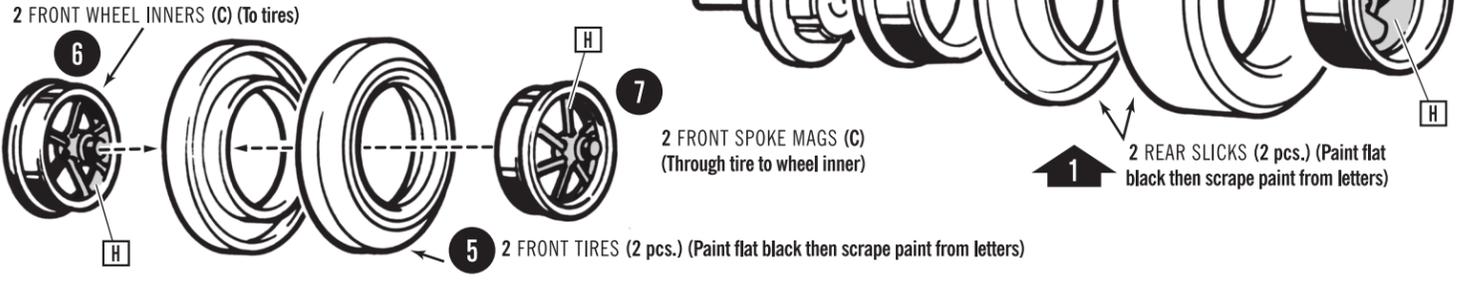

ASSEMBLY 3.

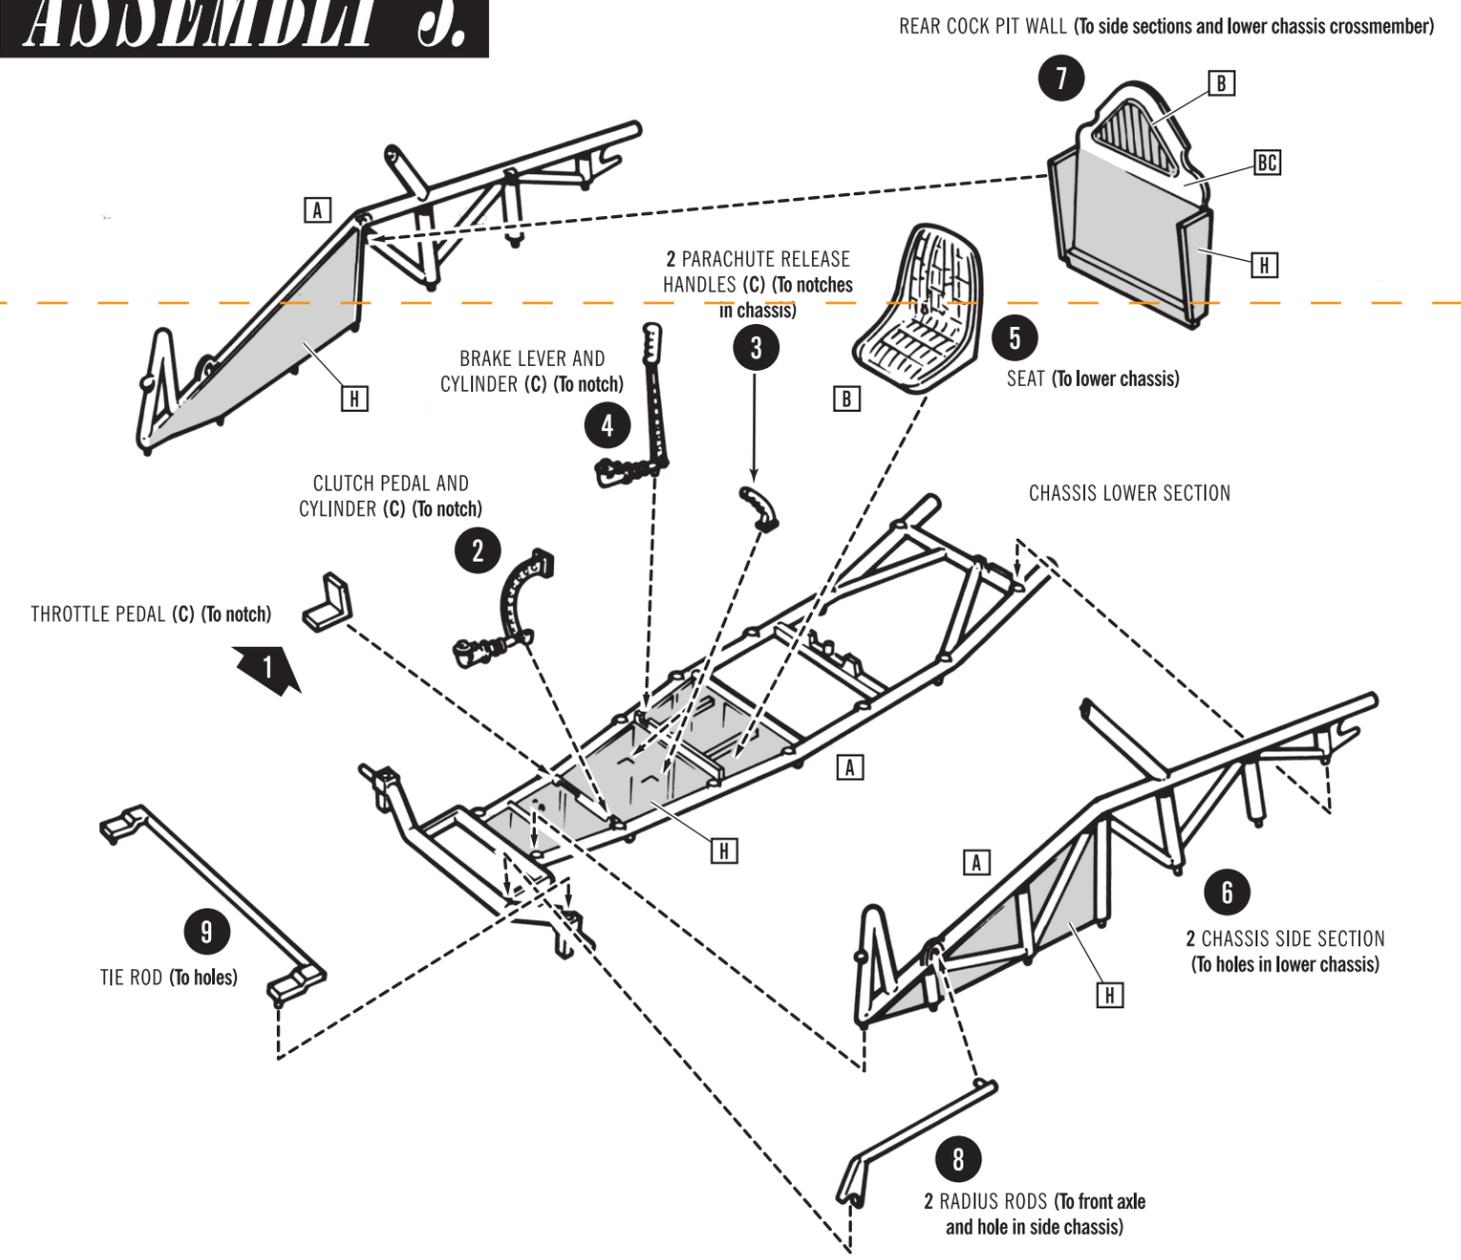

ASSEMBLY 4.

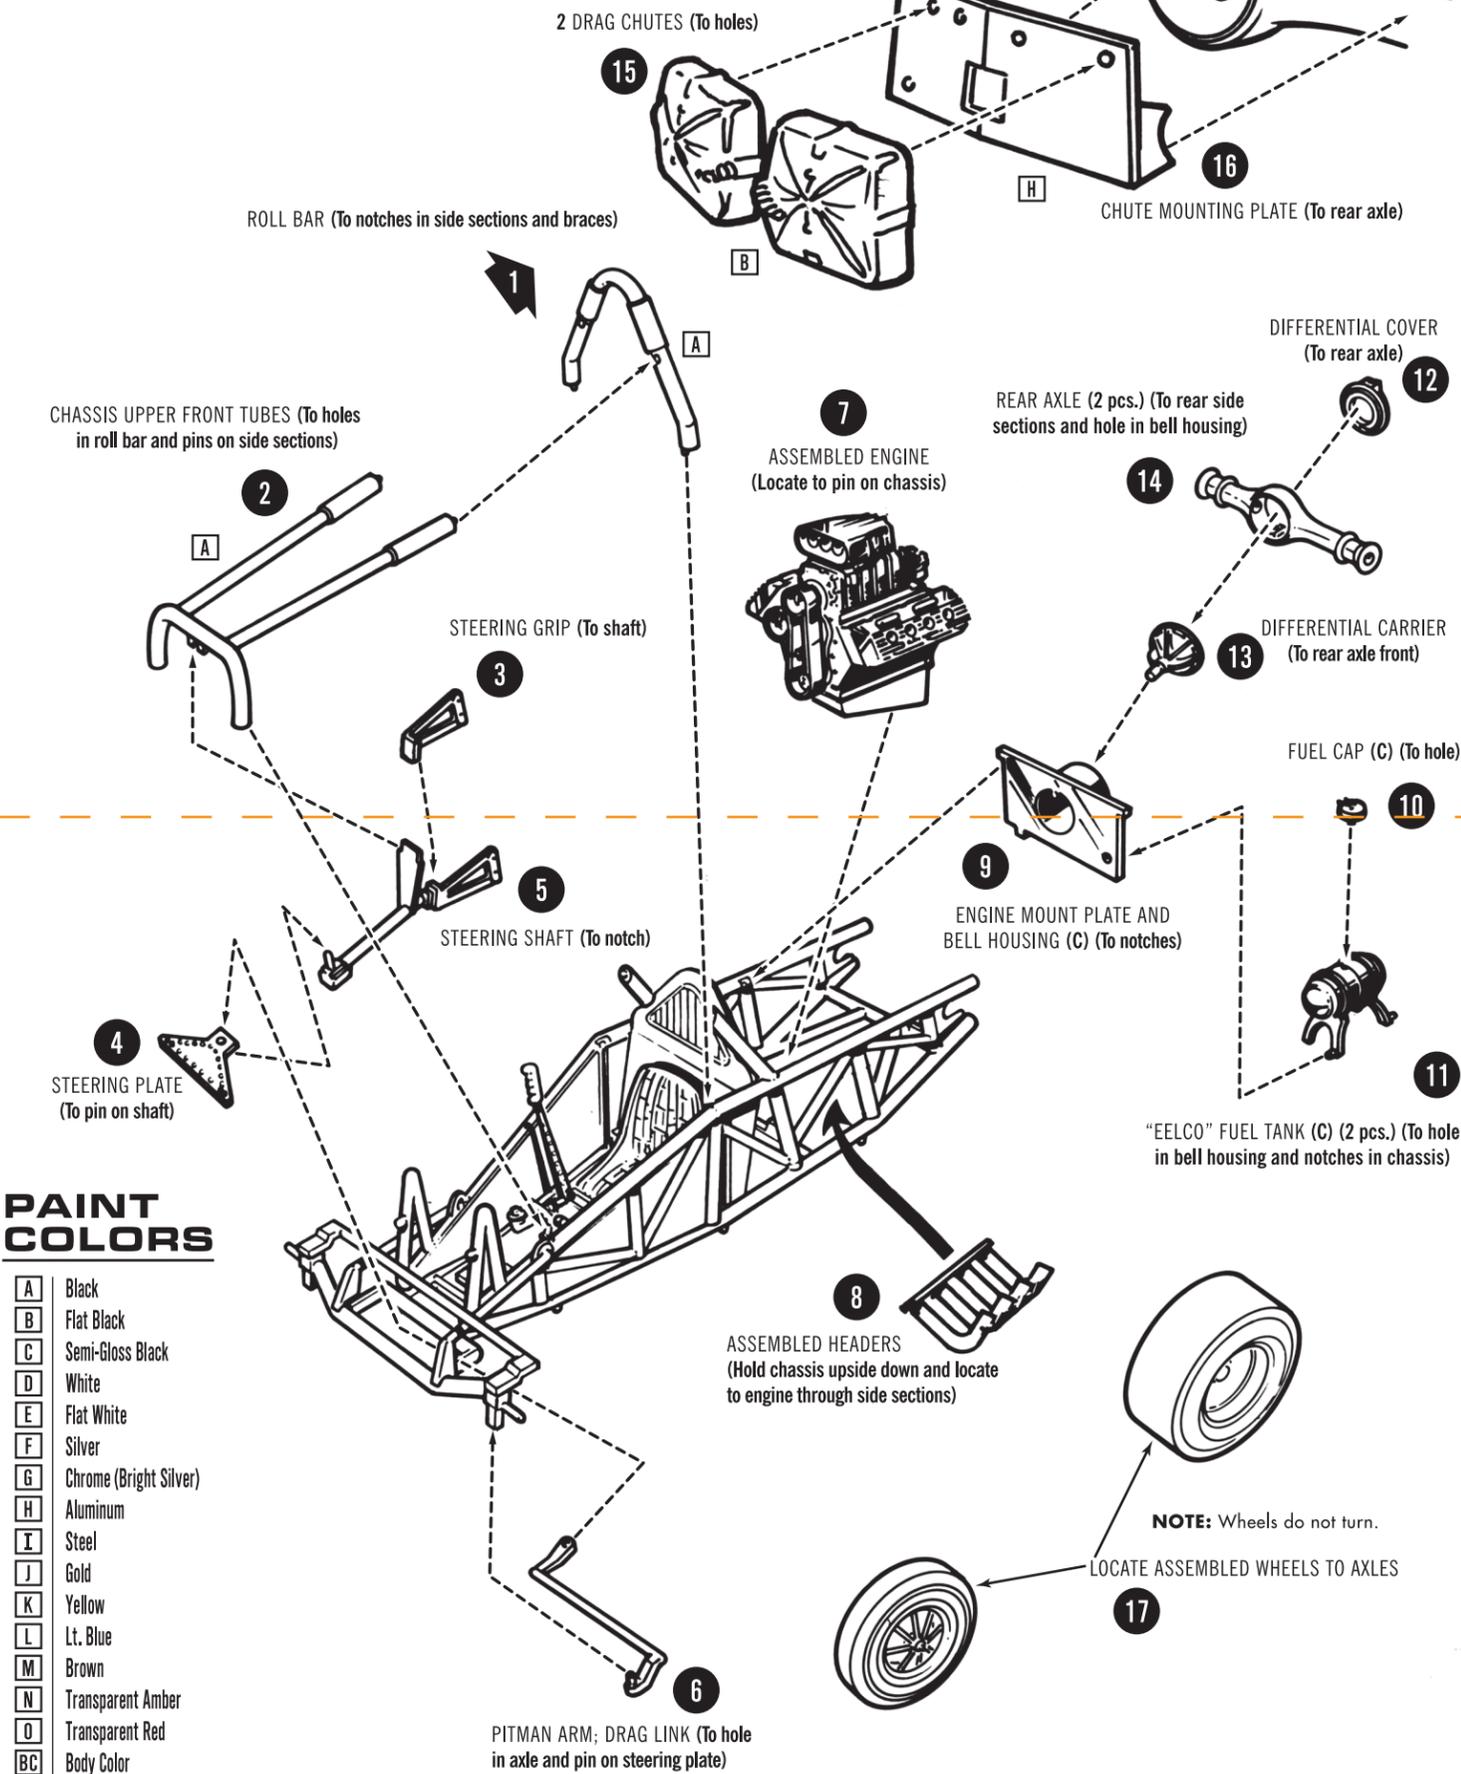

PAINT COLORS

- A Black
- B Flat Black
- C Semi-Gloss Black
- D White
- E Flat White
- F Silver
- G Chrome (Bright Silver)
- H Aluminum
- I Steel
- J Gold
- K Yellow
- L Lt. Blue
- M Brown
- N Transparent Amber
- O Transparent Red
- BC Body Color

NOTE: Wheels do not turn.

LOCATE ASSEMBLED WHEELS TO AXLES