



AMT1270

STAR TREK™

U.S.S. ENTERPRISE COMMAND BRIDGE

READ THIS BEFORE YOU BEGIN



Look over this Instruction Sheet carefully before you begin building. Follow the assembly instructions and "TEST FIT" the parts without cementing. This will familiarize you with the location of the parts.

For the best results, the various sub-assemblies and components should be painted before any "CHROME" parts are attached. For example: When attaching "NON CHROME" parts, it is best to cement them in place and paint as a unit. "CHROME" PARTS ARE INDICATED BY (C). "CHROME" may or may not be contained in kit.


AMT kits are molded from the finest high-impact styrene plastic. Use only paint and cement made for styrene. Trim excess plastic from parts before joining. When attaching "CHROME" or painted parts, scrape plating or paint away where parts are to be joined. Cement all parts unless otherwise indicated by the instructions. Use just enough cement to join parts and be careful not to smear cement on exposed surfaces. Built according to the instructions on this sheet, you should have no trouble assembling your kit. Just follow the numbers as the instructions are numbered in order of assembly.

PARTS ARE NUMBERED FOR EASY IDENTIFICATION.

I. FIGURES

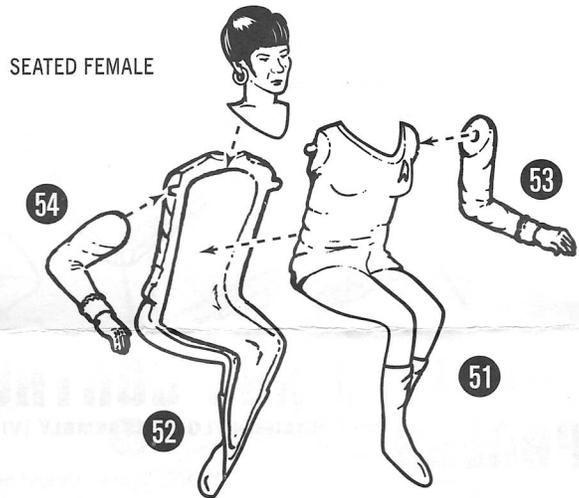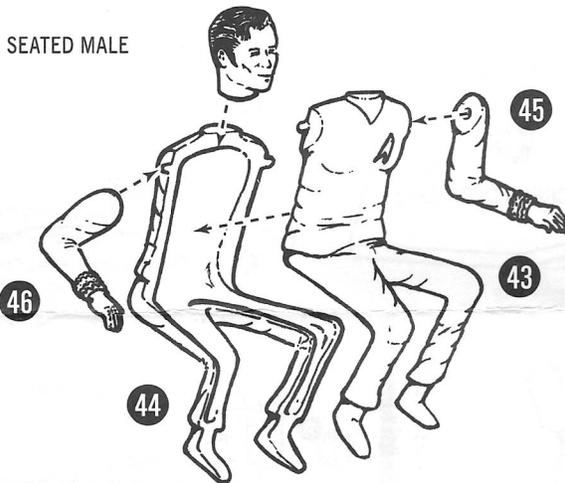


NOTE: When assembling seated male figures be sure to match parts marked with "A" to other parts marked with "A", "B" to "B", etc.

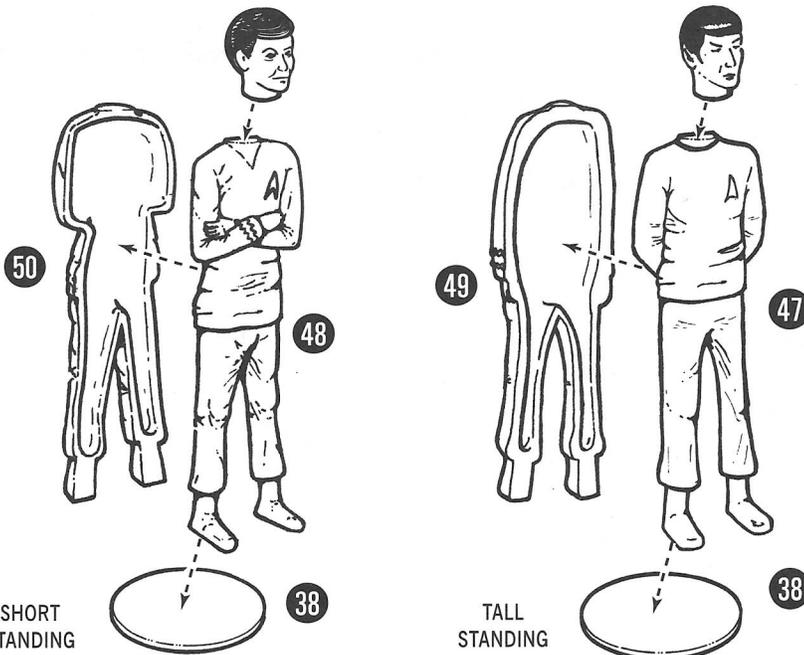

CHOOSE FROM THESE CHARACTERS





2. FLOOR ASSEMBLY

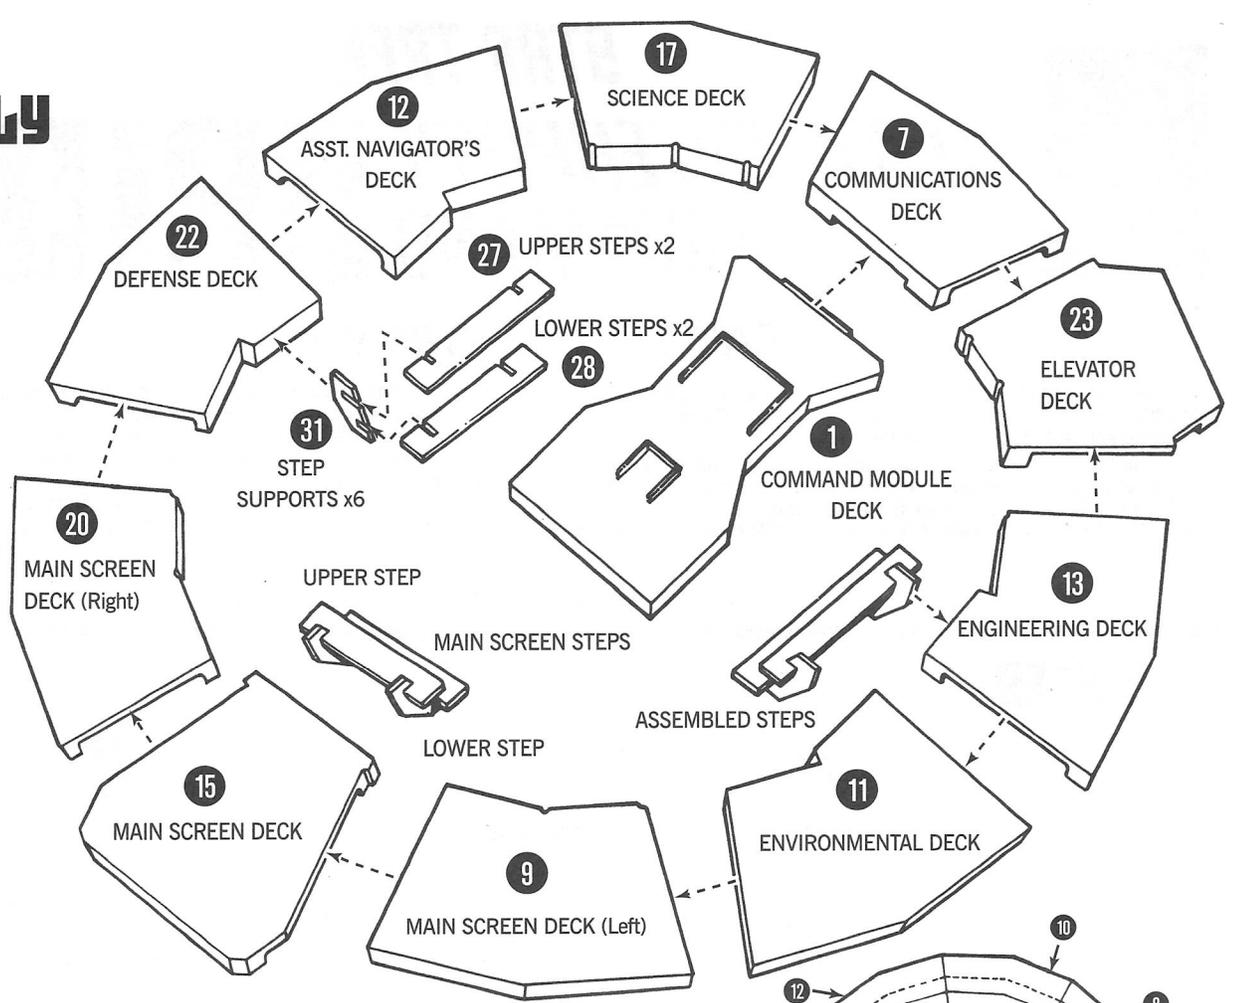

3. ELEVATOR AND CONTROL PANELS


SEE DETAIL IN FLOOR ASSEMBLY (View "A")

NOTE: Panels should be painted first; then apply decals before cementing to floor sections.

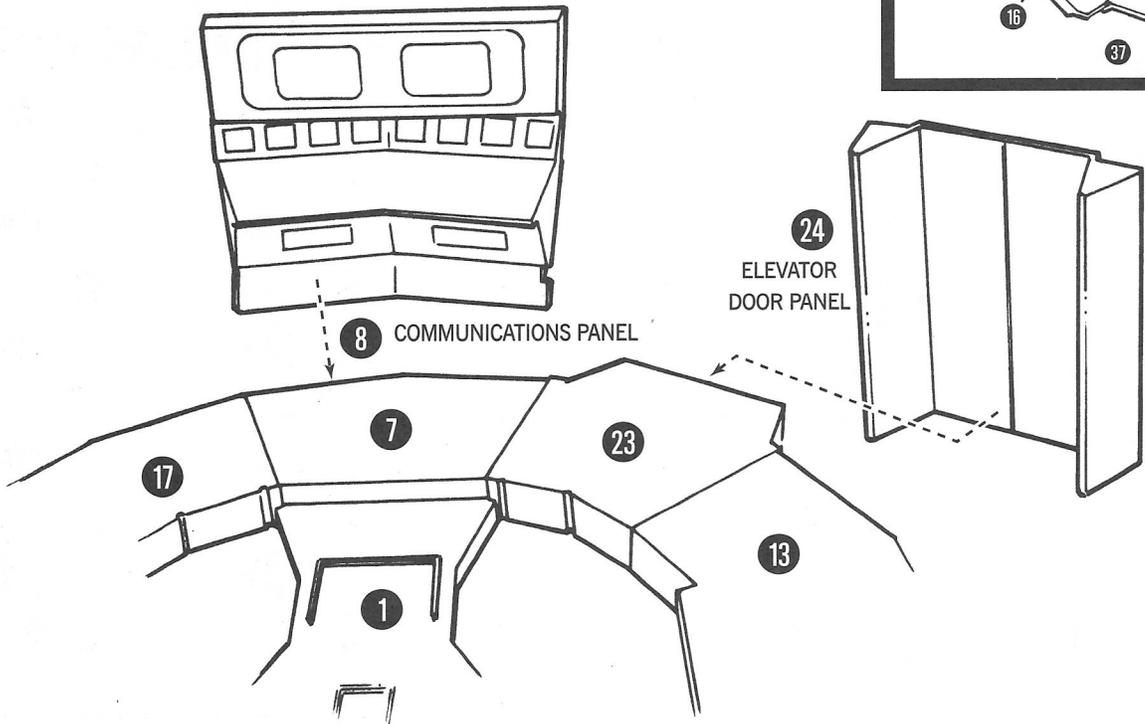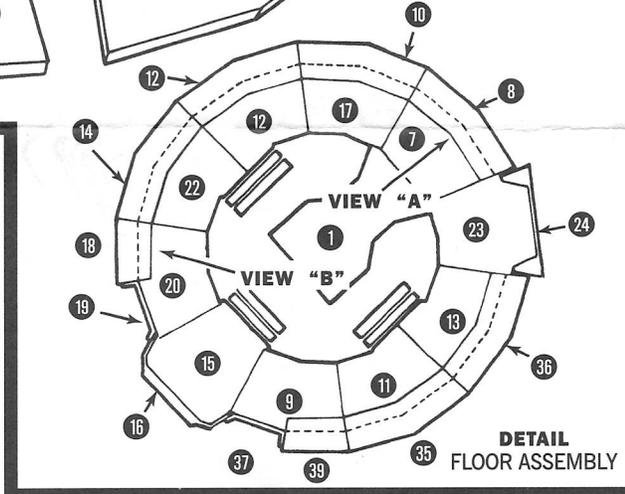


4. SCREEN AND HALF PANEL

SEE DETAIL IN FLOOR ASSEMBLY (View "B")

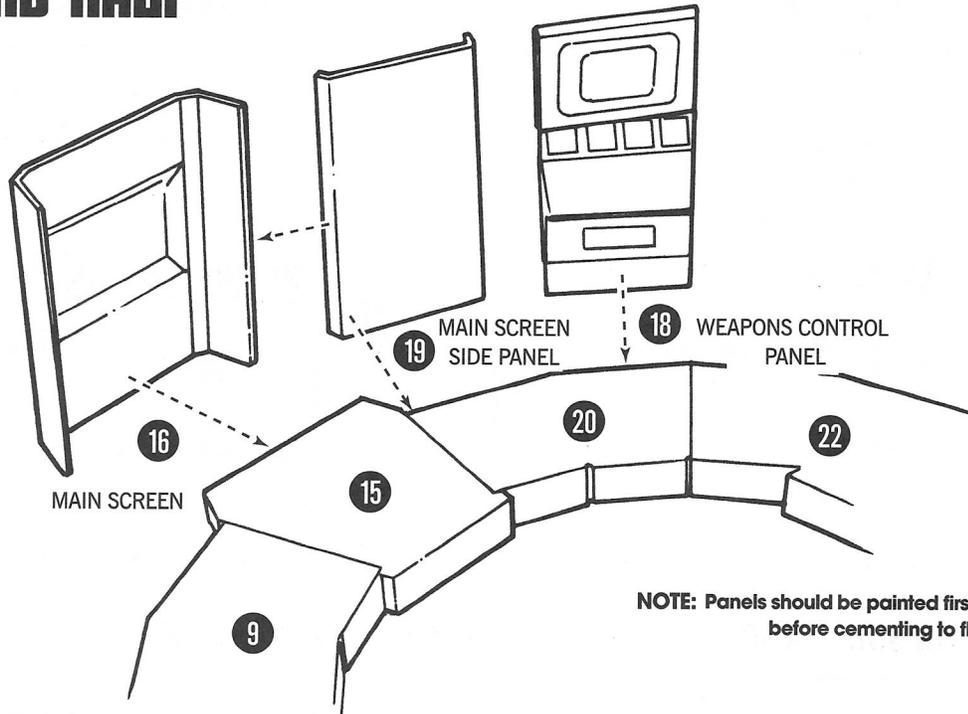


5. CHAIR AND HELM

NOTE: For best results remove raised detail from chair, helm & view screen parts if decals are to be applied.

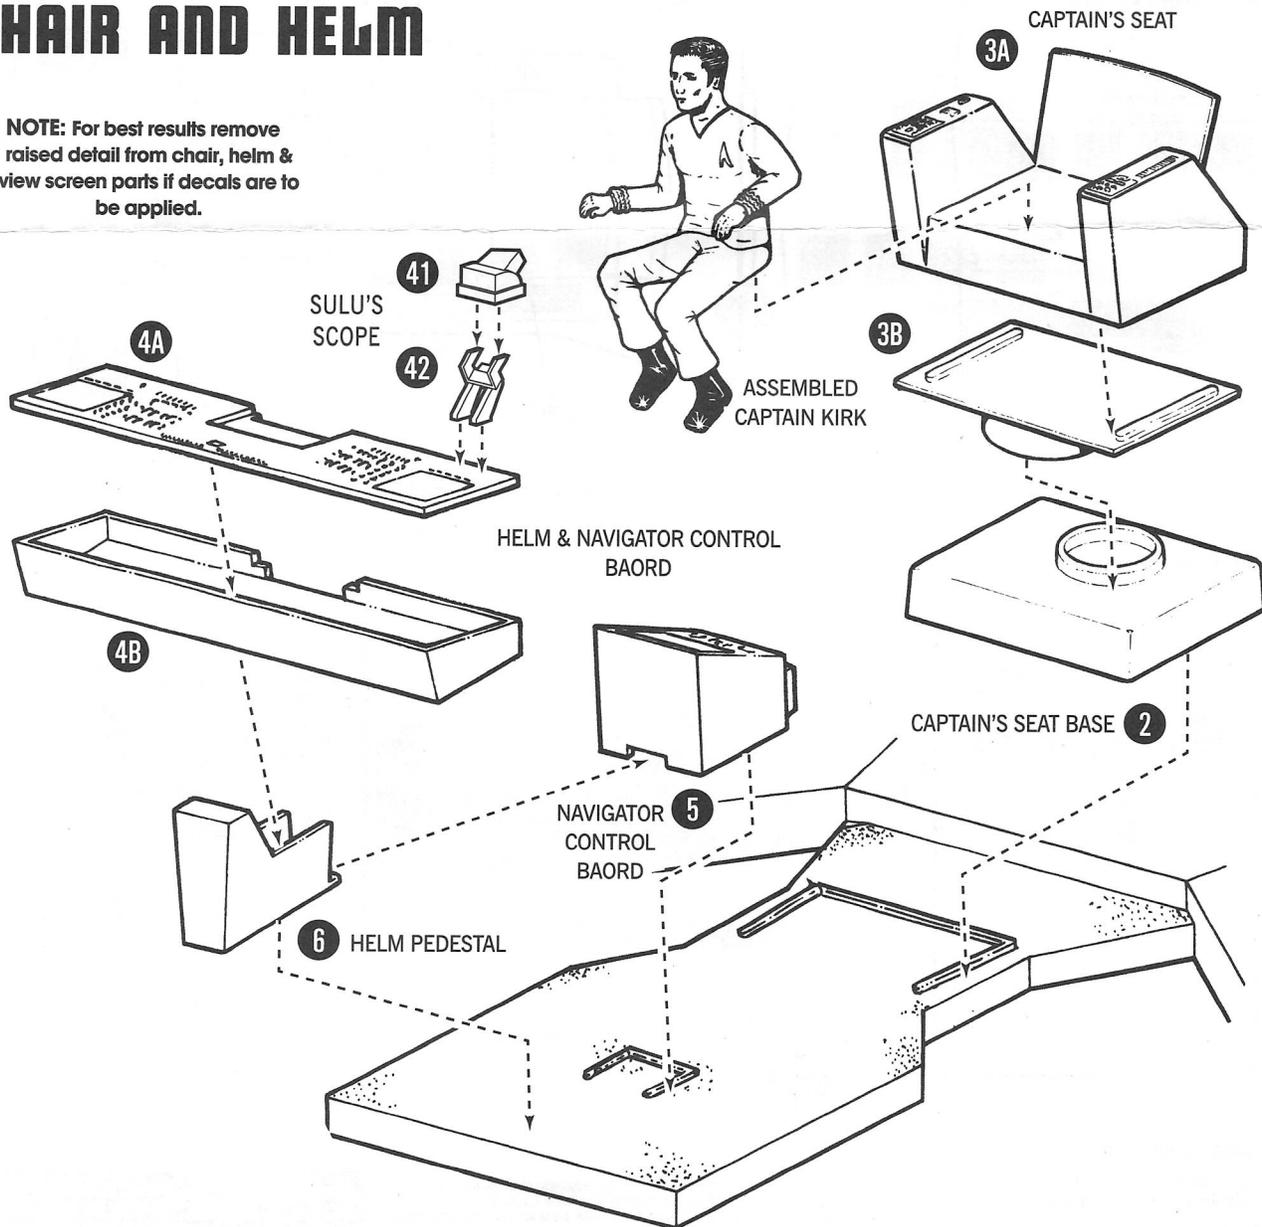

6. FINAL ASSEMBLIES

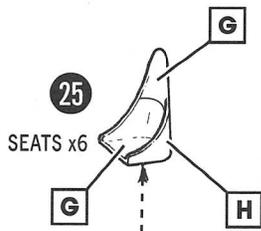

SEAT BASES x6
(Location optional)



ASSEMBLED
MR. SPOCK



ASSEMBLED
DR. MCCOY

NOTE: Figures should be painted before
locating to bridge (location optional)

32

RAILINGS x3

34

RAILING SUPPORTS x16
(To notches)


40 E

SPOCK'S SCOPE

D

33

SMALL
RAILING

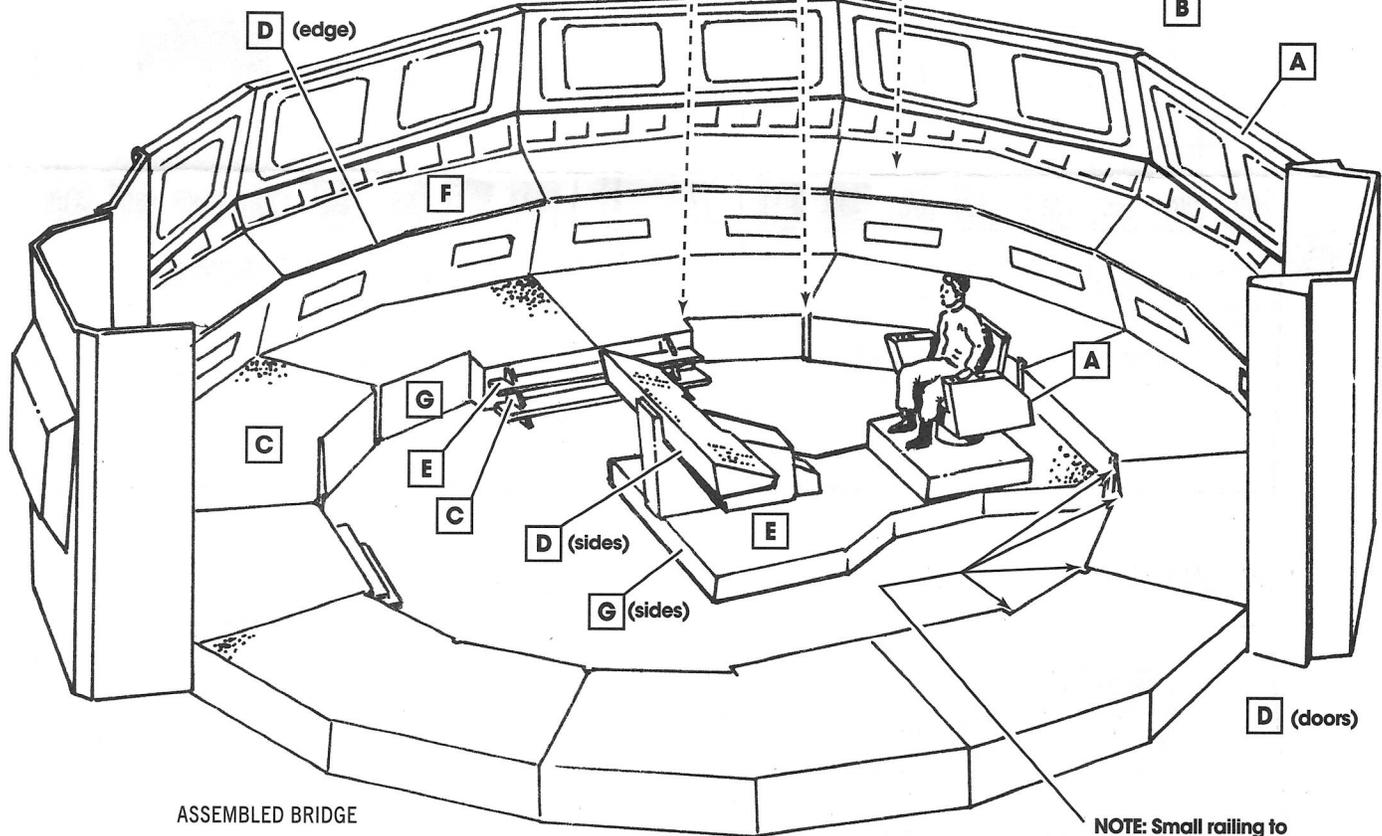

ASSEMBLED BRIDGE

NOTE: Small railing to
these notches.

A Blue FS35414 - Testors MM 2033

B Blue FS35109 - Testors MM 2031

C Aircraft Interior Black FS37031 - Testors MM 2040

D Russian Market Red - Testors MM 2127

E Light Sea Gray FS36307 - Testors MM 1726

F Gloss Black - Testors 1147TT

G Semi Gloss Black - Testors 1139TT


H RAF Azure Blue - Testors MM 2048

NOTE: This paint guide supplies a suggestion
for color. It is the modeler's option to
thoroughly research the film footage to
determine more accurate color.


7. DECALS

NOTE: For best results remove raised detail from chair, helm & view screen parts before applying decals.


DEFENSE STATION

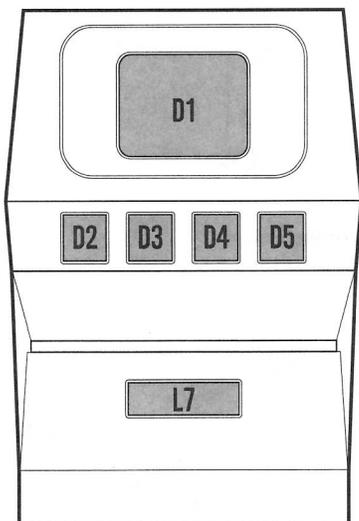


WEAPONS STATION

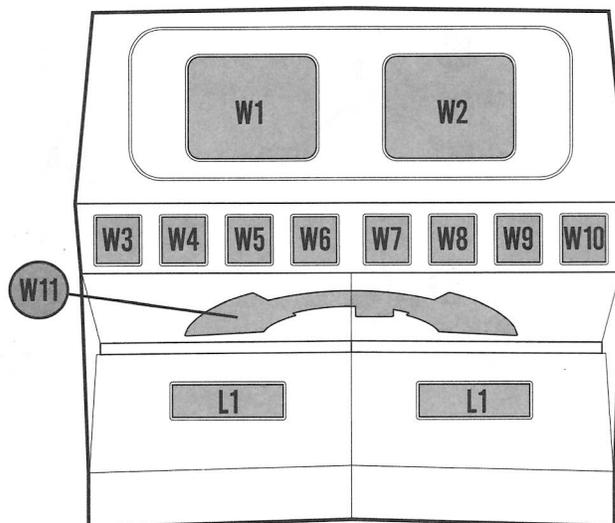


NAVIGATION STATION

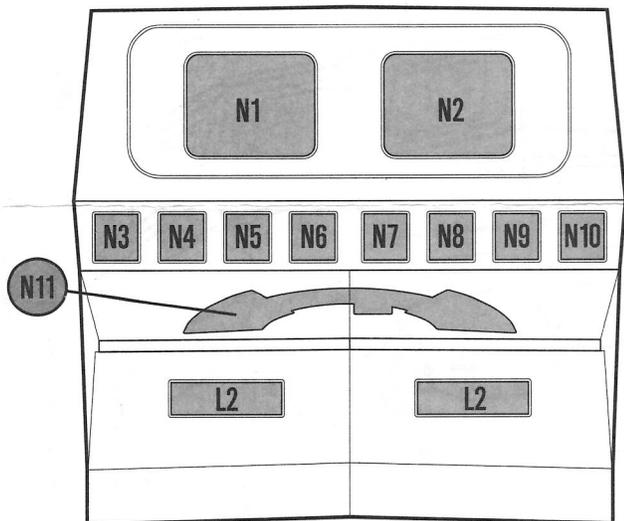


SCIENCE STATION

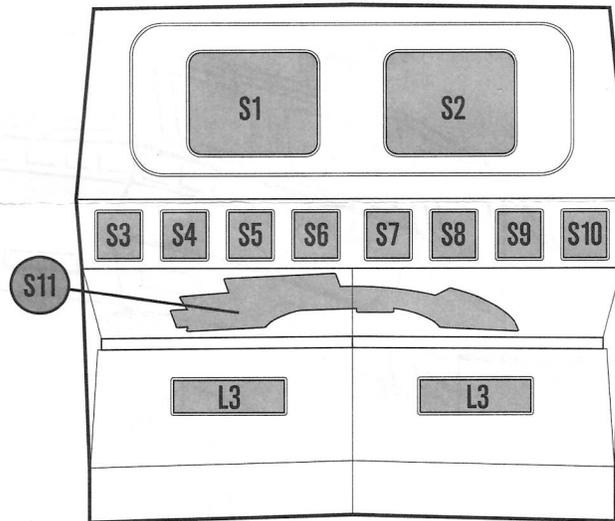


COMMUNICATIONS STATION

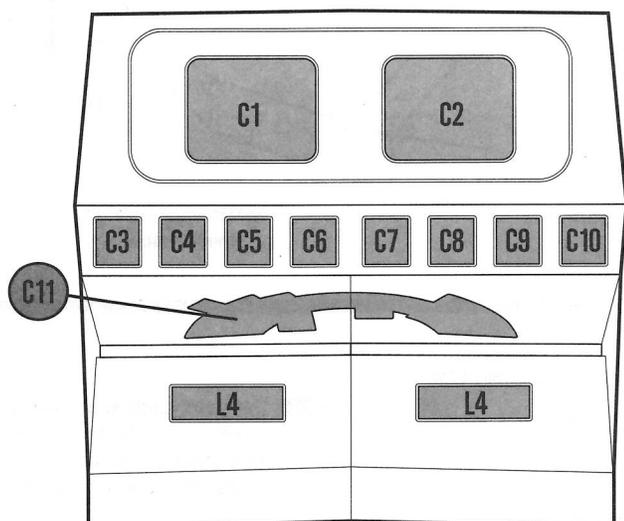

TURBOLIFT ALCOVE

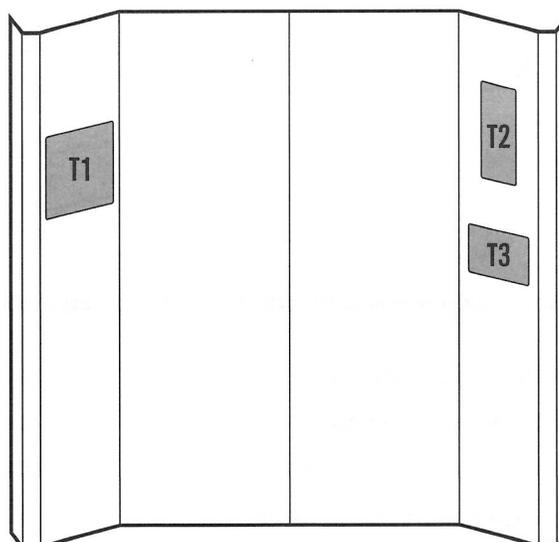

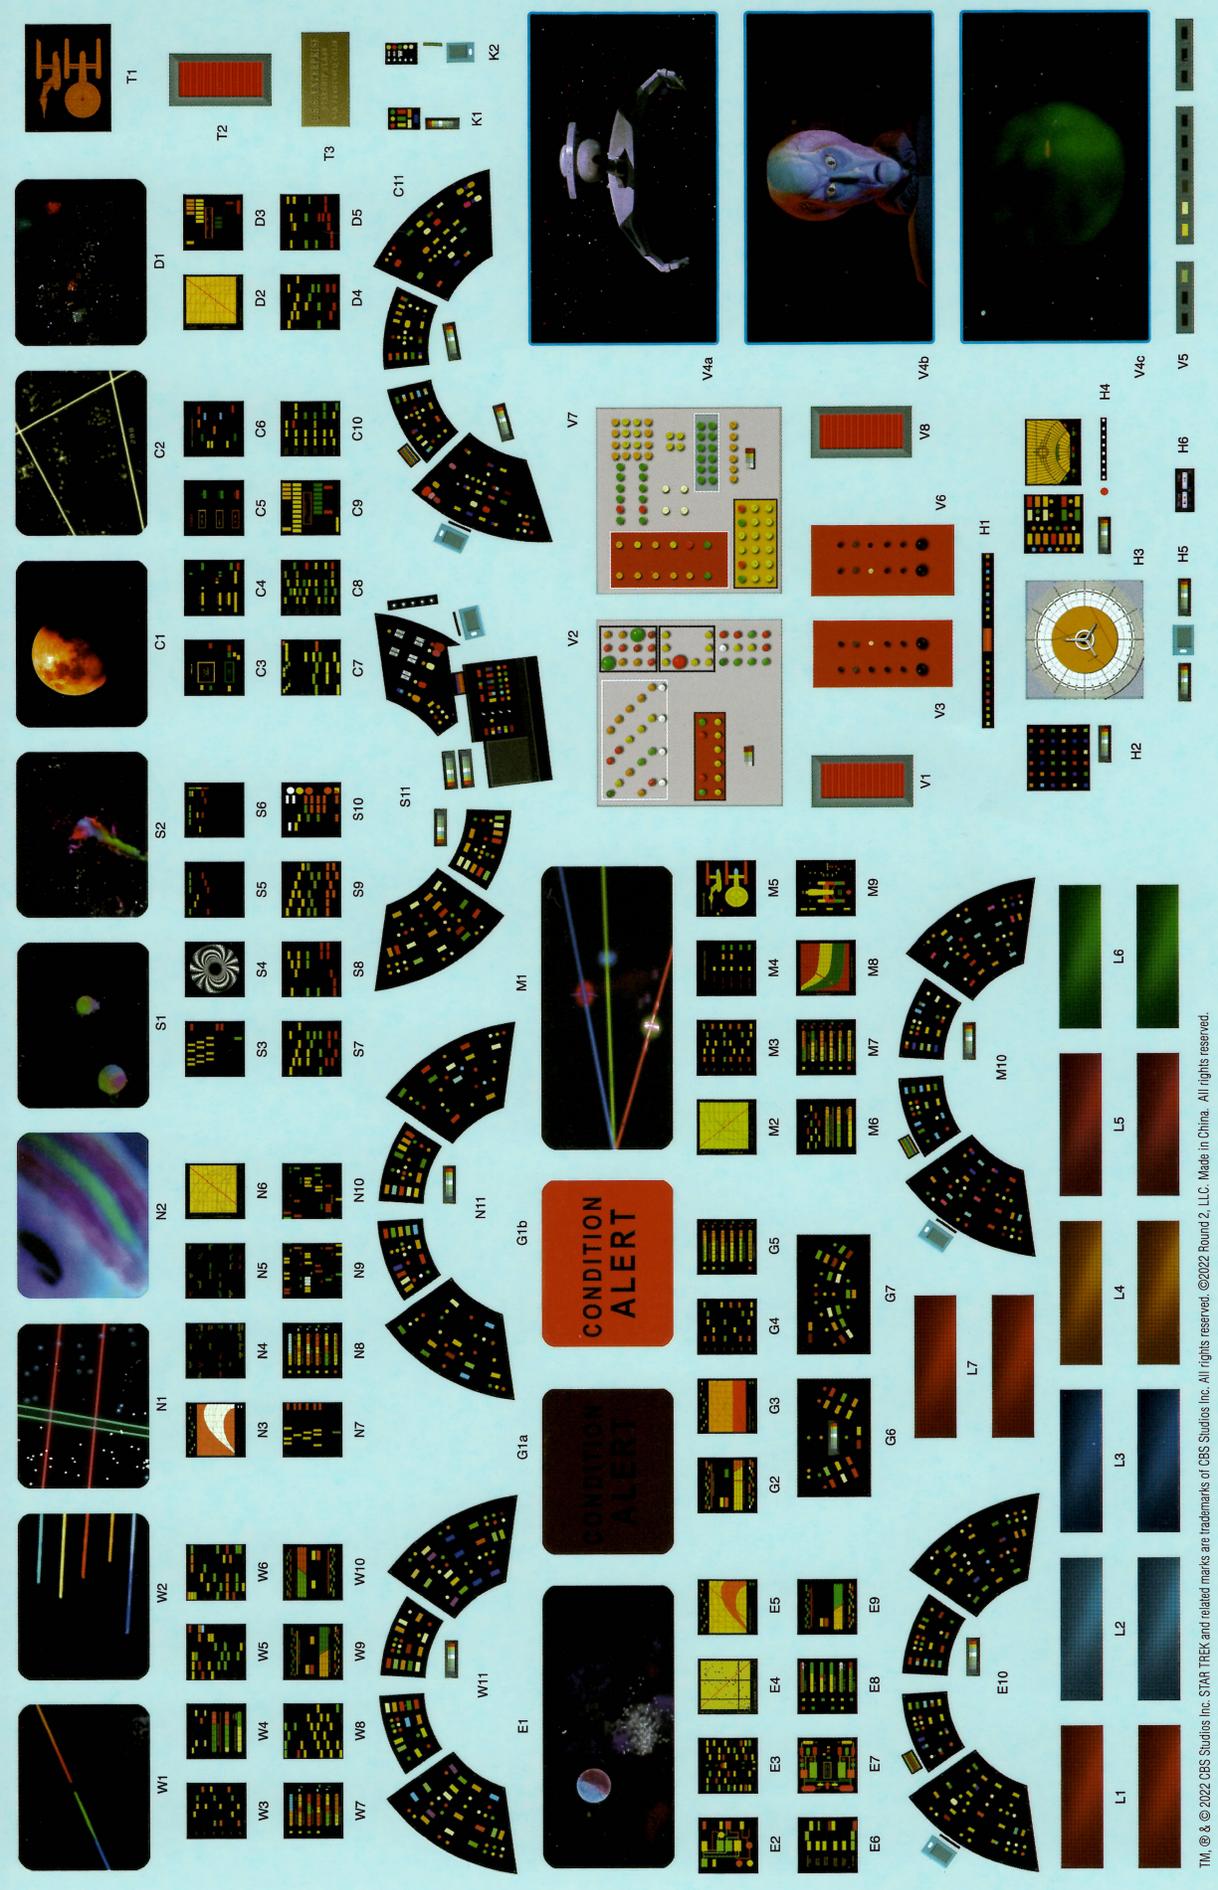

TM, © & © 2022 CBS Studios Inc. STAR TREK and related marks are trademarks of CBS Studios Inc. All rights reserved. ©2022 Round 2, LLC. Made in China. All rights reserved.