



6. FINAL ASSEMBLIES

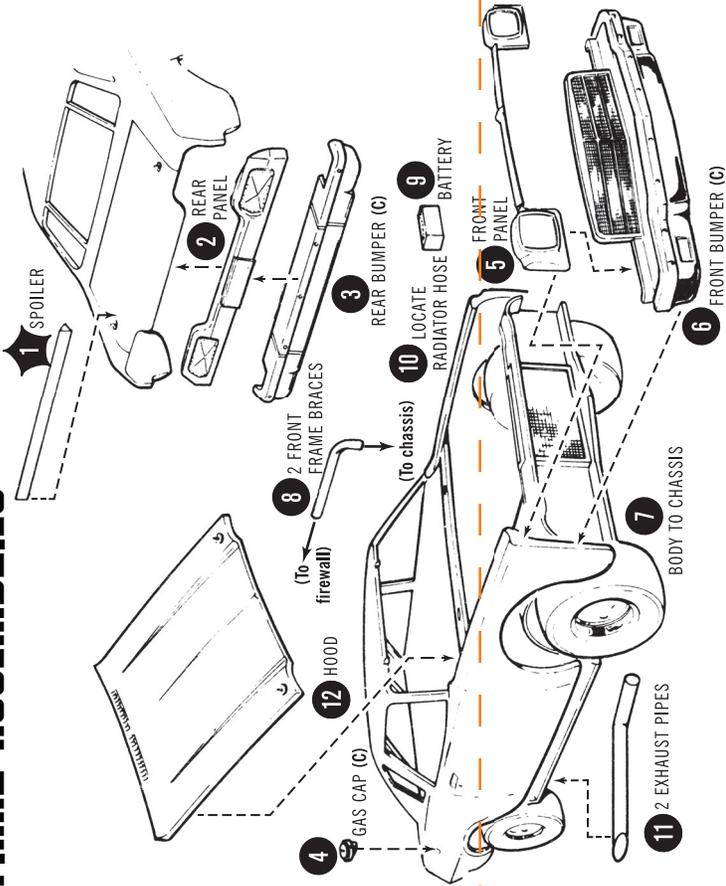

7. DECALS

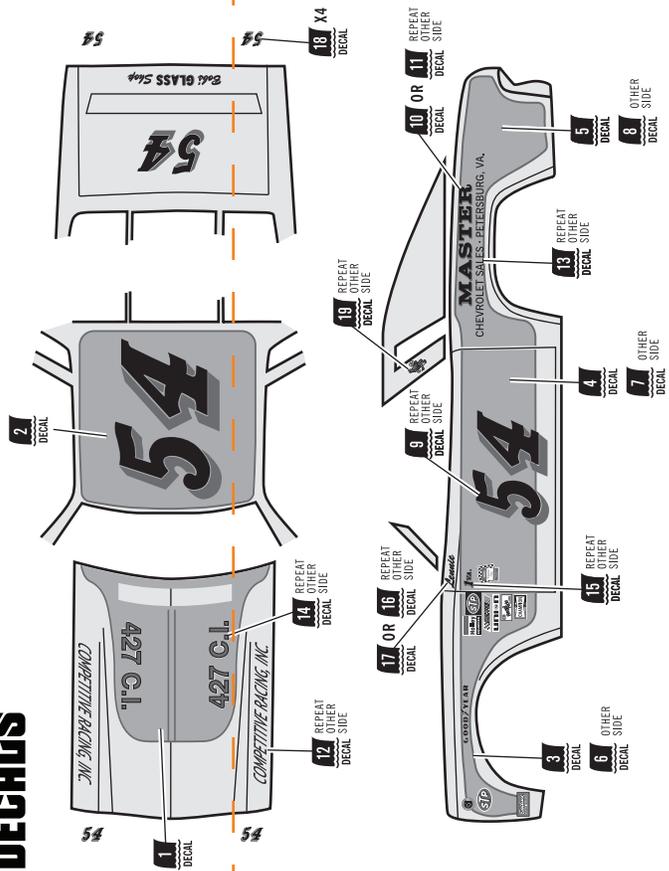

LENNIE POND



A1352-200

READ THIS BEFORE YOU BEGIN


Look over this Instruction Sheet carefully before you begin building. Follow the assembly instructions and "TEST FIT" the parts without cementing. This will familiarize you with the location of the parts.

For best results, the various sub-assemblies and components should be painted before any "CHROME" parts are attached. For example: When attaching "NON CHROME" engine parts, it is best to cement them in place and paint as a unit. "CHROME" PARTS ARE INDICATED BY (C).


only paint and cement made for styrene. Trim excess plastic from parts before joining. When attaching "CHROME" or painted parts, scrape plating or paint away where parts are to be joined. Cement all parts unless otherwise indicated by the instructions. Use just enough cement to join parts and be careful not to smear cement on exposed surfaces. Built according to the instructions on this sheet, you should have no trouble assembling your kit. Just FOLLOW THE NUMBERS as the instructions are numbered in order of assembly.

1. ENGINE

(SHOWN FOR LOCATION ONLY, LOCATE IN FINAL ASSEMBLY STEP)

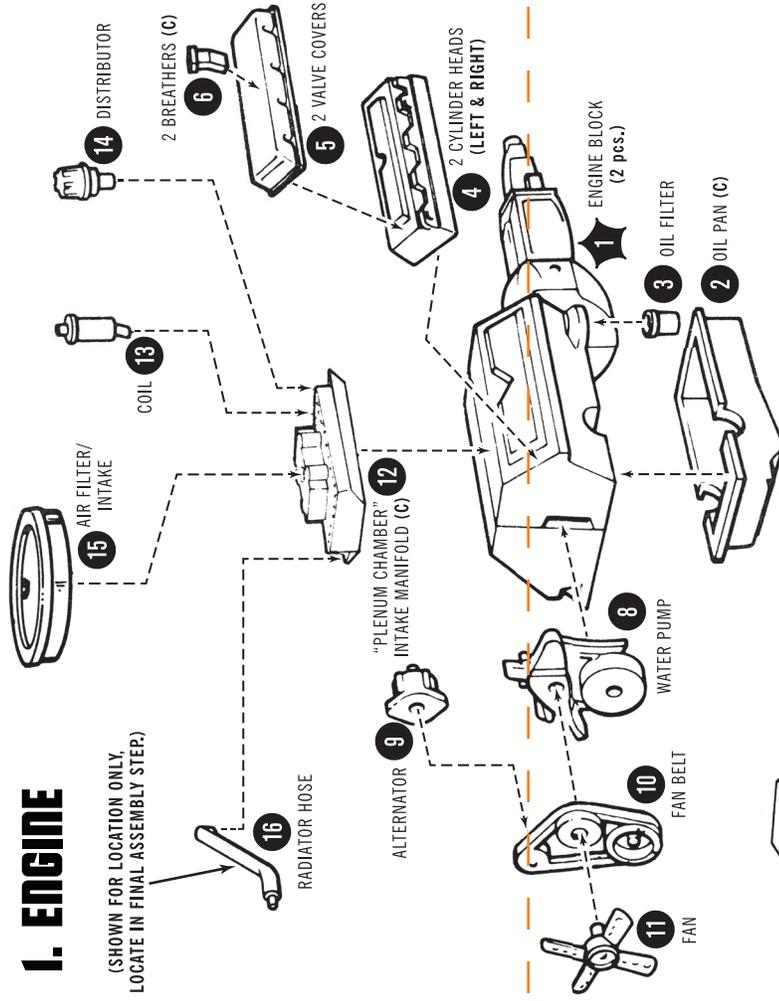


2. WHEELS

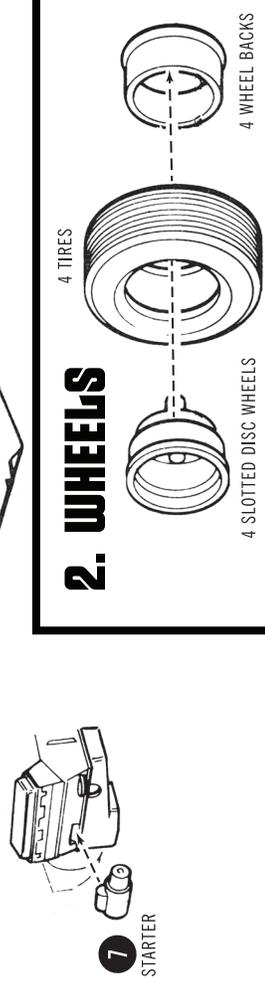


GENERAL MOTORS. Trademarks used under license to Round 2, LLC. Goodyear (and Winged Foot Design) and Blip Design are trademarks of The Goodyear Tire & Rubber Company used under license by Round 2, LLC. South Bend, IN 46628. Copyright 2022. The Goodyear Tire & Rubber Company, AMT and design and Round 2 and design are trademarks of Round 2, LLC. ©2022 Round 2, LLC, South Bend, IN 46628 USA. Product and packaging designed in the USA. Made in China. All rights reserved.

3. CHASSIS

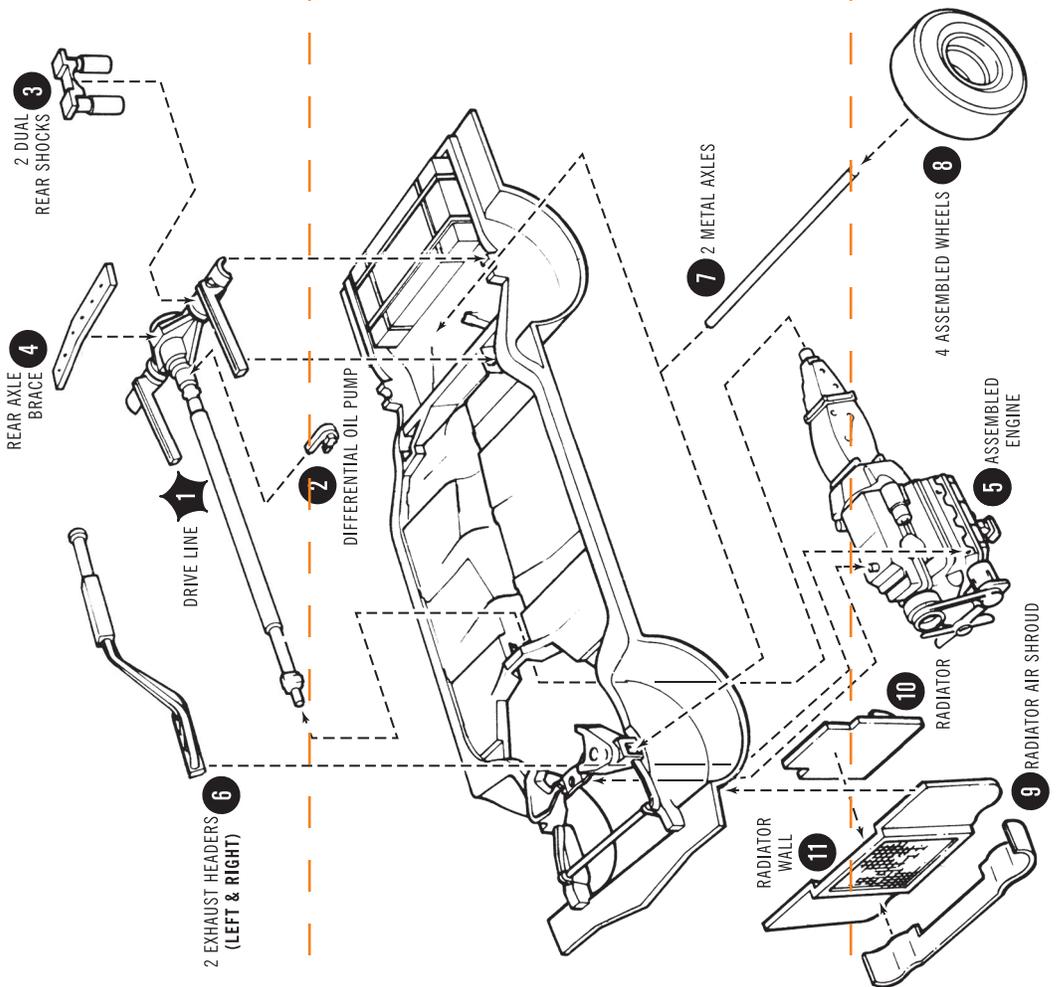

4. INTERIOR

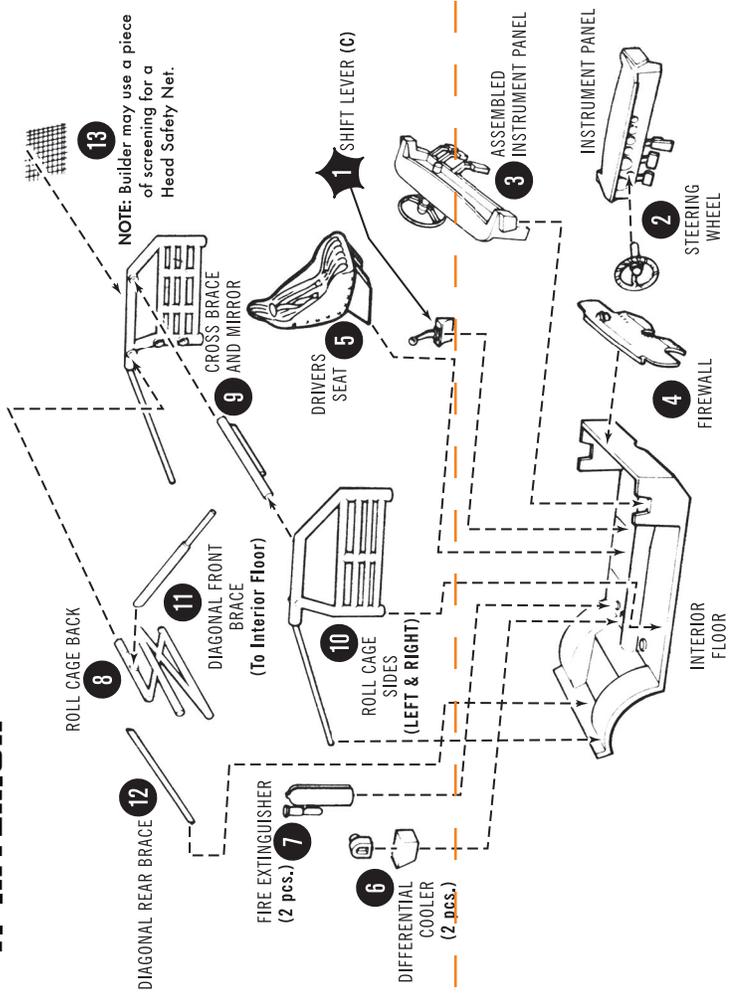

5. BODY

