



AMT1423

# ARTEMISI™

Moon Rocket  
"We Are Going"

## READ THIS BEFORE YOU BEGIN







Look over this instruction sheet carefully before you begin building. Follow the assembly instructions and "test-fit" the parts without cementing. This will familiarize you with the location of the parts.






AMT kits are molded from the finest High-Impact Styrene plastic. Use only paint and cement made for Styrene. Trim excess plastic from parts before joining.

Use just enough cement to join parts, and be careful not to smear cement on exposed surfaces.

Built according to the instructions on this sheet, you should have no trouble assembling your kit. Just **FOLLOW THE NUMBERS**, as parts are numbered in order of assembly.

## Assembly Instructions

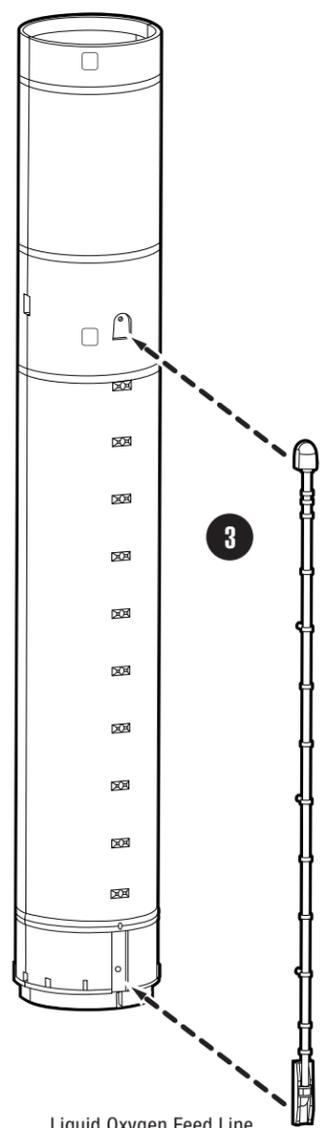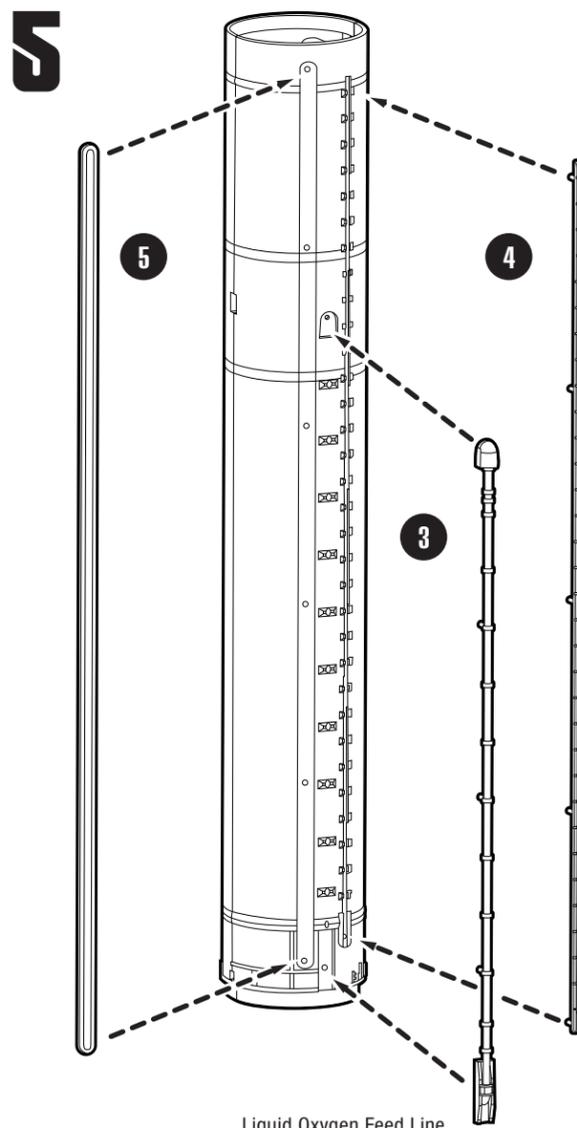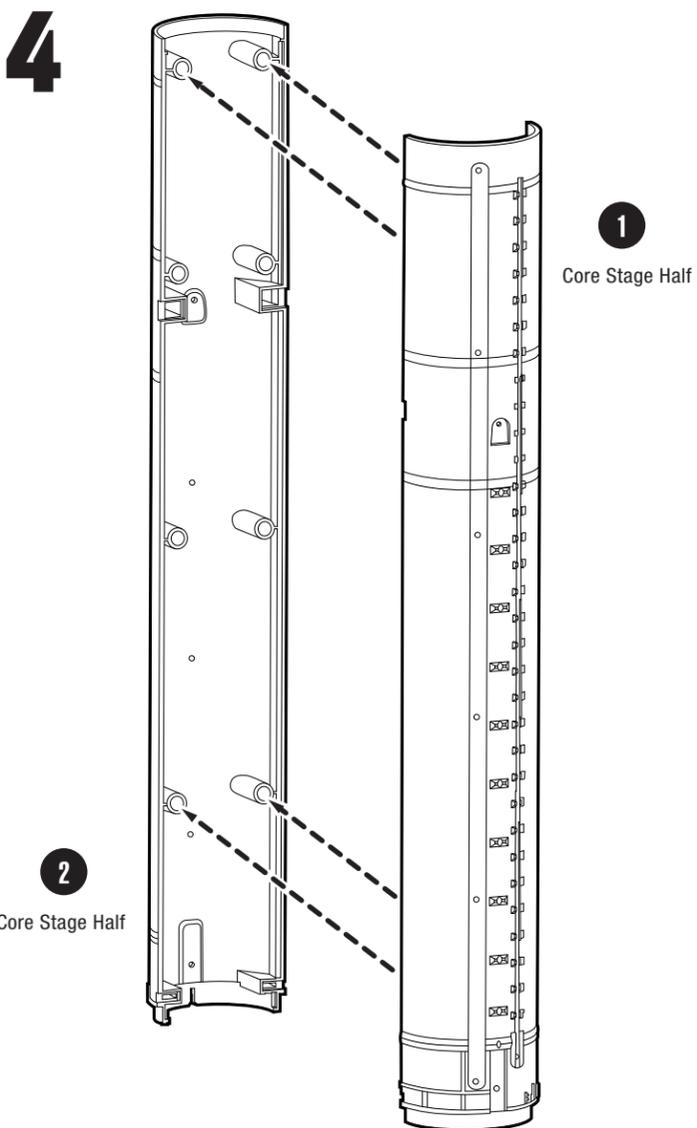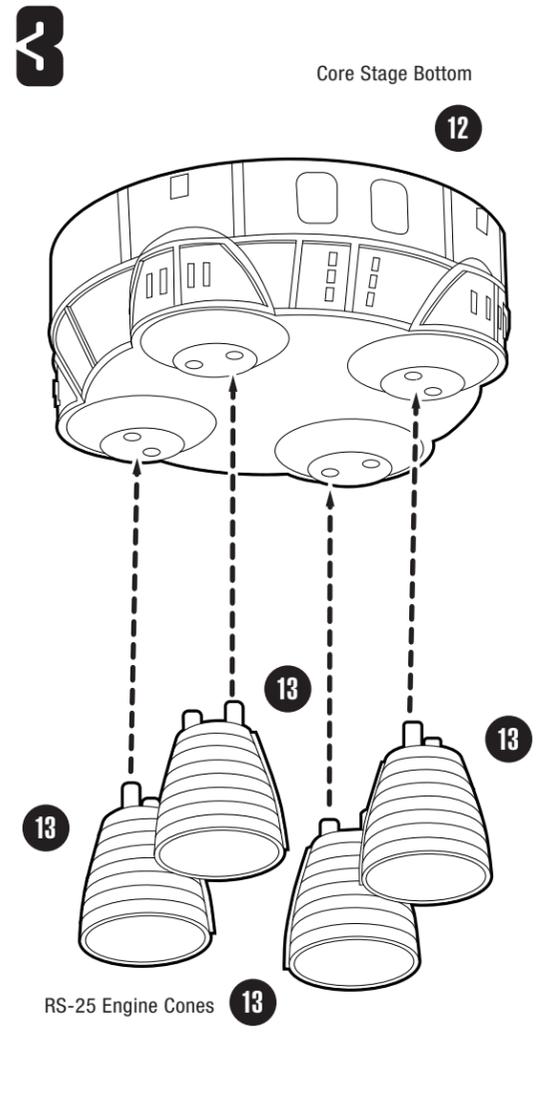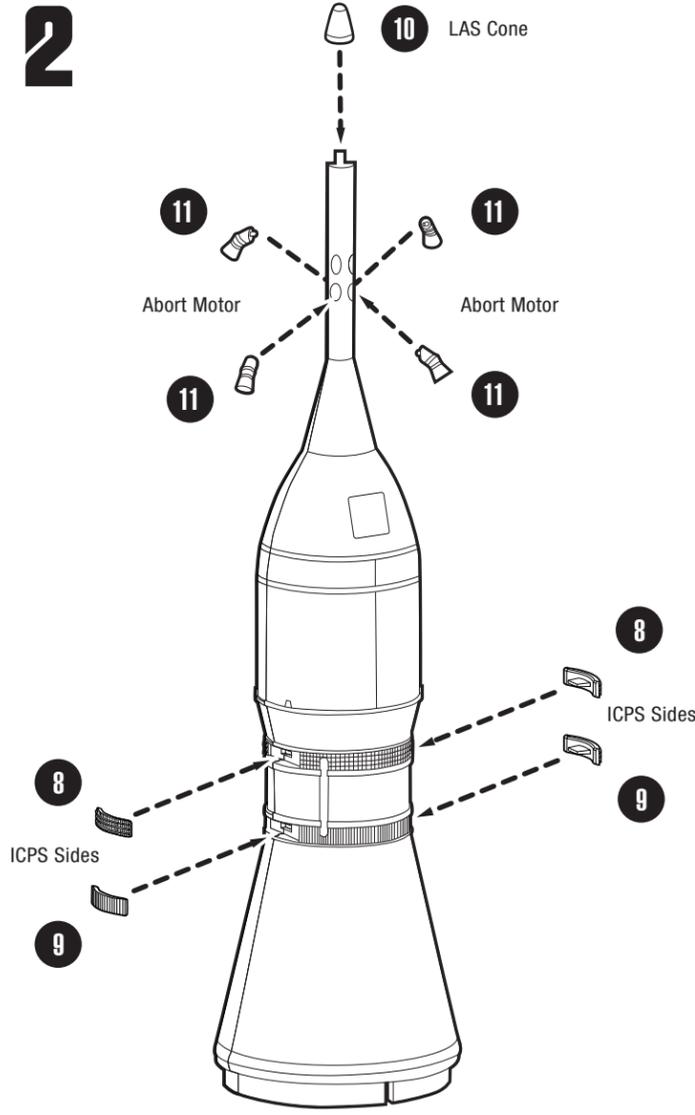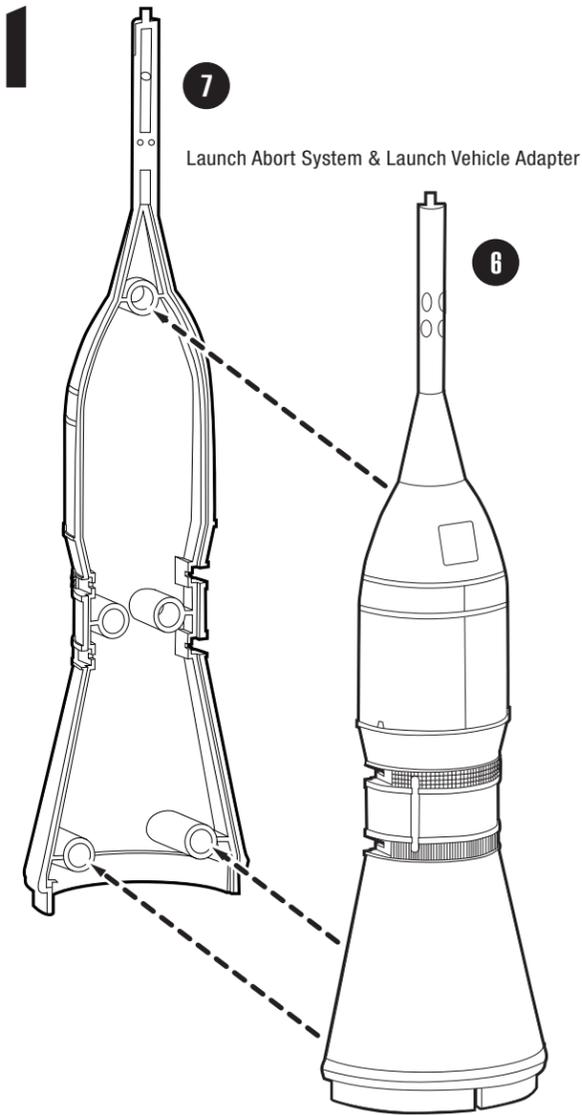

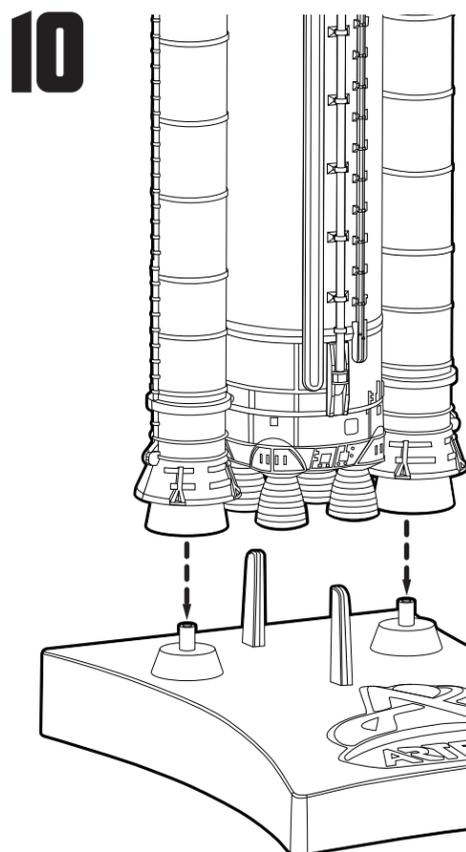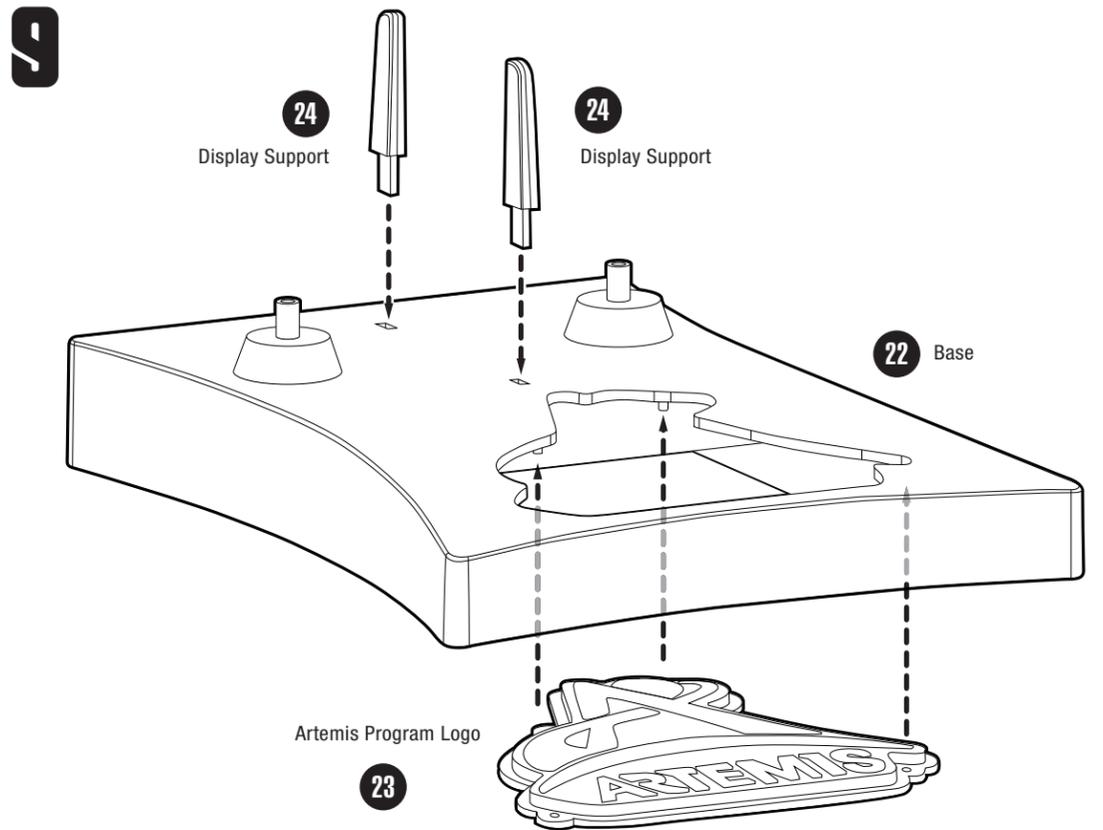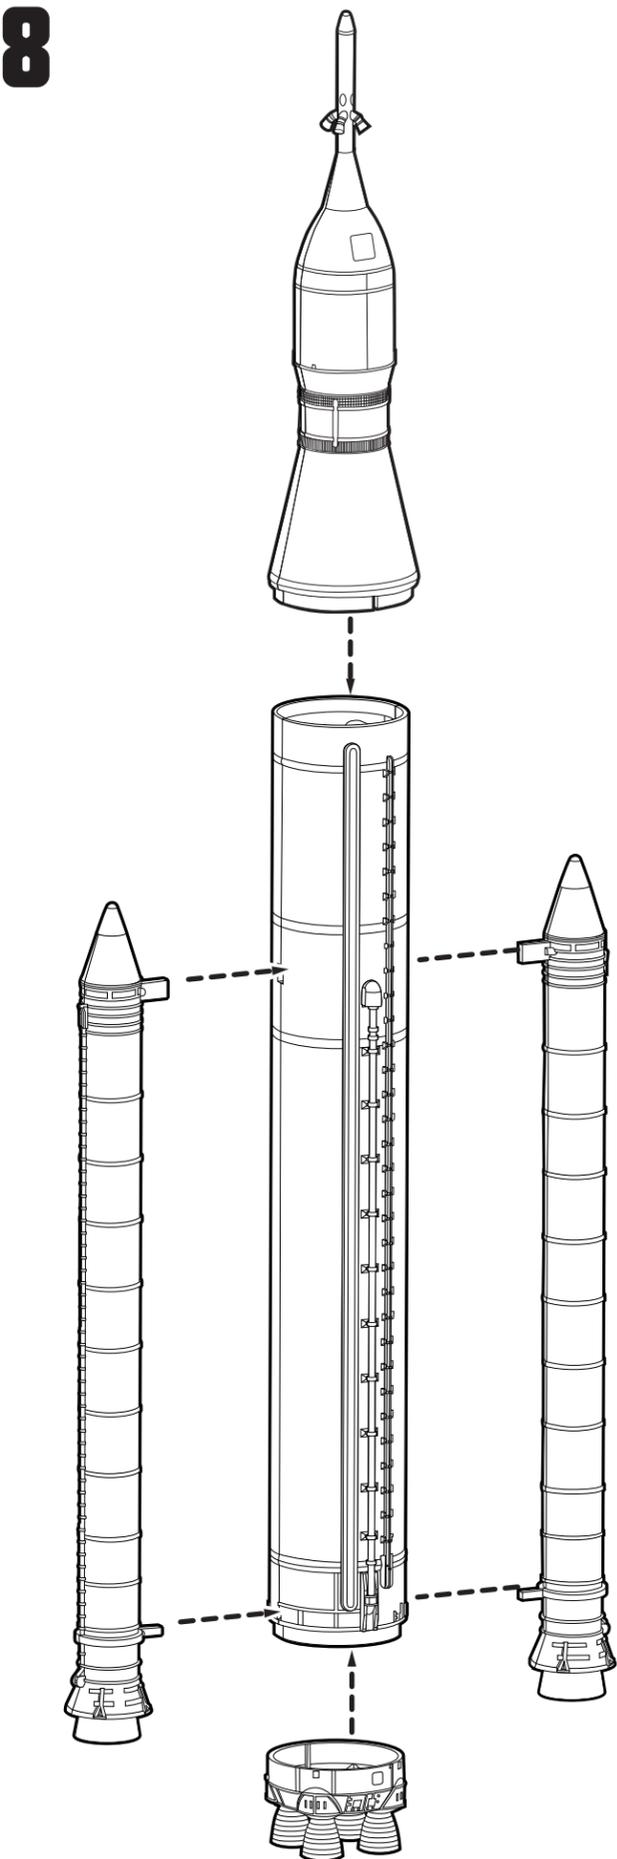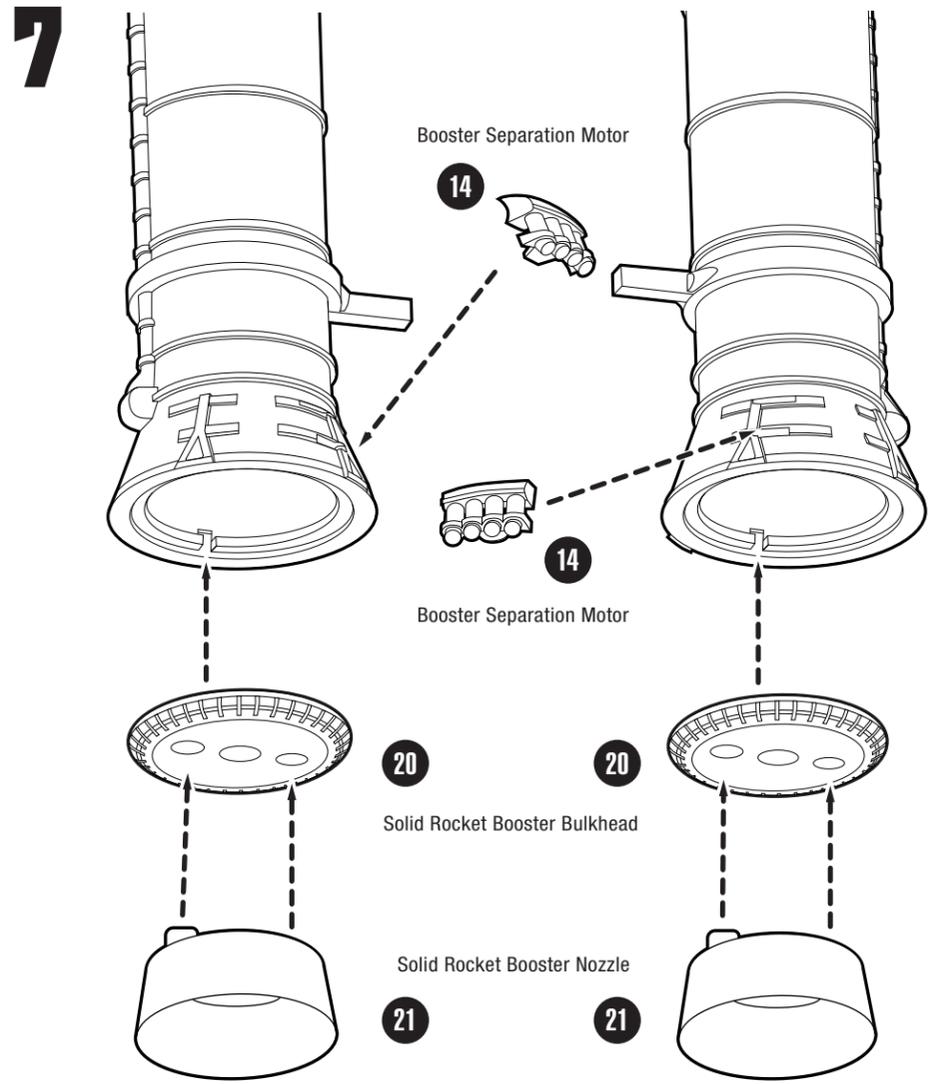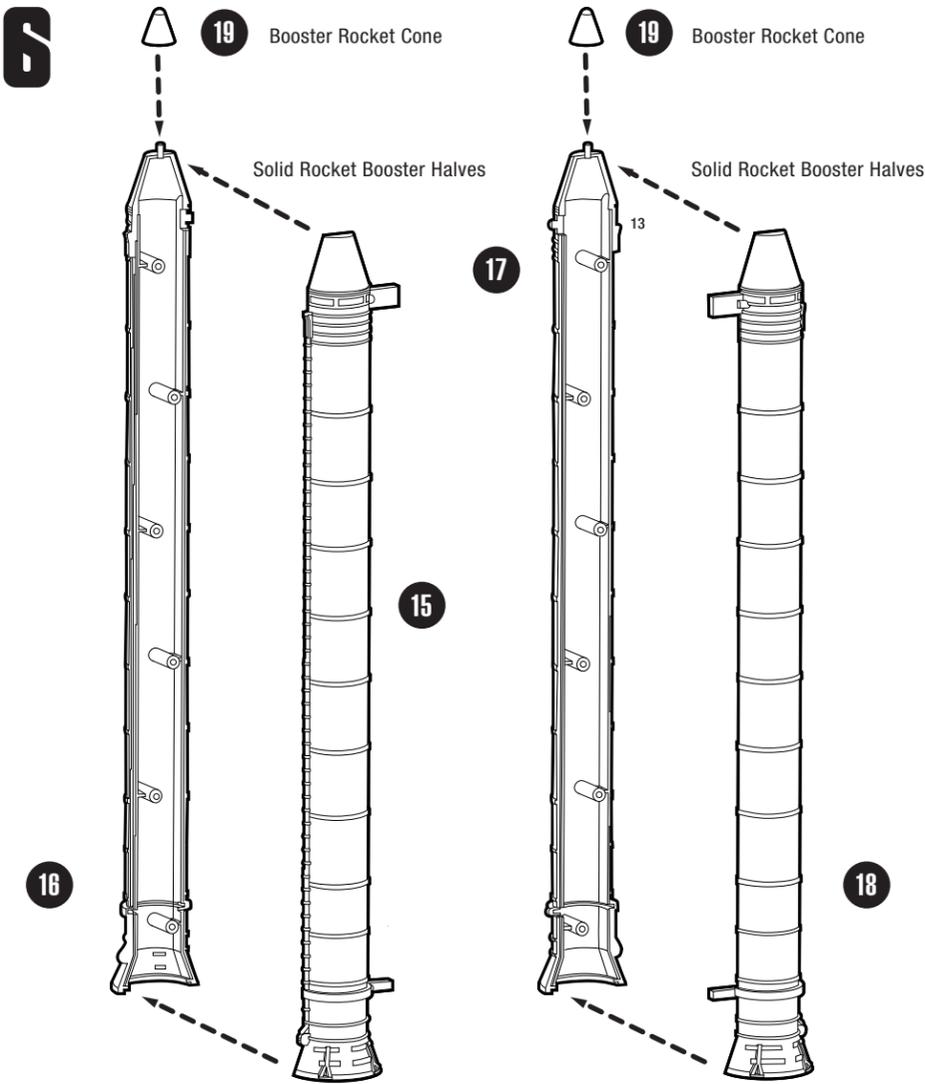

### DECAL APPLICATION INSTRUCTIONS

- Cut decals apart with scissors and/or hobby knife.
- Dip decal into lukewarm water until backing paper is soaked.
- Let sit until decal can slide on backing paper.
- Wet the area of model where decal is to be applied, to aid in positioning.
- Slide decal partly off of backing paper.
- Place decal in location on model face up and slide paper backing away. Blot out excess water, air bubbles, and any excess emulsion with soft, lint-free cloth. Allow time to dry before handling. If air bubbles or wrinkles form on an irregular or curved surface, cut decal and press into place.

### SPECIAL NOTE REGARDING DECALS:

Decals #13 and #28 represent pre-flight panels that were removed before the flight and are included as an option

To use these decals, replace decal #8 at the top of the boosters with #13.

Overlap the black area of decal #41 with #28

Decal #27 is provided for modelers that prefer to paint the lighter orange circles.