



PAINT COLORS

A	Black	I	Steel	Q	Yellow	Y	Dark Green
B	Flat Black	J	Brass	R	Tan	Z	Gray
C	Semi-Gloss Black	K	Gold	S	Brown	AA	Purple
D	White	L	Amber	T	Lt. Blue	BB	Beige
E	Flat White	M	Transparent Amber	U	Med. Blue	BC	Body Color
F	Silver	N	Red	V	Dark Blue	▲	Semi-Gloss
G	Chrome (Bright Silver)	O	Transparent Red	W	Transparent Blue	△	Gloss
H	Aluminum	P	Orange	X	Lt. Green	▲	Metallic

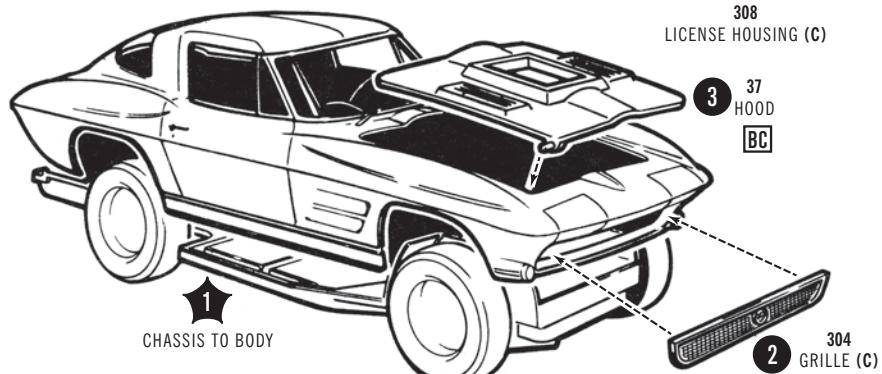

ROD

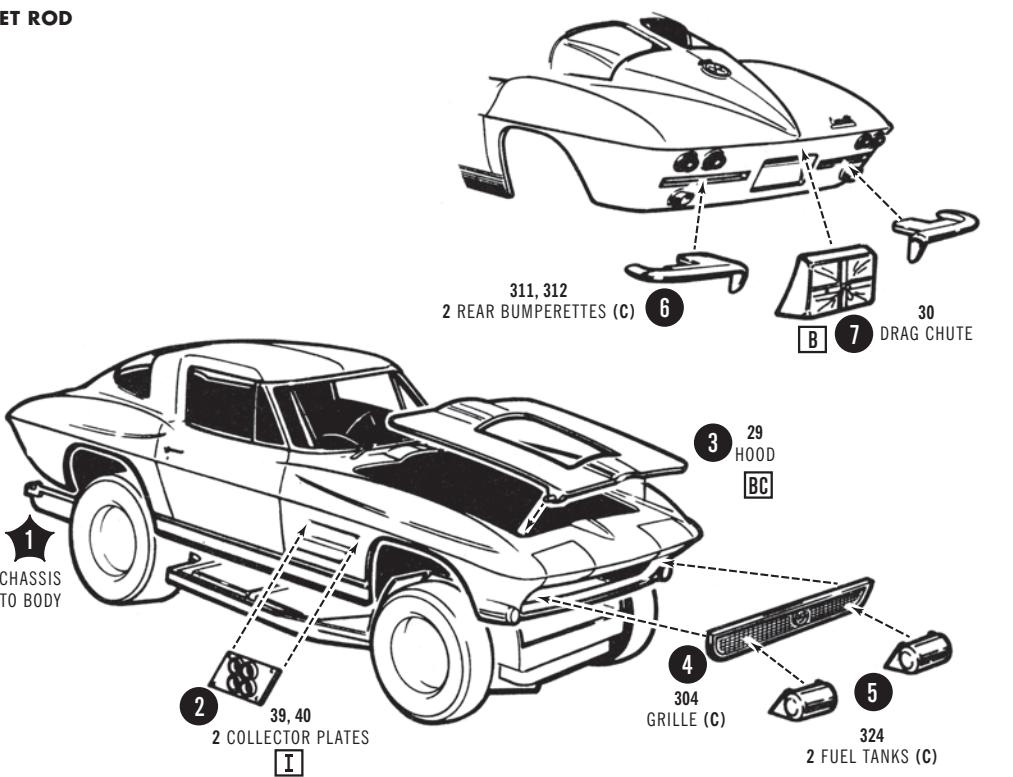

1978 Ford Pickup AMT858/12




51 Chevy Bel Air AMT862/12



    GENERAL MOTORS Trademarks used under license to Round 2, LLC. Goodyear (and wing foot design) and Eagle are trademarks of The Goodyear Tire & Rubber Company, Akron, Ohio USA used under license by Round 2, LLC. Ford Motor Company Trademarks and Trade Dress used under license to Round 2, LLC. www.FordMotorCompany.com. Firestone and F Shield Logo are registered trademarks of BFS Brands, LLC and are used with permission. DODGE and related logos, vehicle model names and trade dress are trademarks of Chrysler Group LLC and used under license by Round 2 LLC. © 2013 Chrysler Group LLC. AMT and design and MPC are registered trademarks of Round 2, LLC. ©2014 Round 2, LLC, South Bend, IN 46628 USA. Product and packaging designed in the USA. Made in China. All rights reserved.



 facebook.com/Bound2Models

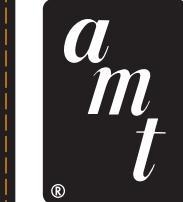

A861-200

•63 CORVETTE® sting ray™



READ THIS BEFORE YOU BEGIN

This kit may be built more than one way. Look over this instruction sheet carefully before you begin building. You may decide to combine parts from the different versions shown, or use parts from other AMT® kits. After you've planned your car, follow the assembly instructions and "TEST FIT" the parts without cementing. This will familiarize you with the location of parts.


For best results, the various sub-assemblies and components should be painted before any "CHROME" parts are attached. For example: When attaching "NON CHROME" engine parts, it is best to cement them in place and paint as a unit. "CHROME" PARTS ARE INDICATED BY (C).

AMT™ kits are molded from the finest high-impact styrene plastic. Use only cement and cement made for styrene. Trim excess plastic from parts before joining. When attaching "CHROME" or painted parts, scrape plating or paint away where parts are to be joined. Cement all parts unless otherwise indicated by the instructions. Use just enough cement to join parts and be careful not to smear cement on exposed surfaces.


Built according to the instructions on this sheet, you should have no trouble assembling your kit. Just follow the numbers as the instructions are numbered in order of assembly.

I. ENGINE

EDCIDE Unless otherwise noted, paint all engine parts orange.

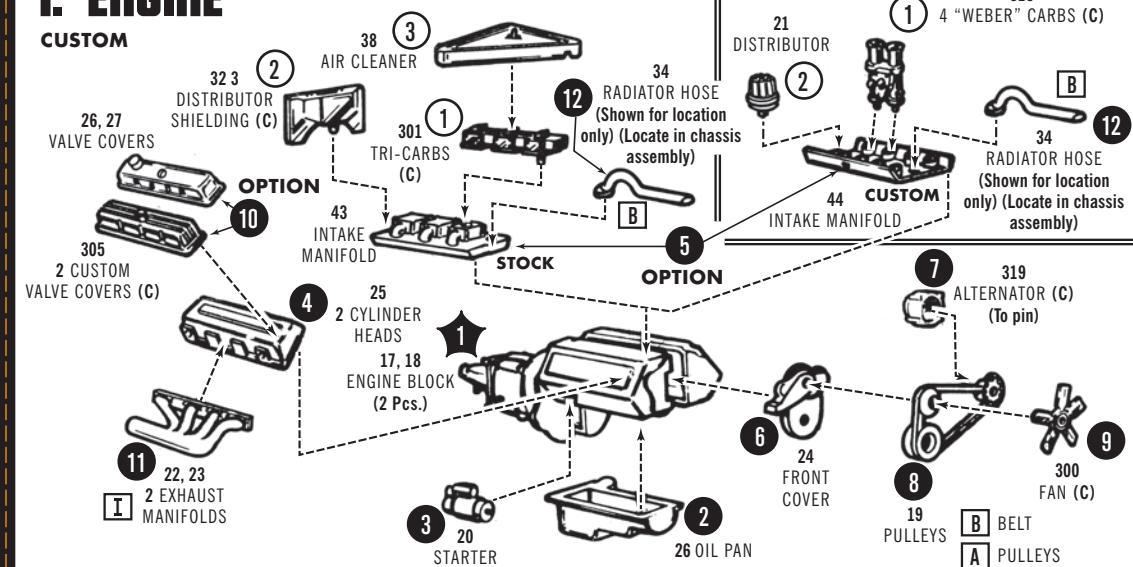


STREET ROD ENGINE

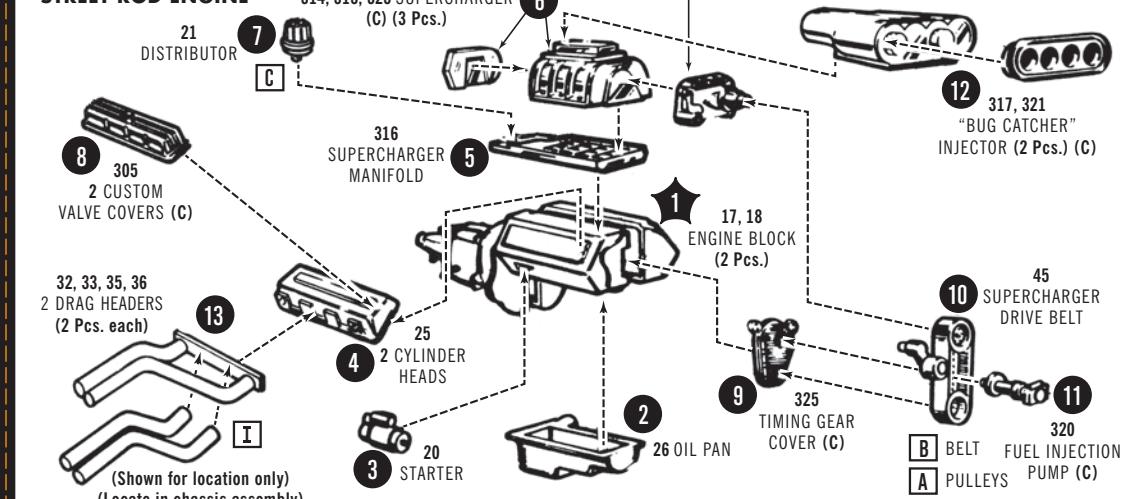


STOCK 327 ENGINE


Unless otherwise noted, paint all engine parts orange.

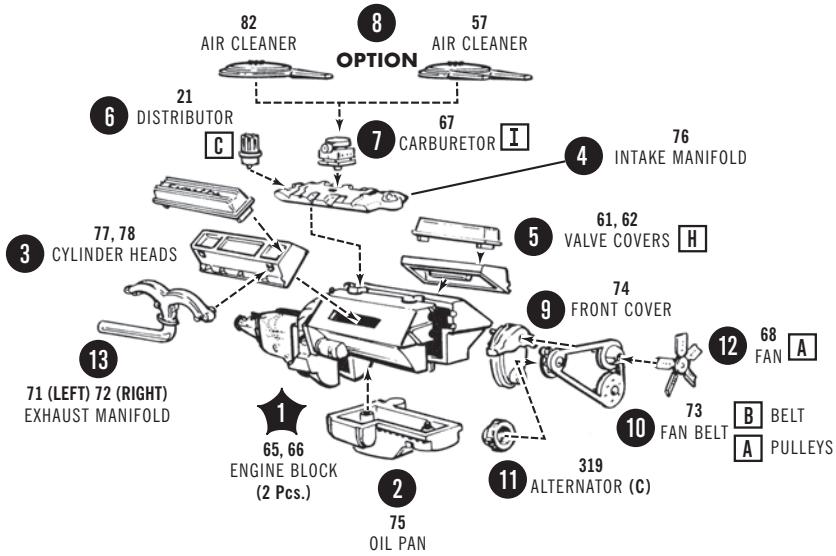


OPTIONAL FUEL INJECTION

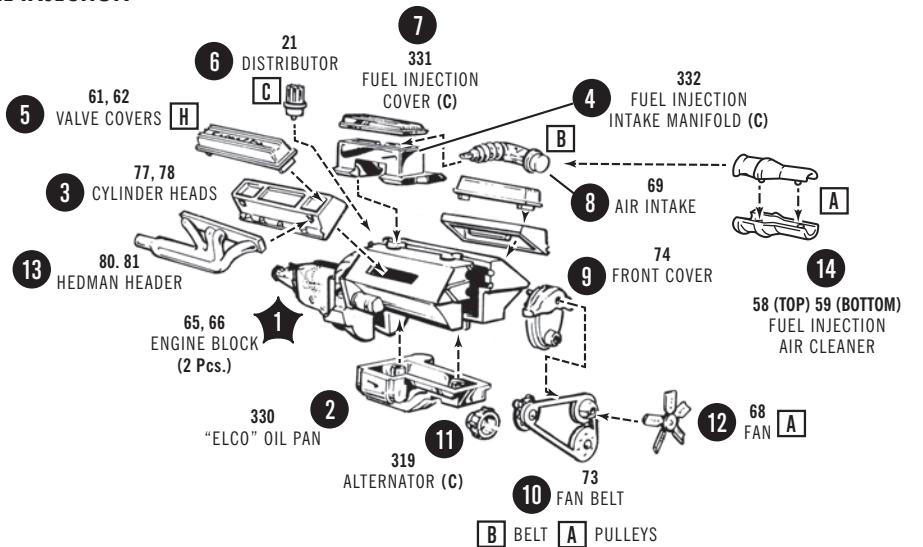


2. WHEELS

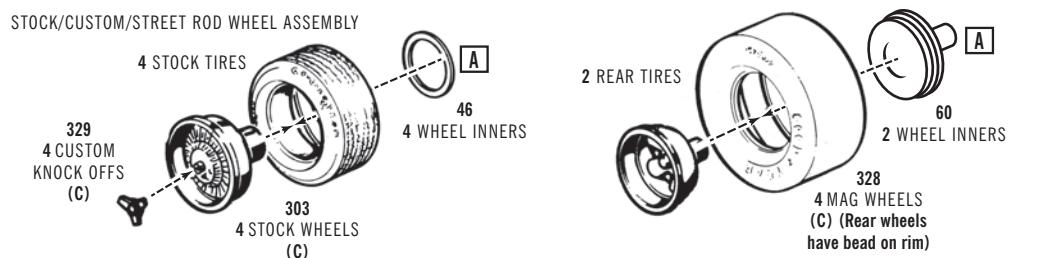


3. CHASSIS AND WHEELS

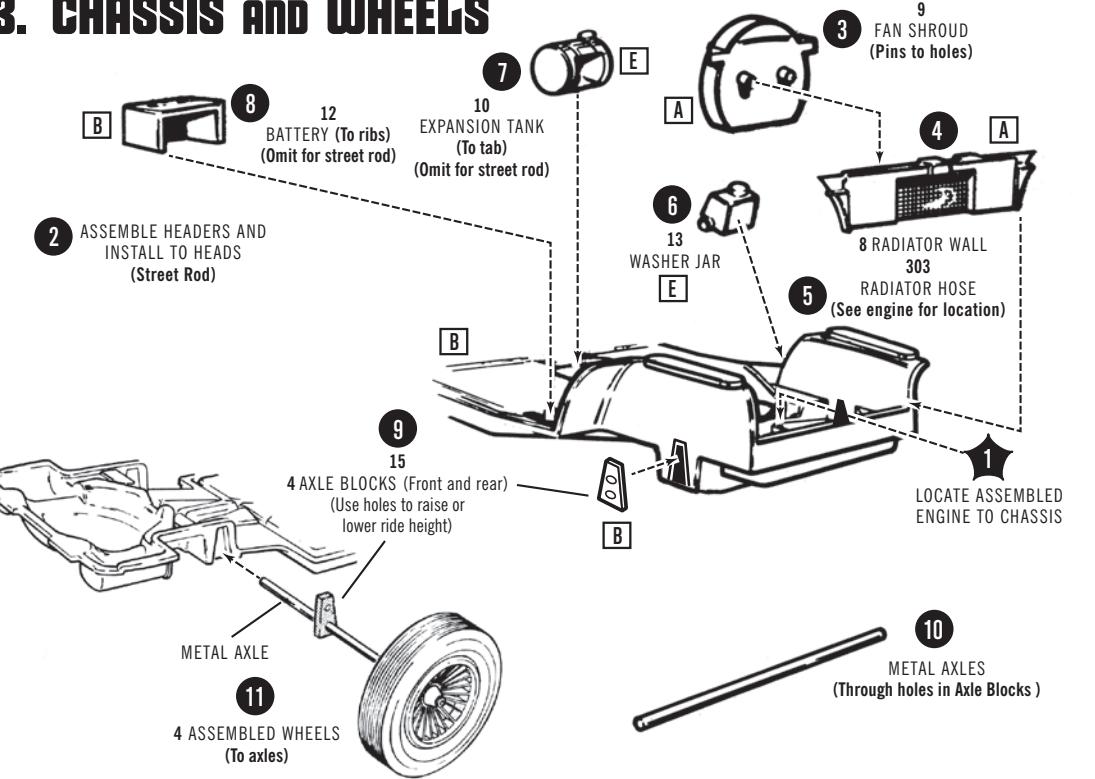

4. INTERIOR

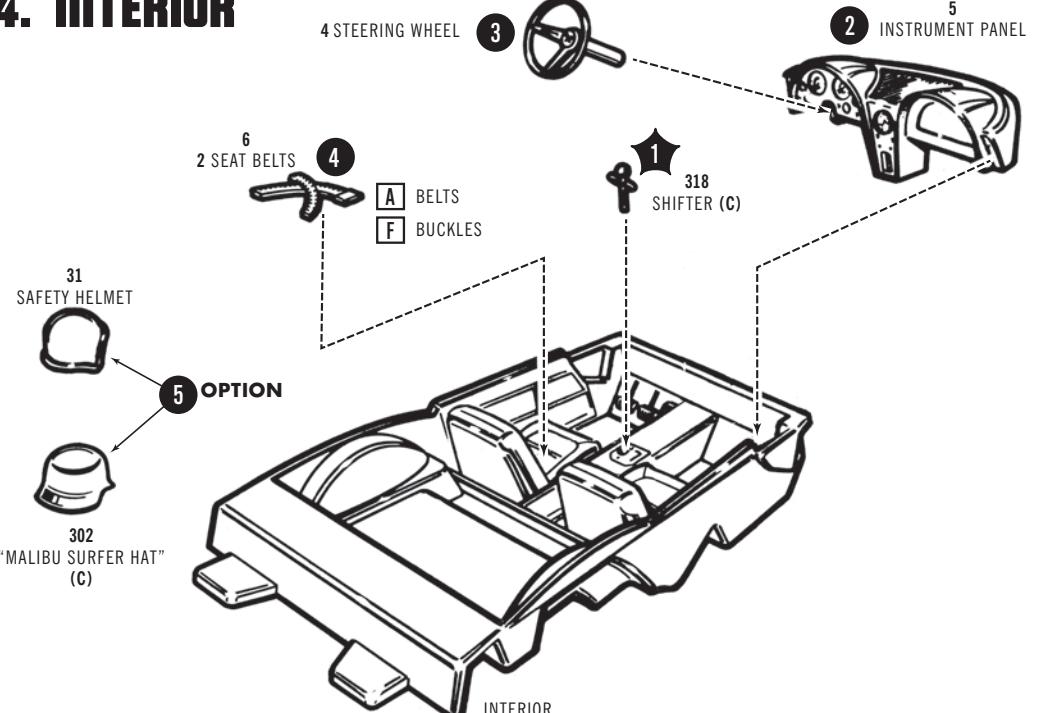

5. BODY

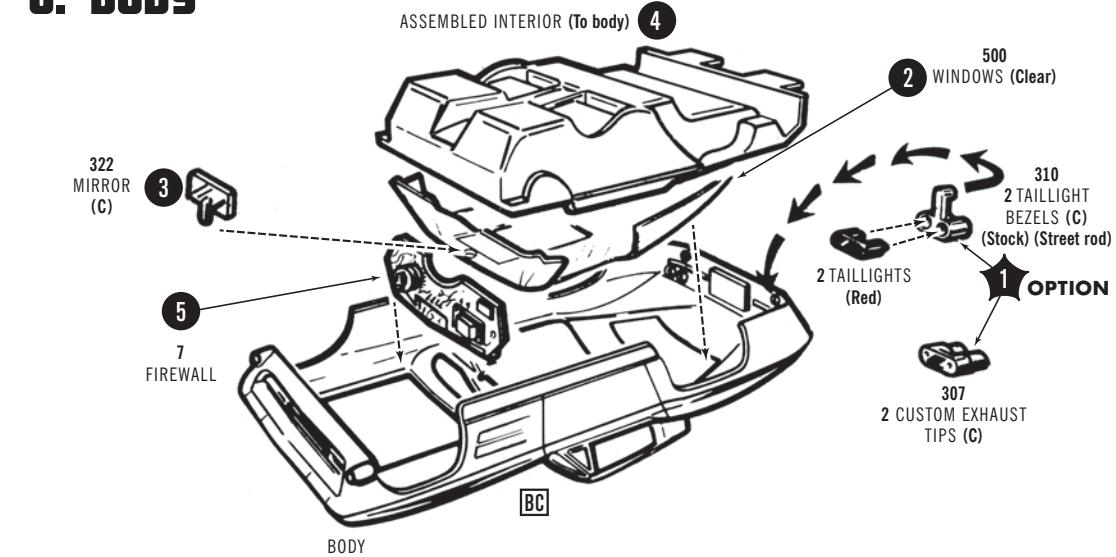

6. FINAL ASSEMBLIES

STOCK

