5. final assembly

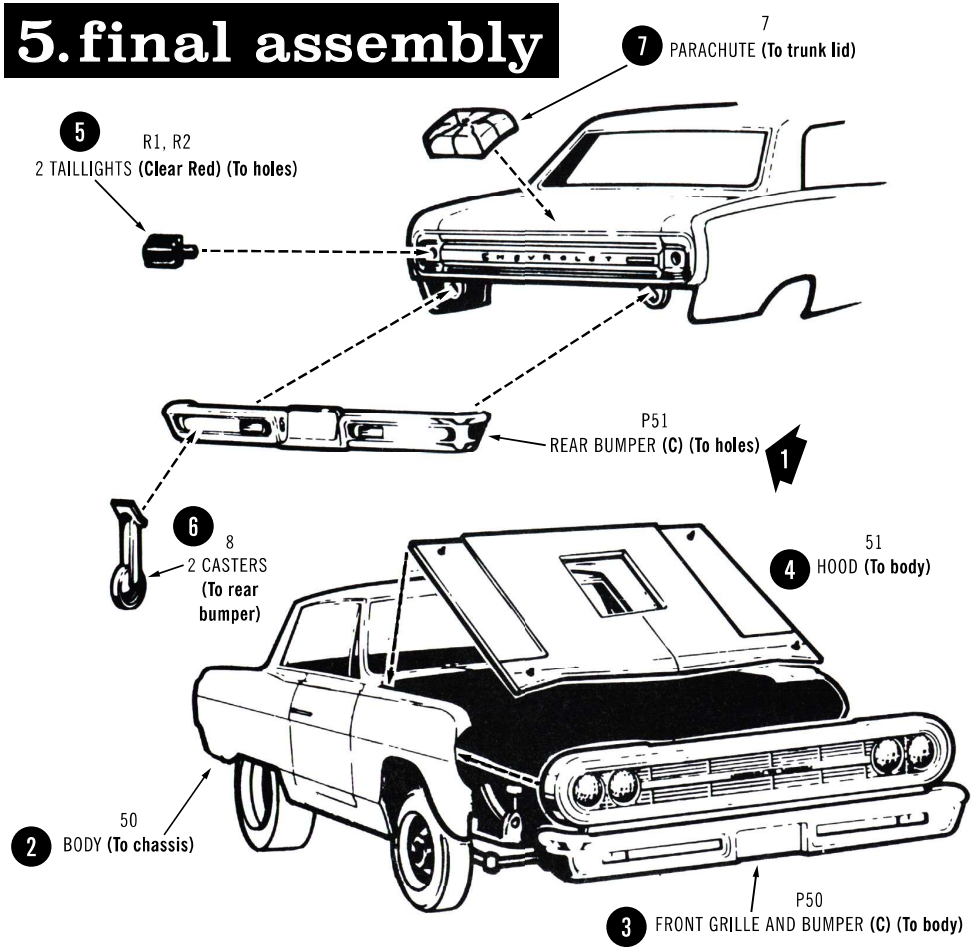

LOCATE DECALS AS SHOWN

LOOK FOR THE BEST FROM AMT!

SEE MORE EXCITING DRAG RACING KITS AT... **round2models.com**

GENERAL MOTORS Trademarks used under license to Round 2, LLC. AMT and design and ROUND 2 and design are registered trademarks of Round 2, LLC. ©2023 Round 2, LLC, South Bend, IN 46628 USA. Product and packaging designed in the USA. Made in China. All rights reserved.

A1302-200

FUNNY CAR CHEVELLE

READ THIS BEFORE YOU BEGIN

Look over this instruction sheet carefully before you begin building. After you've planned your car, follow the assembly instructions and "TEST FIT" the parts without cementing. This will familiarize you with the location of parts.

For the best results, the various sub-assemblies and components should be painted before any "CHROME" parts are attached. For example: When attaching "NON CHROME" body accessories, it is best to cement them in place and paint the body as a unit.

AMT® kits are molded from the finest high-impact styrene plastic. Use only paint and cement made for styrene. Trim excess plastic from parts before joining. When attaching "CHROME" parts, scrape plating away where parts are to be joined. Cement all parts unless otherwise indicated by the instructions. Use just enough cement to join parts and be careful not to smear cement on exposed surfaces.

Built according to the instructions on this sheet, you should have no trouble assembling your kit. Just FOLLOW THE NUMBERS as the instructions are numbered in order of assembly. "CHROME" PARTS ARE INDICATED BY (C).

1. engine

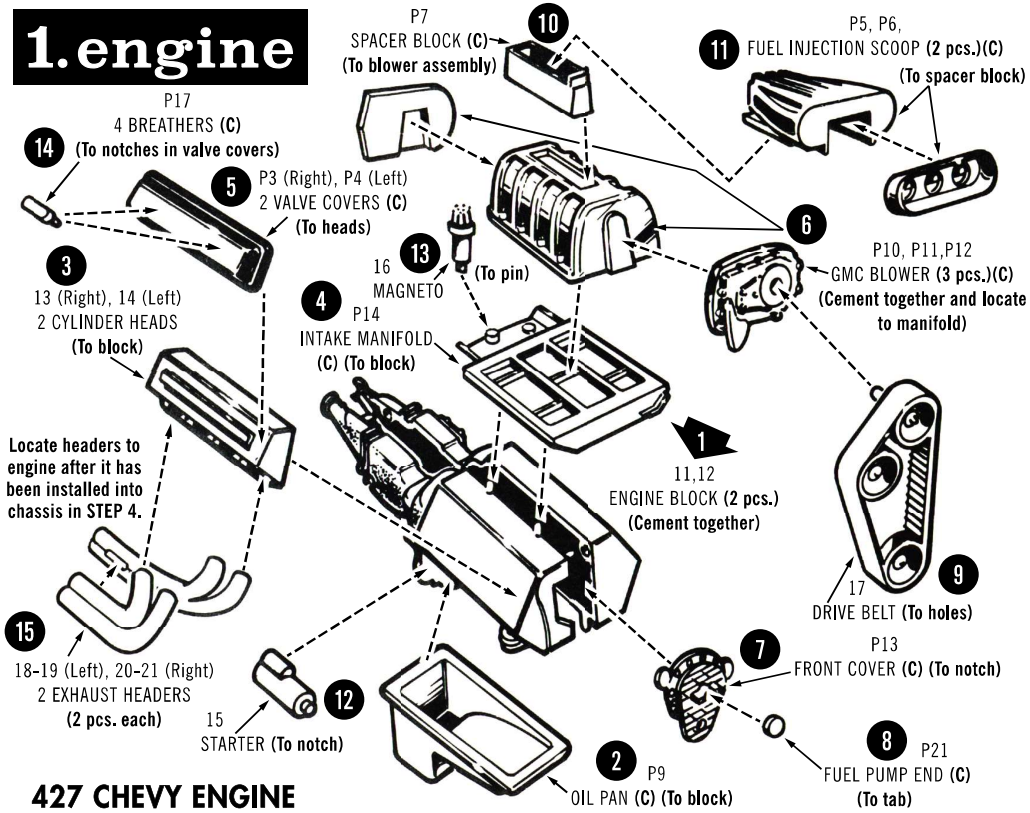

427 CHEVY ENGINE

2. interior

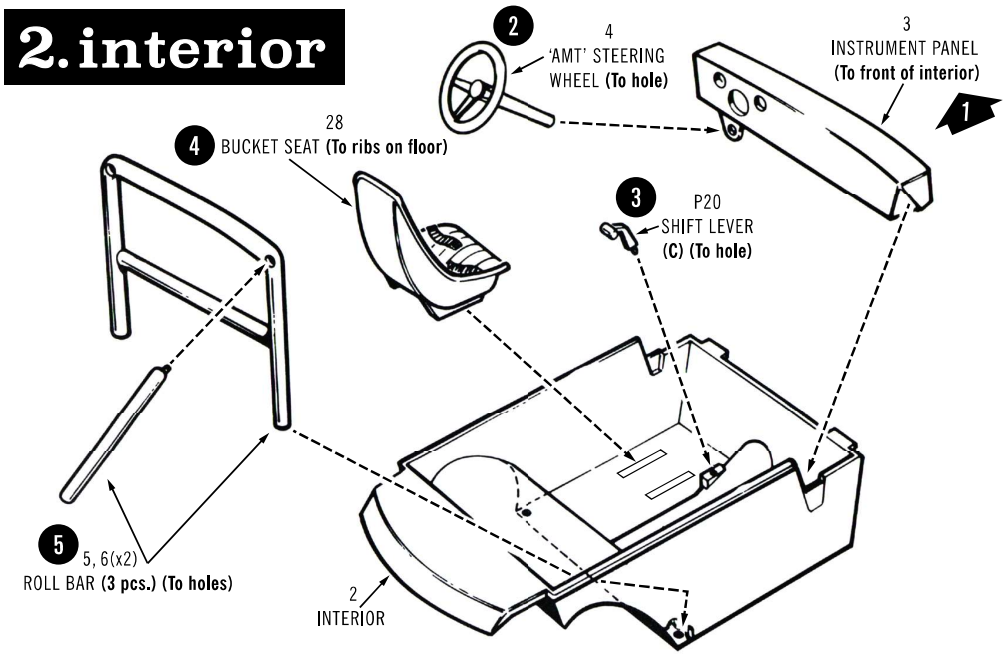

3. body

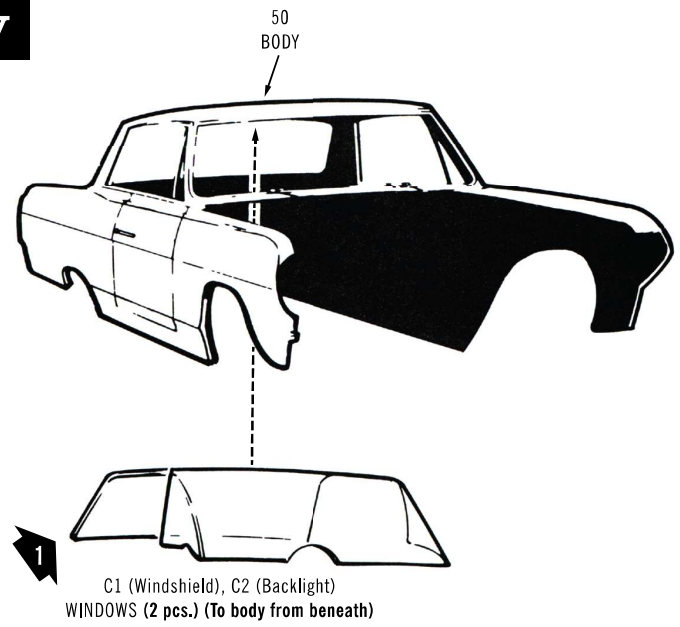
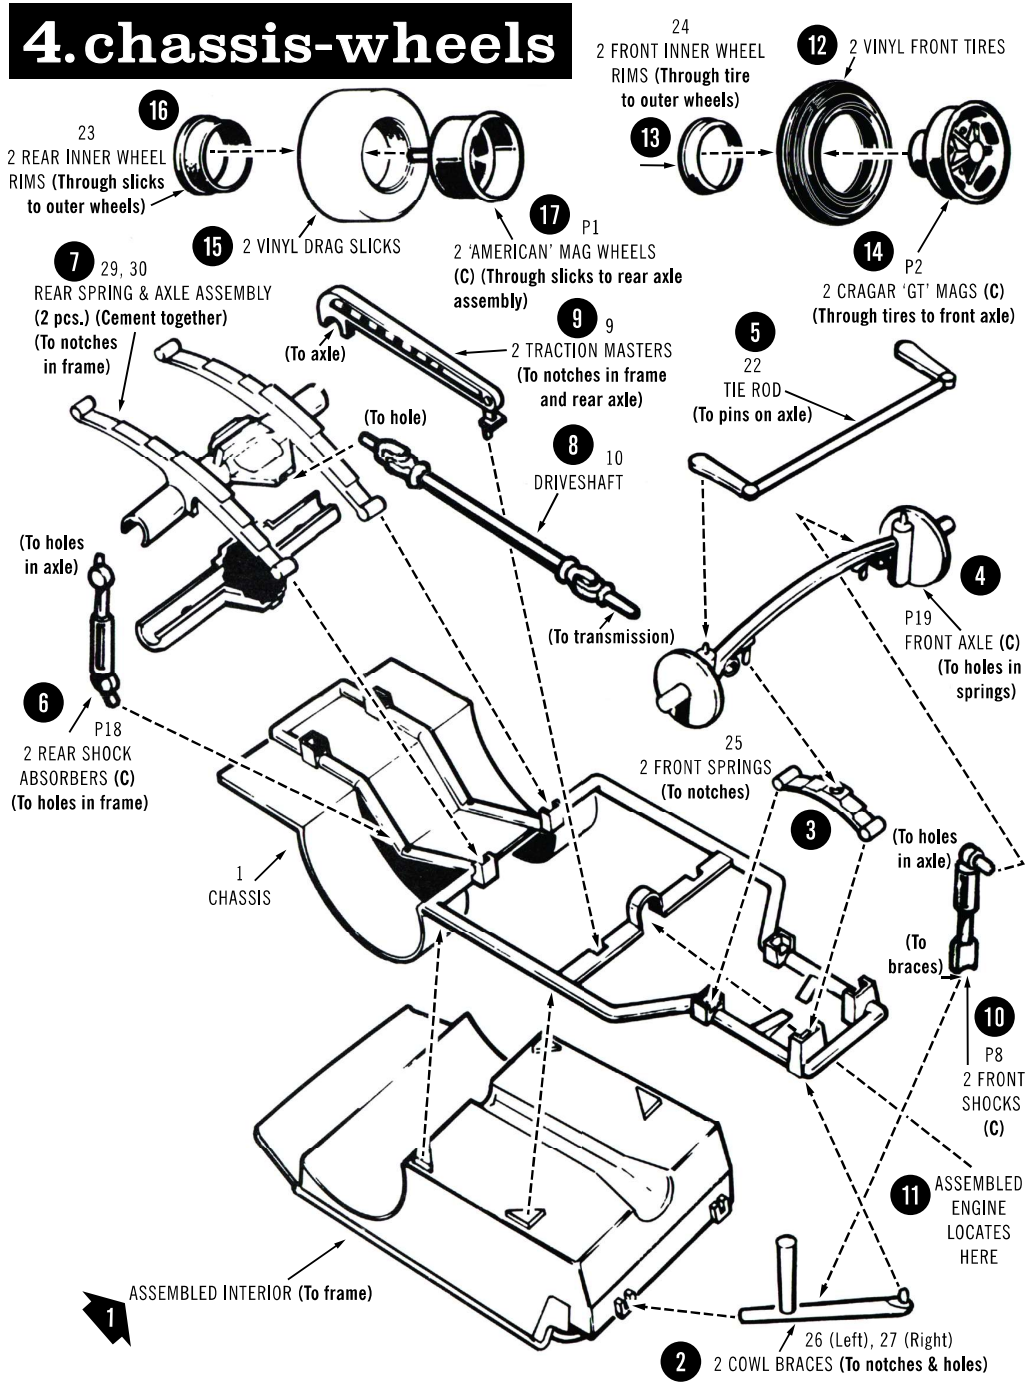
4. chassis-wheels