

by Great Planes®

RIMFIRE

RIMFIRE 63mm POWER SYSTEM






Congratulations, you have just purchased the RimFire 63mm power system components. All the components are sold separately to allow you to customize your power system to your airplane. The components needed to assemble your RimFire 63mm power system are: RimFire 63mm motor, propeller, propeller adapters and brushless speed controls. This instruction sheet explains how to determine what you will need and how to assemble each component.

MOTOR

Model Stock # 63-62-250......GPMG4795

The RimFire motors are labeled to provide the most information at a glance. For example: the 63-62-250kV is 63mm diameter, 62mm long and has a kV (rpm-per-volt) of 250 rpm.

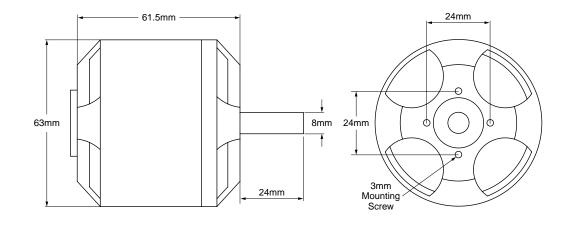

Motor Output Shaft

Diameter and Length: 8x24mm [0.32"x0.96"]

Weight: 628g [25.1oz.]

BRUSHLESS LARGE MOTOR MOUNT



- 1. Front Plate (1)
- 2. Back Plate (1)
- 3. Screw Plate (4)
- 4. 6-32x1/2" SHC Screw (8)
- 5. #6 Flat Washer (8)

The ElectriFly Brushless X-Large Motor Mount combines the ease of installation with the adjustability to fit most motor applications. The Large Motor Mount is designed to fit the bolt pattern of the Great Planes 1.20-1.80 Nylon Engine Mount. This easily allows the conversion of a glow powered plane to electric powered.

PROPELLERS



There is a wide selection of propellers available for electric use. The RimFire 63mm motor uses high performance electric props such as the APC E-series props. The larger the propeller used, the more current your motor will draw. The smaller the propeller, the less current the motor will draw.

Shown are a few of the recommended electric props. Due to the large range of propellers and the constant addition of new sizes, visit our web sites at www.electrifly.com and www.greatplanes.com for the most up-to-date listing of electric type props.

APCQ180618x6W Electric APCQ402118x8 Electric APCQ402720x8 Electric APCQ402820x10 Electric

ELECTRONIC SPEED CONTROL (ESC)

An ESC is basically the device that controls your motor through your radio system. Never run any RimFire motors with a brushed ESC. It will not work and you may damage both the motor and the ESC. Always use a brushless ESC. ElectriFly offers the Silver Series SS-80 Brushless ESCs (GPMM1860) that works well with the RimFire 50mm motors.

The SS-80 ESC comes with 4mm female bullet connectors that plug directly into the 4mm male connectors installed on the RimFire 50mm motors, so no soldering is required. Also, this ESC comes with a Deans Ultra battery connector that matches the connectors that are found on most batteries that it will use.

BATTERIES: CHEMISTRY

The RimFire Motor/Silver Series ESC combination can use NiMH or LiPo batteries. Typically, NiMH batteries are heavier but much more affordable for the same capacity as LiPo batteries. If you want a very light, high-performance airplane, you might want to use LiPo batteries, but if weight is not a concern, then NiMH batteries might be for you.



BATTERIES: NUMBER OF CELLS

Cells can be connected in series or in parallel. Usually batteries are labeled as 8-cell NiMH or 3-cell LiPo. This means the cells are connected in SERIES (S). Arranging batteries in series gives you more power (higher voltage).

- Each NiMH cell has 1.2V, so an 8-cell NiMH battery has 1.2x8 = 9.6V
- Each LiPo battery has 3.7V, so a 3-cell LiPo battery has 3.7x3 = 11.1V

If you need a higher voltage than what is available in the LiPo battery line, you will need to connect two battery packs together in series. If you need a battery voltage of 14.8V you can use the **Series Y-Connector (GPMM3143)** to connect two 7.4V batteries together.

If a battery is arranged in PARALLEL it might be labeled as (P). Arranging the batteries in parallel will give you more duration (more capacity).

All LiPo batteries have a rated discharge that must not be exceeded or the battery will be damaged. They may say 15C max. discharge rate or 20C max. discharge rate. This means that the discharge rate (current draw of the motor) must not be more than 15 or 20 (15C or 20C) times the capacity of the battery. The capacity is expressed in milliamp hours (2100mAh). It can also be expressed in amp hours (2.1 Ah).

A LiPo battery with a capacity of 2100mAh with a 20C discharge rate can be discharged at 42 amps, 2.1Ahx20C = 42 amps. If the power system draws more than 42 amps, the batteries

will have to be connected in parallel to increase the capacity. Two 2100mAh batteries in parallel have a capacity of 4200mAh or 4.2Ahx20C = 84 amp discharge rate.

ElectriFly offers a full line of NiMH and LiPo batteries. Airplanes that use the RimFire 63mm motors will typically use batteries with a capacity of 2000 to 3600mAh with the higher capacity batteries delivering more flying time but also being heavier. All of the batteries have connectors that fit the recommended ESCs.

Due to the constantly changing battery technology, check out the ElectriFly web site at **www.electrifly.com** for the most up-to-date listing of the ElectriFly battery line.

Stock #	<u>Voltage</u>	Capacity	<u>Weight</u>	Battery <u>Type</u>	# of <u>Cells</u>
GPMP0616	7.4V	2100mAh	4.3oz (121g)	LiPo	2
GPMP0617	11.1V	2100mAh	6.4oz (181g)	LiPo	3
GPMP0622	7.4V	3200mAh	6.3oz (179g)	LiPo	2
GPMP0623	11.1V	3200mAh	9.5oz (269g)	LiPo	3
GPMP0350	7.2V	2000mAh	8.5oz (240g)	NiMH	6
GPMP0351	8.4V	2000mAh	12.2oz (345g)	NiMH	7
GPMP0352	9.6V	2000mAh	13.7oz (390g)	NiMH	8
GPMP0353	12V	2000mAh	16.7oz (475g)	NiMH	10
GPMP0361	8.4V	3600mAh	17.5oz (497g)	NiMH	7
GPMP0362	9.6V	3600mAh	19.9oz (564g)	NiMH	8
GPMP0363	12V	3600mAh	24.8oz (702g)	NiMH	10
GPMP0364	14.4V	3600mAh	29.6oz (840g)	NiMH	12

DETERMINE WHAT YOU NEED TO BUILD YOUR POWER SYSTEM

Now that you have a component for your power system, there are several different ways to select the rest of the components of your power system. In time, experience will help you to determine what works best for you, but an easy way to determine what you need now is the following.

If you know the approximate weight of your airplane, including the motor and battery, and the performance you want from it, answer the questions below to determine the correct power system for your plane. You may need to make more than one calculation using different motors and battery combinations. See the battery section for some of the battery weights for the suggested batteries.

- □ 1. Perform the following calculation to determine the wattage required:
 - If you expect trainer-like performance, then multiply 75 x Airplane Weight (lbs)
 - If you expect aerobatic or high speed-like performance then multiply 100 x Airplane Weight (lbs)
 - If you expect 3D or extreme performance multiply 150 x Airplane Weight (lbs)
- 2. The number you get is the minimum wattage you will need for your plane to perform as you wish. Look at the chart and determine what combination gives you the performance you want based on wattage and maximum propeller size that will fit on the plane.
- □ 3. Note the recommended battery voltage.
- 4. Determine if you want to use LiPo or NiMH batteries based on the desired ready to fly airplane weight. Select the number of cells based on the recommended voltage shown in the chart.
- □ 5. Determine the battery capacity needed based on the current draw of your system and your desired flight time.
- 6. Determine the ESC you need based on the system current draw.

In addition to these two procedures, you can also visit the Great Planes ElectriFly web site for descriptions of the power systems recommended for our line of electric and glow airplanes as well as more detailed explanation on the subject.

UNDERSTANDING MOTORS

kV (rpm/volt): This is a number that gets thrown around quite a bit when talking electrics and it is important to know what it is. kV is the number of rpm a motor will spin per each volt applied (rpm/volt) under no load.

This means that basically a motor that has a kV of 1000 when connected to a 12V battery will try to spin at 12,000rpm (1000x12) under no load. Likewise a 3500kV motor will try to spin at 42,000rpm (3500x12) under no load.

When a propeller is attached to the motor, the motor will try to spin the prop at the rated kV. Depending on the diameter and pitch of the propeller (the larger the diameter or higher the pitch, the harder it is to spin), the motor's current draw can be increased or decreased. There are meters available from your hobby dealer that measure current and voltage.

Because every motor has a maximum current it can take based on its design and cooling ability, the maximum size of propeller that can be used with each motor can be determined. Too large of a propeller and the motor will spin at a much lower rpm than its rated kV, causing it to draw a lot of current and overheat. If the propeller/fan is too small, it will require little effort (current) to turn the prop at the rated kV.

Ideally the motor should be matched with a propeller that causes the motor to draw 80-100% of its rated maximum constant current. Once a power system is set up, it can be fine-tuned by adjusting the propeller size and measuring the amount of current the motor is drawing.

Please note that the kV of a motor does not change with voltage, but if a higher voltage is applied to the motor, it will try to spin the same propeller at a higher rpm. This will cause the motor to draw more current and possibly exceed the maximum rated current of the motor. So, if a battery with lower voltage is replaced with one with a higher voltage, it is recommended that a smaller propeller be used to keep the current in check. If a higher voltage battery is replaced by a lower voltage battery, the size of the propeller can be increased to keep the motor at its rated current.

Another possibility to fine tune the power system's performance is to use another motor with higher kV to increase the current or a lower kV to lower the current.

ASSEMBLE YOUR POWER SYSTEM

To determine the best mounting system, the distance from the firewall to the front of the prop adapter first needs to be determined. It can be mounted directly to the firewall using the RimFire aluminum mounting plate (included with the motor) or the ElectriFly X-Large Motor Mount (GPMG1265) which replaces the Great Planes 1.20-1.80 nylon engine mount. Check the airplane instruction manual for the correct distance from the firewall to the front of the prop adapter. The photos below show the distances from the firewall to the front of the prop adapter using the different mounting systems.





On the header card, you will find the mounting hole pattern template for the Brushless X-large Motor Mount and RimFire mounting plate. If you are replacing a glow engine with an electric motor system, remove the nylon engine mount and replace it with the X-Large Motor Mount or RimFire mounting plate, using the same bolts to attach it to the firewall. If the firewall has not been drilled for an engine mount and blind nuts, use the mounting template to locate the mounting holes. Drill the four mounting holes and install 8-32 blind nuts from the back of the firewall.

MOUNTING PLATE INSTALLATION

If attaching the motor to the firewall using the adjustable motor mount, skip to the *Adjustable Motor Mount Installation*.

Note: Apply a drop of **Threadlocker (GPMR6060)** to all bolts and screws used to install the motor on the plane.



Attach the backplate to the motor using four 3x10mm flat head machine screws.




Mount the aluminum prop adapter to the motor case using four 3x10mm SHC screws.



Slide the 8mm spacers, included with the motor, and the brass collar on the motor shaft. Tighten the set screw in the brass collar making sure the collar does not rub on the firewall. The brass collar prevents the motor from coming apart if the c-clip comes off the motor shaft.

ADJUSTABLE MOTOR MOUNT INSTALLATION

Note: Apply a drop of **Threadlocker (GPMR6060)** to all bolts and screws used to install the motor on the plane.

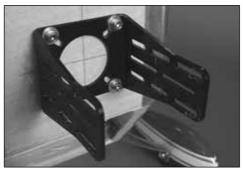

Attach the Backplate of the motor mount to the firewall using four 8-32 machine screws and four #8 flat washers.



Mount the 63mm RimFire motor to the front of the motor mount front plate using four 3mm machine screws and four 3mm flat washers.



Remove the c-clip from the motor shaft. Slide the 8mm spacers, included with the motor, and the brass collar on the motor shaft. Tighten the set screw in the brass collar making sure the collar does not rub on the motor mount.



Mount the aluminum prop adapter to the motor case using four 3x10 mm SHC screws.



Position the motor/front plate assembly over the backplate. Measure the distance from the firewall to the front of the prop adapter Attach the front plate of the motor mount to the back plate using the eight 6-32x1/2" SHC screws, eight #6 flat washers and four aluminum screw plates, spaced out as far as possible.

INSTALL THE BRUSHLESS ESC

Because most of the motor/prop combinations using the 63mm RimFire motor draw 45 amps continuous and 70+amps surge, the ElectriFly SS-80 Brushless ESC (GPMM1860) is recommended. Because of the high current draw always make sure that the ESC is positioned so that it gets some cooling air flowing over it. See the chart on the header card for the current draw of some of the motor/prop combinations that have been tested.

Use the instructions included with the ESC to correctly connect the ESC. $\,$

RIMFIRE MOTOR MAINTENANCE

RimFire brushless motors require virtually no maintenance. There are no brushes to wear out and replace. The precision bearings have a very long service life and should last a long time. The internal parts of the motor should not require any cleaning. The only thing that needs to be checked is to make sure all the screws and set screws remain tight.

IMPORTANT PRECAUTIONS

- Once the battery is connected to the ESC, stay clear of the motor and prop.
- DO NOT apply an input voltage that exceeds the maximum specification of each motor.
- DO NOT apply currents to the motor that exceed the maximum specifications of each motor.
- DO NOT allow the input connectors to accidentally touch each other while power is applied to the motor. Make sure all input connections are insulated electrically.
- DO NOT allow water or moisture to enter the motor, as it can cause permanent damage to the motor and possibly short out the attached ESC.
- DO NOT cut the coated wires from the motor. If you must remove the bullet connectors, unsolder them.
- Allow the motor to cool after each flight.
- The motor shaft of the motor will rotate at very high rpm.
 DO NOT attempt to touch the shaft while it is rotating. If setting up the motor/ESC on the workbench, make sure the motor is securely attached and that nothing is attached to the motor shaft BEFORE applying power.
- Never attempt to use a damaged motor (having mechanical or electrical defects).
- ElectriFly carries a complete line of Ammo (in-runner style) and RimFire (out-runner style) brushless motors, gear drives, motor mounts, prop adapters and speed controls. For a complete list of these products, check out our web site at:

www.greatplanes.com www.electrifly.com

or visit your nearest hobby shop that carries the full line of Great Planes and ElectriFly products.